



Washing Machine

User Manual



B5W5941DW

2820530717/ EN/ / 22/08/2023 10:54



Table of Contents

1 Safety Instructions.....	4	6.1 Control Panel.....	20
1.1 Intended Use.....	4	6.2 Symbols on the Display.....	21
1.2 Safety of Children, Vulnerable Persons and Pets.....	4	6.3 Programme and Consumption Table.....	22
1.3 Electrical Safety.....	5	6.4 Programme Selection.....	24
1.4 Handling Safety.....	5	6.5 Programmes.....	24
1.5 Installation Safety.....	6	6.6 Temperature Selection.....	28
1.6 Operational Safety.....	7	6.7 Spin Speed Selection.....	28
1.7 Maintenance and Cleaning Safety.....	8	6.8 Auxiliary Function Selection.....	29
2 Important Instructions for Environment.....	9	6.8.1 Auxiliary Functions.....	29
2.1 Compliance with WEEE Directive.....	9	6.8.2 Functions/Programmes Selected by Pressing the Function Keys for 3 Seconds.....	31
2.2 Package Information.....	9	6.9 End Time.....	32
3 Technical Specifications.....	10	6.10 Starting the Programme.....	33
4 Installation.....	11	6.11 Loading Door Lock.....	33
4.1 Appropriate Installation Location.....	11	6.12 Changing the Selections After Programme has Started.....	34
4.2 Assembly of Bottom Panel Covers.....	11	6.13 Cancelling the Programme.....	34
4.3 Removing Transportation Safety Bolts.....	12	6.14 End of Programme.....	35
4.4 Connecting to Water Supply.....	12	6.15 HomeWhiz Feature and Remote Control Function.....	35
4.5 Connecting the Drain Hose to the Drain.....	13	6.15.1 HomeWhiz Setup.....	35
4.6 Adjusting the Stands.....	13	6.15.2 Setting up a Washing Machine Connected to Someone Else's Account.....	37
4.7 Electrical Connection.....	13	6.15.3 Remote Control Function and Using It.....	37
4.8 Start Up.....	14	6.15.4 Troubleshooting.....	38
5 Preliminary Preparation.....	14	6.16 Drum Illumination.....	38
5.1 Sorting the Laundry.....	14	7 Maintenance and Cleaning.....	38
5.2 Preparing Laundry for Washing....	15	7.1 Cleaning the Detergent Drawer.....	38
5.3 Tips for Energy and Water Saving.....	15	7.2 Cleaning the Loading Door and the Drum.....	40
5.4 Loading the Laundry.....	15	7.3 Cleaning the Body and Control Panel.....	40
5.5 Correct Load Capacity.....	15	7.4 Cleaning the Water Intake Filters..	40
5.6 Using Detergent and Softener.....	16	7.5 Draining Remaining Water and Cleaning the Pump Filter.....	41
5.6.1 Automatic Dosing.....	16	8 Troubleshooting.....	42
5.6.2 Dosage Selections, Cancellation or Use of Powder Detergent.....	18	9 DISCLAIMER / WARNING.....	46
5.6.3 Detergent and/or Softener Running Out.....	18		
5.6.4 Filling Detergent or Softener into the Wrong Compartment ...	18		
5.7 Tips for Efficient Washing.....	19		
5.8 Displayed Programme Duration ...	19		
6 Operating the Product.....	20		

Please read this user manual first!

Dear Customer,






Thank you for choosing Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product.

Follow all warnings and information in the user manual. Thus, you protect yourself and your product against possible dangers.

Keep the user manual. If you hand over the product to someone else, provide the user manual as well. Warranty terms, usage and troubleshooting methods of your product are in user guide.

Symbols and Definitions

The following symbols are used in the user guide:

	Danger that could result in death or injury.
	Important information or useful hints about usage.
	Read the user manual.
	Recyclable materials.
	Hot surface warning.
WARNING	Danger that may result in property damage to the product or its environment.



1 Safety Instructions

This section includes the safety instructions necessary to prevent the risk of personal injury or material damage.

Our company shall not be held responsible for damages that may occur if these instructions are not observed.

- Installation and repair operations shall always be performed by Authorised Service.
- Use original spare parts and accessories only.
- Do not repair or replace any component of the product unless it is clearly specified in the user manual.
- Do not modify the product.



1.1 Intended Use

- The product's bench life is 10 years. During this period, original spare parts will be available to operate the appliance properly.
- This product has been designed for domestic use. It is not for commercial purposes or it should not be used out of its intended use.
- The product must only be used for washing and rinsing of laundry that are marked accordingly

- This appliance is intended to be used in household and similar applications. For example;
 - Personnel kitchens of stores, offices and other work environments;
 - Ranches,
 - By customers of hotels, motels and other accommodation facilities,
 - Bed and breakfasts, hostel-like environments,
 - Common areas of apartment blocks or laundries.



1.2 Safety of Children, Vulnerable Persons and Pets

- This product may be used by children aged 8 years and older and persons with underdeveloped physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a the product safe way and the hazards involved.
- Children under the age of 3 should be kept away unless continuously supervised.
- Electrical products are dangerous for children and pets. Children or pets should not play

with, climb on top or inside the product. Check inside the product before use.

- Use child lock to prevent children from intervening with the product.
- Do not forget to close the loading door when leaving the room where the product is located. Children and pets may get locked inside and drown.
- Children should not perform cleaning and user maintenance works without an adult's supervision.
- Keep the packaging materials away from children. Risk of injury and suffocation.
- Keep all detergents and additives used for the product away from children's reach.
- Cut the power cable and break and deactivate the locking mechanism of the loading door before disposing of the product for children's safety.

1.3 Electrical Safety

- Product should be unplugged during installation, maintenance, cleaning and repair procedures.
- If the power cable is damaged, it must be replaced by the authorised service in order to avoid possible risks.

- Do not tuck the power cable under and behind the product. Do not place heavy objects on the power cable. Do not over bend, crush and touch the power cable to sources of heat.
- Do not use an extension cord, multi-plug or adaptor to operate your product.
- The plug shall be easily accessible. If this is not possible, a mechanism that meets the electrical legislation and that disconnects all terminals from the mains (fuse, switch, main switch, etc.) shall be available on the electrical installation.
- Do not touch the plug with wet hands.
- When unplugging the appliance, don't hold the power cord, but the plug.
- Make sure the plug is not wet, dirty or dusty.

1.4 Handling Safety

- Unplug the product before moving, remove the water outlet and water main connections. Drain any water left inside the product.
- The product is heavy, do not move alone. Do not hold extruding parts such as the laundry loading door to lift and

move the product. The upper tray should be tightly fixed for moving.

- Your product is heavy; it should be carried carefully by two people if a staircase is involved. It may cause injuries if your product falls on you. Do not hit and drop the product while carrying.
- Carry the product in an upright position.
- Make sure that the hoses as well as the power cable are not folded, pinched or crushed after the product is fitted into its place after installation or cleaning procedures.

1.5 Installation Safety

- Check the information on the manual and installation instructions to prepare the product for installation and make sure the electrical mains, clean water mains and water outlet are suitable. If not, call a qualified electrician and plumber to have them make the necessary arrangements. These operations are the responsibility of the customer.
- Check for any damage on the product before installing it. Do not have the product installed if it is damaged.

- Injuries may occur if hands are put into uncovered slots. Close the holes of the transportation safety bolts with plastic plugs.
- Do not install or leave the product at locations where it may be exposed to external environment conditions.
- Do not install the product at locations where the temperature drops below 0 °C.
- Do not place the product on a carpet or similar surface. It would create fire hazard since it cannot receive air from underneath.
- Place the product on a level and hard surface and balance with the adjustable legs.
- Connect the product to a grounding plug protected by a fuse suitable to the current values on the type label. Make sure the grounding is carried out by an expert electrician. Do not use the product without suitable grounding to local/national regulations.
- Plug the product in a socket with voltage and frequency values suitable to those indicated on the type label.
- Do not plug the product to loose, broken, dirty, greasy sockets or sockets that has

come out their seats or sockets with a risk of water contact.

- Use the new hose set provided with the product. Do not re-use old hose sets. Do not make additions to the hoses.
- Connect the water inlet hose directly to the water tap. The pressure from the tap should be minimum 0.1 MPa (1 bar) and maximum 1MPa (10 bars). 10 to 80 litres of water should be running from the tap in a minute in order for the product to function properly. If the water pressure is above 1 MPa (10 Bars), a pressure-reducing valve should be fitted. The maximum allowed temperature is 25°C.
- Fit the end of the water discharge hose to the dirty water discharge drain, the sink or the bathtub.
- Place the power cable and houses in locations without risk of tripping.
- Do not install the product behind a door, a sliding door or at another location that will prevent the door from opening completely.
- If a drier is to be placed on the product, fix with a suitable connection apparatus obtained from the authorised service.

- There is a risk of contact with electrical pieces when the upper trays is removed. Do not dismantle the upper tray of the product.
- Place the product at least 1 cm away from the edges of furniture.

1.6 Operational Safety

- When you are using the appliances, use only detergents, softeners and supplements suitable for washing machines.
- Do not use chemical solvents on the product. These materials contain an explosion risk.
- Do not operate defective or damaged products. Unplug the product (or turn off the fuse it is connected to), turn off the water tap and call an authorised service.
- Do not place sources of ignition (burning candle, cigarettes, etc.) or sources of heat (irons, furnaces, ovens, etc.) on top of or near the product. Do not put inflammable/explosive materials near the product.
- Do not get on the product.
- Unplug the product and turn off the tap if you will not be using the product for long periods.

- Detergent/maintenance materials may splash out of the detergent drawer if it is opened while the machine is working. Contact of the detergent with your skin and eyes is dangerous.
- Make sure pets do not climb inside the product. Check inside the product before use.
- Do not force open the locked loading door. The door will open once the washing is completed. If the door does not open, use the solutions for “loading door does not open” error in the Troubleshooting section.
- Do not wash elements contaminated with gasoline, kerosene, benzene, reducers, alcohol or other inflammable or explosive materials and industrial chemicals.
- Do not directly use dry cleaning detergent and do not wash, rinse or spin laundry contaminated with dry cleaning detergent.
- Do not place your hands into the rotating drum. Wait until the drum no longer rotates.
- Do not place your hand or a metal object under the washing machine.
- If washing laundry at high temperatures, the discharged washing water would burn your skin if in contact with your skin, for ex. when the discharge hose is connected to the tap. Do not touch the discharge water.
- Take the following precautions to prevent formation of biofilm and malodours:
 - Make sure the room where the washing machine is placed is well ventilated.
 - Wipe the door gasket and loading door glass with a dry and clean cloth at the end of the programme.
- The glass of the loading door will heat up when washing at high temperatures. Therefore, do not touch the loading door glass while washing, especially children.



1.7 Maintenance and Cleaning Safety

- Do not wash the product with pressure washers, by spraying vapour, water or pouring water.
- Do not use sharp or abrasive tools to clean the product. Do not use household cleaners, soap, detergent, gas, gasoline, thinner, alcohol, varnish, etc. while cleaning.

- Cleaning agents containing solvents might reek poisonous fumes(for ex. cleaning solvent. Do not use cleaning products containing solvents.
- There may be detergent residues in the detergent drawer when you open it for cleaning.
- Do not dismantle the filter of the discharge pump while the product is running.
- The temperature in the machine may rise up to 90°C. Clean the filter after the water in the machine cools down in order to avoid risk of getting burnt.

2 Important Instructions for Environment

2.1 Compliance with WEEE Directive



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

Compliance with RoHS Directive:


The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

2.2 Package Information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

3 Technical Specifications

Supplier's name or commercial brand	Beko
Model name	B5W5941DW
	7178587500
Nominal Capacity (kg)	9
Maximum spin speed (cycle/min)	1400
Built-In	No
Height (cm)	84,5
Width (cm)	60
Depth (cm)	58
Single Water inlet / Double Water inlet	+ / -
Electrical connection (V/Hz)	230 V / 50 Hz
Total current (A)	10
Total power (W)	2200
Main model code	1621



The model information as stored in the product database can be reached by entering following website and searching for your model identifier (*) found on energy label.


<https://eprel.ec.europa.eu/>

SUPPLIER'S NAME



 

 




































A

MODEL IDENTIFIER → (*)

A

 The consumption values apply when wireless network connection is turned off.

Symbols Table

4 Installation



Please read the "Safety Instructions" section first!



Your washing machine automatically detects the amount of laundry placed inside when selecting a program.

While installing the product, before the first use, calibration should be done to ensure that the laundry amount is detected in the most accurate way.

To do this, select the Drum Cleaning* program and cancel the spin function. Start the program without laundry. Wait for the program to finish, which will take about 15 minutes.

*The program name may vary depending on the model. For the appropriate program selection, review the program descriptions section.

- Please contact the nearest Authorised Service for the installation of the appliance.
- Make sure that the installation and electrical connections of the product are performed by authorised service agent. Manufacturer shall not be held responsible for damages caused by operations performed by unauthorised persons.
- Preparation of the location and electrical, tap water and waste water installations at the place of installation is under customer's responsibility.
- Make sure that the water inlet and discharge hoses as well as the power cable are not folded, pinched or crushed while pushing the product into its place after installation or cleaning procedures.
- Prior to installation, visually check if the product has any defects on it. Do not have the product installed if it is damaged. Damaged products cause risks for your safety.

4.1 Appropriate Installation Location

- Place the product on a hard and level floor. Do not place it onto a carpet with high pile or other similar surfaces. Placing on an improper floor shall cause noise and vibration problems.
- Total weight of the washing machine and the dryer -with full load- when they are placed on top of each other reaches to approx. 180 kilograms. Place the product on a solid and flat floor that has sufficient load carrying capacity.
- Do not place the product on the power cable.
- Do not install the product at places where temperature may fall below 0 °C. Freezing might damage your product.
- Leave a minimum space of 1 cm between the product and the furniture.
- If you will install the product on a surface with steps, never place it close to the edge.
- Do not place the product on any platform.
- Do not place heat sources such as cooker, irons, ovens, heater etc. on the appliance and do not use them on the product.


4.2 Assembly of Bottom Panel Covers



With some models, the base parts of the products are completely closed. These products do not have plugs and covers.

- In order to increase the sound comfort of the product, attach cover A after removing the package foam.


Cover A

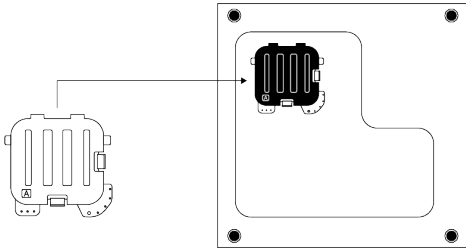

Tilt the machine back slightly. Rest the tabs of Cover A against the lower panel. Complete the assembly by rotating the cover.


- Cover B and the Cap are optional. If available, attach cover B and the Cap.

Cover B

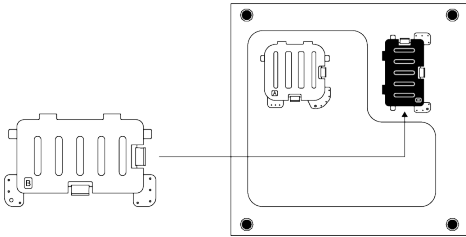

Rest the tabs of Cover B against the lower panel. Complete the assembly by rotating the cover.

Cap

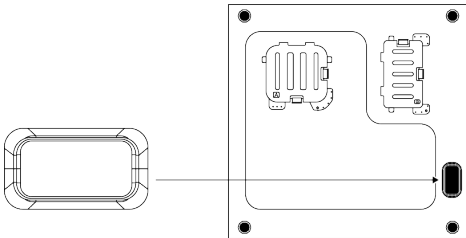


Insert the cap by pushing it with your finger.

4.3 Removing Transportation Safety Bolts

1. Loosen all transportation safety bolts with an appropriate wrench until they turn freely.
2. Bend the inner part by pressing it at the grip areas and pull the part out.

3. Attach the plastic covers supplied in the User Manual bag into the holes on the rear panel.

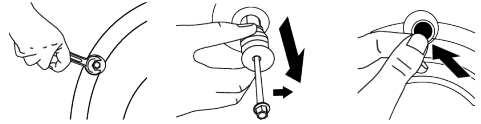

NOTICE

Remove the transportation safety bolts before operating the product. Otherwise, the product will get damaged.



NOTICE

Keep the transportation safety bolts in a safe place to reuse when the product needs to be moved again in the future. Install the transportation safety bolts in reverse order of the disassembly procedure. Never move the product without the transportation safety bolts properly fixed in place.

4.4 Connecting to Water Supply




NOTICE

Models with a single water inlet shall not be connected to the hot water tap. In such a case the laundry will get damaged or the product will switch to protection mode and will not operate. Do not use old or used water inlet hoses on a new product. It may cause water leakage from your machine and stain your laundry.


1. Tighten all hose nuts by hand. Never use a tool when tightening the nuts.
2. Open the taps completely after making the hose connection to check for water leaks at the connection points. If any leak occurs, turn off the tap and remove the nut. Check the gasket and tighten the nut carefully again. In order to pre-

vent the water leaks and resultant damages, keep the taps closed when you do not use the product.

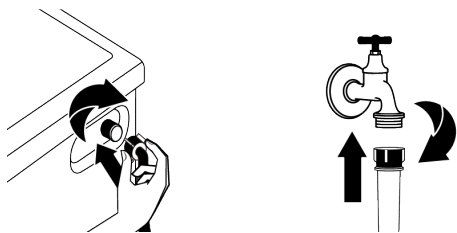


4.5 Connecting the Drain Hose to the Drain

1. Attach the end of the drain hose directly to waste water drain, washbasin or bathtub.

 Your house will be flooded if the water draining hose is dislocated during water draining. There is also a risk of burning due to the high washing temperatures. In order to prevent such situations and make sure that the product performs water intake and drain processes without any problem, fix the drain hose securely.

2. Connect the drain hose to a minimum height of 40 cm and a maximum height of 100 cm.
3. Installing the water draining hose at ground level or close to the floor (40 cm below) and then raising it makes water discharge difficult and the laundry may come out extremely wet. Thus, follow the heights provided in the figure.

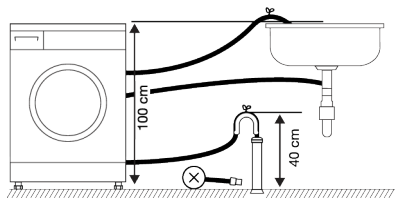


4. To prevent the waste water to go back into the product again and to ensure easy drainage, do not immerse the end

 
of the hose into the waste water or do not insert it into the drain for more than 15 cm. If it is too long, cut it short.

5. The end of the hose should not be bent, it should not be stepped on and the hose must not be pinched between the drain and the product. Otherwise, water discharge issues may emerge.
6. If the length of the hose is too short, use it by adding an original extension hose. The overall length of the hose shall not be longer than 3.2 m. To prevent water leaks, always secure the connection between the extension hose and the draining hose of the product with a suitable clamp so that it does not come off and cause leaks.

4.6 Adjusting the Stands

 **WARNING** In order to ensure that the product operates more silently and vibration-free, it must stand level and balanced on its feet. Ensure that the product is balanced by adjusting the feet. Otherwise, the product may move from its place and cause crushing, noise and vibration problems. To avoid damaging the lock nuts, do not use any tools to loosen the nuts.

1. Loosen the lock nuts on the feet by hand.
2. Adjust the feet until the product stands level and balanced.
3. Tighten all lock nuts again by hand.




4.7 Electrical Connection

Connect the product to a grounded outlet protected by a 13 A fuse. Our company shall not be responsible for the damages

that shall be incurred due to using the product without grounding according to local regulations.

- Connection must comply with national regulations.
- The electrical connection cable infrastructure of the product must be adequate and suitable for product requirements. It is recommended to use a Ground Fault Circuit Breaker (GFCI).
- Power cable plug must be within easy reach after installation.
- If the current supply to the fuse or breaker in the house is less than 13 Amps, have a qualified electrician install a 13 amp supply.
- The voltage specified in the "Technical specifications" section must be equal to your mains voltage.
- Do not make connections via extension cables or multi-plugs. Overheating and burning may occur due to the connecting cable.

 Damaged power cables should be replaced by the authorised service in order to prevent possible danger.


Important

Fitting a different plug:

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals on your plug, proceed as follows:


1. Connect the green - yellow or green (earth) wire to the terminal in the plug marked 'E' or with the symbol \perp or coloured green and yellow or green.
2. Connect the blue (neutral) wire to the terminal in the plug marked 'N' or coloured black.

5 Preliminary Preparation

 Please read the "Safety Instructions" section first


3. Connect the brown (live) wire to the terminal in the plug marked 'L' or coloured red.


With the alternative plugs a 13 A fuse must be fitted either in the plug or adaptor or in the main fuse box. If in doubt contact a qualified electrician.

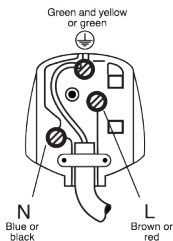

4.8 Start Up

Before starting to use the product make sure that the preparations described in section "Environmental instructions" and "Installation". To prepare the product for washing laundry, perform first operation in Drum Cleaning programme. If this programme is not available in your product, apply the method which is described in section "Cleaning the loading door and the drum".

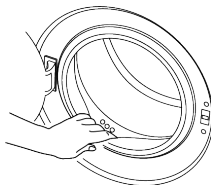

 Some water has remained in the product due to the quality control processes in the production. It is not harmful for the product.

5.1 Sorting the Laundry

- Sort laundry according to type of fabric, colour, and degree of soiling and allowable water temperature.

- Always observe the instructions given on the garment care labels.

5.2 Preparing Laundry for Washing

- Laundry items with metal attachments such as, underwiring, belt buckles or metal buttons will damage the product. Remove the metal pieces or wash such clothes by putting them in a laundry bag or pillow case.
- Take out all substances in the pockets such as coins, pens and paper clips, and turn pockets inside out and brush. Such objects may damage the product or cause noise problem.
- Put small size clothes such as infant's socks and nylon stockings in a laundry bag or pillow case.
- Place curtains in without compressing them. Remove curtain attachment items. Curtain attachment items may cause pulling and tearing on the curtain.
- Fasten zippers, sew loose buttons and mend rips and tears.
- Wash "Machine washable" or "Hand washable" labelled products only with an appropriate programme.
- Do not wash colours and whites together. New, dark coloured cottons release a lot of dye. Wash them separately.
- Tough stains must be treated properly before washing.
- Wash trousers and delicate laundry turned inside out.
- Laundry that are subjected to materials such as flour, lime dust, milk powder, etc. intensely must be shaken off before placing into the product. Such dusts and powders on the laundry may build up on the inner parts of the product in time and can cause damage.

5.3 Tips for Energy and Water Saving

Following information will help you use the product in an ecological and energy/water-efficient manner.

- Operate the product in the highest load capacity allowed for the programme you have selected, but do not overload. See "Programme and consumption table"
- Observe the temperature instructions on the detergent packaging.
- Wash slightly soiled laundry at low temperatures.
- Use faster programmes for small quantities of lightly soiled laundry.
- Do not use prewash and high temperatures for laundry that is not heavily soiled or stained.
- If you plan to dry your laundry in a dryer, select the highest spin speed recommended during washing process.
- Do not use more detergent than the recommended amount on the detergent packaging.

5.4 Loading the Laundry

1. Open the loading door.
2. Put the laundry items into the product in a loose manner.
3. Push the loading door to close until you hear a locking sound. Ensure that no items are caught in the door. The loading door is locked while a programme is running. The door lock will open once the programme is completed. Then you can open the loading door. If the door does not open, apply the solutions provided for "Loading door cannot be opened" error in the Troubleshooting section.

5.5 Correct Load Capacity

The maximum load capacity depends on the type of laundry, the degree of soiling and the desired washing programme.

The product automatically adjusts the water amount according to the weight of the laundry put inside it.



Follow the instructions in "Programme and consumption table". When the appliances is overloaded product's washing performance will drop. Moreover, noise and vibration problems may occur.

5.6 Using Detergent and Softener

 


WARNING

Read the manufacturer instructions on the package while using detergents, softeners, starch, bleach and decolourants, anti-limescale and follow the dosage information provided. Use a measuring cup, if any.

Gel-like, non-fluid liquid detergents, etc. cannot be used in the detergent compartments or dosing chambers.

Detergent, Softener and Other Cleaning Agents



The detergent drawer comprises of three compartments:

- (1) Liquid detergent compartment
 - (2) Powder detergent compartment
 - (3) Softener compartment
- Add detergent and softener before starting the washing programme.
 - Do not leave the detergent drawer open when the washing programme is on.
 - Do not select a programme with pre-washing if you are using a detergent pod or dispensing ball. Place the detergent pod or the dispensing ball directly among the laundry in the product.
 - Prewash compartment and prewash option is not available.

Choosing the Detergent type

Detergent type to be used depends on the washing programme, fabric type and colour.

- Use different detergents for coloured and white laundry.
- Wash your delicate clothes only with special detergents (liquid detergent, wool shampoo, etc.) intended solely for delicate clothes and at suggested programme.
- When washing dark coloured clothes and quilts, it is recommended to use liquid detergent.
- Wash woollens at suggested programme with special detergent made specifically for woollens.
- Please review the programme descriptions part for suggested programme for different textiles.
- All recommendations about detergents are valid for selectable temperature range of programmes.




Only detergents, softeners and additives suitable for washing machines should be used. Do not use liquid detergents or other cleaning agents to soften the laundry. Do not use soap powder.

5.6.1 Automatic Dosing


Initial Installation

Turn on the machine with On/Off button.


Dosage symbol  appears in programs where detergent dosing is allowed. If the liquid detergent or softener compartments are empty, the dosage symbol will flash in programs where detergent dosing is allowed.


Filling Liquid Detergent and Softener


1. Open the detergent compartment by pulling it towards yourself.

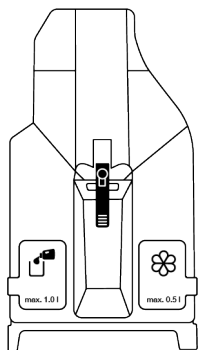

 2. To fill liquid detergent (left) and softener (right), open the related tank's lid by pulling it upwards as shown in the picture.

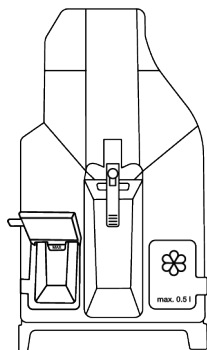

3. Remember not to exceed the "Max" sign when adding liquid detergent or softener.
4. Close the lid of the compartment.
5. Close the detergent drawer by pushing lightly.
6. After closing the detergent drawer, the flashing dosage symbol () starts lighting up continuously.
7. It indicates that the compartments are filled successfully and the detergent drawer is in its place.

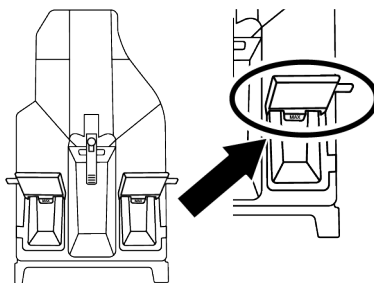

We recommend filling the detergent compartment with liquid detergents that can be used in common for coloured and white laundry.

If the detergent symbol is flashing even though the detergent compartments are filled, the detergent drawer is not seated properly. Push the drawer so that it is fully seated.



WARNING


When the detergent drawer is filled with detergent and/or softener; do not pull or move the equipment, and do not tilt it on either side or back.

Before conducting these operations, the detergent drawer must always be removed from the machine.

If you wish to start the program while there is no detergent in the detergent drawer, liquid detergent dosage must be cancelled and washing with powder detergent is required.

Only liquid detergent must be put inside the liquid detergent dosing tank and only softener must be put in the softener dosing tank. Putting all kinds of liquid and powder chemicals together inside the tanks may damage your laundry or your machine.

5.6.2 Dosage Selections, Cancellation or Use of Powder Detergent

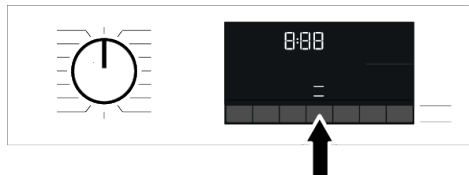


 






Liquid detergent cannot be selected in some of the programmes. Powder detergent must be used in these cases. For more information, see Programme Table. If powder detergent is to be used in programmes where the detergent dosing system is operating, desired amount of detergent is put into the powder detergent compartment. If the detergent compartment in the middle is to be used, the liquid detergent dosage selection must be deactivated. Machine measures the load and determines the right amount of detergent depending on the load amount and the selections made previously. The detergent taken is not visible while washing, it is taken directly with water over the laundry.

If another liquid detergent with different properties than the one in the liquid detergent dosing tank is preferred to be used, liquid detergent with said different properties should be put in the powder detergent compartment in the middle and the liquid detergent dosage selection should be deactivated.

Softener will be taken from the dosing system.

Liquid detergent and softener dosing symbols on the screen become active or inactive according to the program selected.

 	<p>First position on the display means liquid detergent is active, softener is on. If the liquid detergent and softener symbol is lit, it means that liquid detergent and softener dosing is active.</p>
 	<p>If the liquid detergent and softener symbols are active on the screen; when you press the Automatic Dosing key for the first time, the liquid detergent will turn on and the softener will turn off. If the softener symbol is not lit, it means that softener will not be used in the rinsing step.</p>
 	<p>When you press the Automatic Dosing key for the second time, the powder detergent and the softener symbol is not lit, it means that it can be washed with powder detergent.</p>
 	<p>When you press the Automatic Dosing key for the third time, the powder detergent will turn on and the softener will turn off. When you press it for the fourth time, it will return to the first position.</p>

5.6.3 Detergent and/or Softener Running Out

When the detergent or the softener put inside the detergent drawer finishes, the dosage symbol in the display flashes. When this symbol flashes, it is necessary to add the decreasing detergent or softener to the dosing tank. The product will be able to dose enough for 2-3 more cycles from the first moment the symbol flashes.

5.6.4 Filling Detergent or Softener into the Wrong Compartment

In case you fill the detergent or the softener in the wrong compartment, see "Cleaning the Detergent Drawer".

5.7 Tips for Efficient Washing

		Clothes			
		Light Colours and Whites	Colours	Black/Dark Colours	Delicates/Woolens/Silks
		(Recommended temperature range based on soil level: 40-90 °C)	(Recommended temperature range based on soil level: cool -40 °C)	(Recommended temperature range based on soil level: cool -40 °C)	(Recommended temperature range based on soil level: cool -30 °C)
Soiling Level	Heavily Soiled (difficult stains such as grass, coffee, fruits and blood.)	It may be necessary to pre-treat the stains or perform prewash. Powder and liquid detergents recommended for whites can be used at dosages recommended for heavily soiled clothes. It is recommended to use powder detergents to clean clay and soil stains and the stains that are sensitive to bleaches.	Powder and liquid detergents recommended for colours can be used at dosages recommended for heavily soiled clothes. It is recommended to use powder detergents to clean clay and soil stains and the stains that are sensitive to bleaches. Detergents which do not contain decolourant should be used.	Liquid detergents suitable for colours and black/dark colours can be used at doses recommended for heavily soiled clothes.	Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.
	Normally Soiled (For example, stains caused by body on collars and cuffs)	Powder and liquid detergents recommended for whites can be used at dosages recommended for normally soiled clothes.	Powder and liquid detergents recommended for colours can be used at dosages recommended for normally soiled clothes. Detergents which do not contain decolourant should be used.	Liquid detergents suitable for colours and black/dark colours can be used at doses recommended for moderately soiled clothes.	Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.
	Lightly Soiled (No visible stains exist.)	Powder and liquid detergents recommended for whites can be used at dosages recommended for lightly soiled clothes.	Powder and liquid detergents recommended for colours can be used at dosages recommended for lightly soiled clothes. Detergents which do not contain decolourant should be used.	Liquid detergents suitable for colours and black/dark colours can be used at doses recommended for lightly soiled clothes.	Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.

5.8 Displayed Programme Duration

You can view the programme duration on the display of your machine while selecting a programme. Depending on the amount of laundry you have loaded into your machine, foaming, unbalanced load conditions, fluctuations in power supply, water pressure and programme settings, the programme duration is automatically adjusted while the programme is running.


SPECIAL CASE: At programme start of Cottons and Cotton Eco programmes, display shows the duration of half load. It is the most common use case. After programme starts, in 20-25 minutes actual load is detected by the machine. And if the detected load is higher than half load; washing programme will be adjusted accordingly and programme duration increased automatically. You can follow this change on the display.

6 Operating the Product




Please read the "Safety Instructions" section first!

6.1 Control Panel

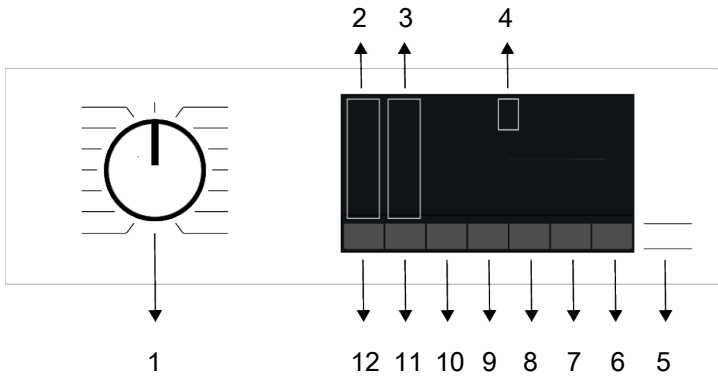

- | | |
|-------------------------------------|--------------------------------|
| 1 Program selection button | 2 Temperature level lights |
| 3 Tightening level indicator Lights | 4 Display |
| 5 Start/Pause button | 6 Remote control button |
| 7 Set end time button | 8 Auxiliary function button 3 |
| 9 Auxiliary function button 2 | 10 Auxiliary function Push1 |
| 11 Tightening Speed Adjustment knob | 12 Temperature Adjustment knob |

6.2 Symbols on the Display

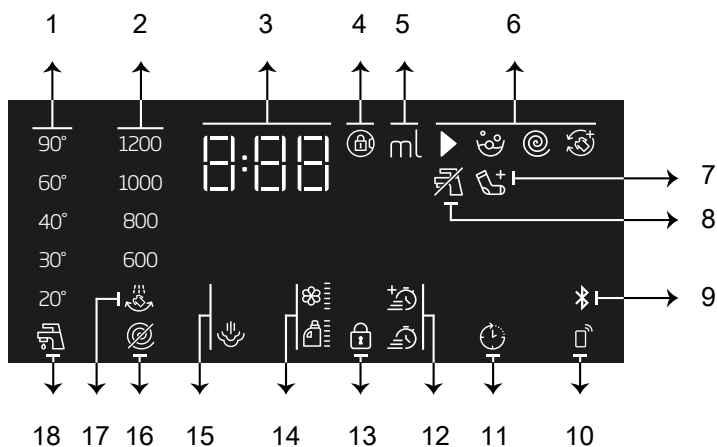

- | | |
|------------------------------------|------------------------------------|
| 1 Temperature Indicator | 2 Spin Speed Indicator |
| 3 Duration Information | 4 Door Lock Is Engaged Symbol |
| 5 Dosing Unit Indicator | 6 Programme Follow-up Indicator |
| 7 Add Garment Indicator | 8 No Water Indicator |
| 9 Bluetooth Connection Indicator | 10 Remote Control Indicator |
| 11 Delayed Start Enabled Indicator | 12 Auxiliary Function Indicators 3 |
| 13 Child Lock Enabled Symbol | 14 Auxiliary Function Indicators 2 |
| 15 Auxiliary Function Indicators 1 | 16 No Spin Indicator |
| 17 Rinse Hold Indicator | 18 Cold Water Indicator |



The visuals used for machine description in this section are schematic and may not match exactly with the features of your machine.

6.3 Programme and Consumption Table

Program						Auxiliary functions				Temperature °C
	Temperature °C	Maximum load (kg)	Water consumption (lt)	Energy consumption (kWh)	Max RPM	Fast+	AntiCrease+	Steam	AutoDose	
Cottons	90	9	98	2,75	1400	•	•	•	•	Cold - 90
	60	9	98	2,00	1400	•	•	•	•	Cold - 90
	40	9	95	1,20	1400	•	•	•	•	Cold - 90
Eco 40-60	40***	9	57	0,535	1400				•	40-60
	40***	4,5	37	0,302	1400				•	40-60
	40***	2,5	28	0,205	1400				•	40-60
Synthetics	60	4	76	1,60	1400	•	•	•	•	Cold - 60
	40	4	74	1,10	1400	•	•	•	•	Cold - 60
Quick/Super Quick	90	9	75	2,30	1400	•	•	•	•	Cold - 90
	60	9	75	1,30	1400	•	•	•	•	Cold - 90
	30	9	75	0,25	1400	•	•	•	•	Cold - 90
Quick/Super Quick + Fast+	30	2	45	0,15	1400	•	•	•	•	Cold - 90
Drum Clean	90	-	80	2,60	600			*		90
Hand Wash	40	2	60	0,60	1200				•	Cold - 40
Duvet	60	-	100	1,60	800			•	•	Cold - 60
Shirts	60	4	70	1,40	800	•	•	*	•	Cold - 60
StainExpert	60	4,5	86	1,85	1400	•			•	30-60
Anti Allergy	90	9	125	3,00	1400			*	•	20-90
Auto Program	60	9	****	****	1400		•		•	Cold - 60
SteamTherapy	-	1	1,5	0,11	-			*		-
Downloaded Programme *****										
Mix	40	4	83	1,10	800	•	•	•	•	Cold - 40
Curtain	40	2	98	0,90	800				•	Cold - 40
Underwear	30	1	78	0,30	600				•	Cold - 30
Delicate	40	4	65	0,85	800				•	Cold - 40
Towel	60	4	115	1,60	800			•	•	Cold - 60
Outdoor/Sports	40	5	60	0,65	1200				•	Cold - 40
Dark Care/Jeans	40	5	86	1,05	1200	•	•	•	•	Cold - 40

• : Selectable.

* : Automatically selected, cannot be cancelled.

*** : Eco 40-60 programme is a test programme according to 40 ° C temperature selection, EU regulation EU / 2019/2014 and EN 60456: 2016 / A11: 2020 standard.

**** : Programme detects the type and quantity of the laundry to automatically adjust water and energy consumption and programme duration.

***** : These programmes can be used with the HomeWhiz application. Power consumption may increase due to the connection.

- : See the programme description for maximum load.



Please read Installation section of the manual before first use. The auxiliary functions in the table may vary according to the model of your machine.

Water and energy consumption may vary subject to the changes in water pressure, water hardness and temperature, ambient temperature, type and amount of laundry, selection of auxiliary functions and spin speed, and changes in electric voltage.

Selection patterns for auxiliary functions can be changed by the manufacturer company. New selection patterns can be added or removed.

The spin speed of your machine may vary according to the programme; this spin speed cannot exceed the max. spin speed of your machine.

The amount of noise and humidity varies according to the spin speed; when the higher spin speed is selected during the spinning phase, the laundry contains less moisture but higher noise occurs at the end of the programme.



You can see the washing duration on the display of your machine while selecting a programme. Depending on the amount of laundry you have loaded into your machine, there may be a difference of 1-1.5 hours between the duration shown on the display and the actual duration of the wash cycle. Duration will be automatically updated soon after the washing starts. Always select the lowest appropriate temperature. The most efficient programmes in terms of energy consumption are generally those that wash at low temperatures for a long time.

Consumption values (EN)

	Temperature Selection °C	Tightening Speed (rpm)	Capacity (kg)	Program duration (h:min)	Energy consumption (kWh/cycle)	Water consumption (litres/cycle)	Laundry temperature (°C)	% Of remaining humidity (%)
Eco 40-60	40	1400	9	03:48	0,535	57	28	52
	40	1400	4,5	02:53	0,302	37	25	52
	40	1400	2,5	02:53	0,205	28	23	56
Cottons	20	1400	9	03:40	0,750	95	20	53,9
	20	1400	4,5	01:35	0,600	70	20	53,9
	60	1400	9	03:40	2,000	98	60	53,9
	60	1400	4,5	01:59	1,750	70	60	53,9
Synthetics	40	1200	4	02:05	1,100	74	40	40
Quick/Super Quick	30	1400	9	00:28	0,250	75	23	62

The consumption values given for programs other than the Echo 40-60 program are indicative only.


6.4 Programme Selection

1. Determine the programme suitable for the type, quantity and soiling level of the laundry in accordance with "Programme and consumption table".



Programmes are limited with the highest spin speed appropriate for that particular type of fabric. When selecting a programme, always consider the type of fabric, colour, degree of soiling and permissible water temperature.

2. Select the desired programme with the Programme Selection knob.

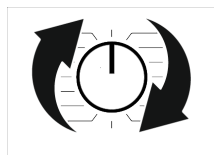

6.5 Programmes

• AQUAtech

When this feature is active, the water in the boiler is sent through a special wing to the laundry with the effect of falling into the wash, the time of your programs is reduced and the clothes are cleaned with more precision and high wash performance. Wool, etc. the special gentle shaking action for your delicate garments works in conjunction with this technology to wash your garments very precisely. This feature is powered by a quick stirring action for your cotton-like garments with dense dirt, allowing you to clean your garments with higher performance.

The time and time of application of this process is designed to achieve the best results according to the specifications of the washing programs. Depending on the amount of laundry washed and the temperature selection of the program, the system is generally activated within 25 to 60 minutes. In some programs, spraying also

occurs at the beginning of the program. In these programs, the spraying process starts in 3 to 10 minutes.

• Automatic attachment rinsing feature

Your machine checks the water's turbidity during some rinsing steps and adds up to 2 additional rinsing steps as needed to remove detergent from your laundry.

• Eco 40-60

In the ECO 40-60 program, you can wash normally dirty cotton laundry, which is indicated to be washed together at 40°C or 60°C. This programme is the standard test programme according to EU environmentally responsible design and energy labelling legislation.

Although this program takes longer to wash than other washing programs, it is more efficient in terms of energy and water consumption. The actual water temperature may differ from the specified wash temperature. When doing laundry in smaller quantities (for example, ½ of capacity or less), the duration of the program stages may be automatically shortened. In this case, energy and water consumption are further reduced.

• Cottons

Your durable cotton clothes (sheets, linen, towels, bathrobes, underwear, etc.) you can wash it in this program. When the quick wash function button is pressed, the program time is significantly shorter, but effective wash performance is ensured by intensive wash movements. If the quick wash function is not selected, effective wash and rinse performance is provided for your very dirty laundry.

• Synthetics

T-shirt, blouse, synthetic/cotton mixed fabrics, etc. you can wash your clothes in this program. Pressing the quick wash function button significantly shortens the program time and provides effective washing performance for your non-dirty laundry. If the quick wash function is not selected, effective wash and rinse performance is provided for your very dirty laundry.

• Hand Wash

Use this program to wash your wool/delicate clothes. Choose the appropriate temperature for the label of your laundry. Your clothes are washed with very delicate movements so that they do not get damaged.

• Anti Allergy

Applying a steam step at the beginning of the program makes it easy for dirt to soften.

This program includes intensive and long washing time and high-temperature anti-allergy and hygienic laundry (baby clothes, linens, linens, underwear, etc.) use it for the wearer. A high level of hygiene is ensured by steam application before the program, long-term heating and additional rinsing steps.

- The programme has been tested by the British Allergy Foundation (Allergy UK) at a temperature of 60°C and approved for hygiene and allergen removal effectiveness.



Allergy UK is a brand of the British Allergy Foundation. The Seal of approval was created to guide those seeking advice that the product significantly reduces the amount of allergens in the environment of allergic people or restricts/reduces/eliminates allergens. Its purpose is to provide evidence that the products have been scientifically tested or examined to produce measurable results.

• Duvet

Use this program to wash your fiber quilts labeled "machine washable". Make sure you place your duvet correctly on the machine to avoid damage to your machine and duvet. Remove the cover of your duvet before you place it on the machine. Fold the duvet in half and place it in the machine. Make sure that the duvet does not come into contact with the bellows or the glass

You can also use your hairy coats, vests, jackets, etc. with the "machine washable" label on them use this program to wash.



Do not load more than a double fibre duvet (200 x 200 cm). Your cotton quilts, pillows, etc. do not machine wash.



Carpet, rug, etc. do not wash things in the machine. Otherwise, your machine will be permanently damaged.

• Spin+Drain

Use this program to remove water from the garment/inside the machine.

• Rinse

Use when you want to rinse or collage separately.

• SteamTherapy

Use this program to reduce wrinkles and reduce ironing times on your small, unstained cotton, synthetic or mixed laundry.



This is not a washing program. In this program, you can use detergent, bleach, stain remover, etc. do not add chemicals.

• Curtain

You can use this program to wash tulips and curtains. Wash with a small amount of detergent in the main wash eye due to their perforated construction, which causes them to foam a lot. Thanks to the special tightening profile of the program, tulips and curtains are less wrinkled. To avoid damaging the curtains, do not fill the machine beyond the specified capacity.



In this program, it is recommended that you use special detergents made for curtains in the powder detergent compartment.

• Shirts

Use this program to wash your cotton, synthetic and synthetic shirts. This program allows the laundry to wrinkle less. Steam is applied at the end of the program to aid the crease reduction function. The steam and special tightening profile applied at the end of the program reduce wrinkles on your shirts. When the quick wash function is selected, the Pre-treatment algorithm is used.

- Apply the pre-treatment chemical directly on the laundry or add the detergent to the machine from the powder detergent compartment with the detergent. In this way, you can achieve the performance you get in a normal wash in a much shorter time. Your shirts will last longer. If you are going to use the time delay function on your machine, do not use the pre-wash chemical. The pre-wash chemical can flow over your laundry, causing stains to form on your laundry.

** It is recommended that you do not wash your shirts with more than 6 shirts to minimize the wrinkle level with this program. at the end of washing when washing at capacities higher than 6 units; differences in the level of wrinkle and the amount of moisture above the shirts can be seen.

• Quick/Super Quick

Use this program to wash your cotton clothes with very little dirt and spotless in a short time. With the quick wash function selected, the program time can be reduced to up to 14 minutes. If the quick wash function is selected, a maximum of 2 (two) kg of laundry must be washed.

• Dark Care/Jeans

Use this program to preserve the color of your dark clothes and jeans. This program provides high washing performance thanks to special drum movement, even at low temperature. It is recommended to use liquid detergent or wool shampoo for dark colors. Wool, etc. do not wash your delicate clothes in this program.

• Drum Clean

Use regularly (every 1-2 months) to clean the boiler and ensure proper hygiene. Run the program when the machine is completely empty. For better results, use a powder descaler (boiler cleaning agent) suitable for washing machines with the powder detergent function selected. After the program has ended, leave the loading door open to allow the inside of the machine to dry.



This is not a washing program. This is a maintenance program. Do not run this program with anything inside the machine. When you try to start, the machine automatically detects that there is a load inside, you can end the program or continue the program depending on your machine model. Active cleaning will not occur if the program continues.

• Mix

You can wash your cotton and synthetic clothes on this program without separating them.

• Auto Program

Use this program to wash your frequently washable cotton, synthetic or mixed (cotton + synthetic) laundry. The program detects the type, quantity and dirt level of the laundry you put in the machine and automatically adjusts the water consumption, the program duration and the amount of detergent if your product has an automatic dosing feature.



WARNING

Do not wash your delicate and woolly clothes on this program.

Depending on the dirt level and type of laundry, the maximum wash temperature in the Auto program is 60°C. Excessively dirty white clothing and stubborn stains (collar, sock dirt, sweat stains, etc.) the washing performance may not be at the desired

level for. In this case, it is advisable to select the pre-wash cotton program and set the temperature between 50 and 60°C. In the automatic program, many types of clothing are correctly identified and washed safely.

- **Delicate**

You can wash your delicate clothes, such as cotton/synthetic blend knitted clothing or socks, on this program. The washing movements of this program are more delicate. Clog your clothes that you want to keep their color with the option of 20 degrees or cold wash.

- **Underwear**

You can use this program to wash delicate handwashing or women's underwear. A small amount of laundry should be washed by putting it in the laundry net. The buckles, buttons should be buttoned, zippers should be closed.

- **Outdoor/Sports**

Use this program to wash outdoor/sports clothing containing a cotton/synthetic mixture and waterproof covers such as Gore-tex. This program allows you to wash your clothes gently thanks to special rotational movements.

- **StainExpert**

Your machine has a special stain program that ensures the most effective removal of different types of stains. In this program, wash your non-colourful, durable cotton clothes, and never wash delicate and colourful clothes and clothes. Always check the clothing label of the laundry before washing (cotton shirt, pants, shorts, t-shirt, suitable for high temperature and long periods of washing; baby clothes, pajamas, food apron, tablecloth, sheets, linen, pillowcase, bath-beach towel, dining towel; socks, cotton underwear, etc. Clothes are recommended) in the Auto stain program you can wash for 24 types of stain, which are collected in three different groups, which can be selected with the "Quick wash" slider. You can see the stain groups that can be selected with the "Quick wash" setting key be-

low. Depending on the selected stain group, a special program is run that has changed the water suppression time, wash rhythm, wash and rinse time.

You can find the stain groups that can be selected with the "Quick wash" setting key below:

When "Quick wash" is not selected;

Sweat, collar dirt, food, mayonnaise, salad dressing, make-up, machine oil, baby food.

When the "quick wash" is pressed once;

Blood, chocolate, pudding, grass, mud, eggs, butter, curry.

When the "quick wash" is pressed twice;

Tea, coffee, juice, ketchup, red wine, coke, jam, coal

1. Select the stain program.
2. Locate the stain you want to remove from the groups above and select the appropriate group using the quick auxiliary function selection button.
3. Read the label on the garment carefully and make sure that the appropriate temperature and tightening speed are selected.

- **Downloaded Programme**

This is a special program that allows you to download different programs whenever you want. Initially, there is a program that you will see with the HomeWhiz app by default. However, using HomeWhiz, you can select a program from the predefined program setting, then change it and use it.




If you want to use the HomeWhiz feature and the Remote Control function, you must select the Program Download feature. You can find detailed information in the HomeWhiz feature and Remote Control function section

• Towel


Use this program to wash your durable cotton clothes, such as towels. Make sure that the towels are placed in the machine so that they do not come into contact with the bellows and glass as much as possible.

6.6 Temperature Selection

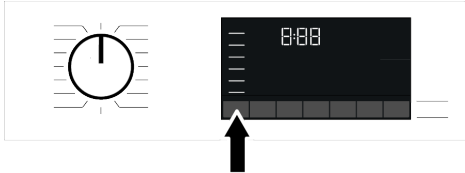


Whenever a new programme is selected, the recommended temperature for the programme appears on the temperature indicator. It is possible that the recommended temperature value is not the maximum temperature that can be selected for the current programme.

 
Press the Temperature Adjustment button to change the temperature. Temperature decreases gradually.



You can also change the temperature after the washing starts. This change can only be made if the washing steps allow it.

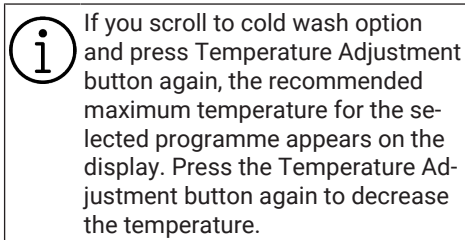

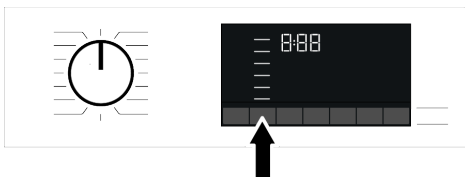

6.7 Spin Speed Selection



Whenever a new programme is selected, the recommended spin speed of the selected programme is displayed on the Spin Speed indicator. It is possible that the recommended spin speed value is not the maximum spin speed that can be selected for the current programme.

Press the Spin Speed Adjustment button to change the spin speed. Spin speed decreases gradually.

 
Then, depending on the model of the product, "Rinse Hold"  and "No Spin"  options appear on the display.

If you are not going to unload your laundry immediately after the programme completes, you can use Rinse Hold function in order to prevent them from getting wrinkled when there is no water in the machine.

This function holds the laundry in the final rinsing water. If you want to spin your laundry after the Rinse Hold function:

1. Adjust the Spin Speed.
2. Press Start / Pause. The programme will resume. Machine drains the water and spins the laundry.

If you want to drain the water at the end of the programme without spinning, use No Spin function.



You can change the spin speed after the washing starts if the washing steps allow it. Changes cannot be made if the steps do not allow it.


Soaking

If you are not going to unload your clothes immediately after the programme completes, you can use rinse hold function to keep your laundry in the final rinsing water in order to prevent them from getting wrinkled when there is no water in the machine. Press Start/Pause button after this process if you want to drain the water

without spinning your laundry. Programme will resume and complete after draining the water.

If you want to spin the laundry held in water, adjust the Spin Speed and press Start/Pause button. The programme will resume. Water is drained, laundry is spun and the programme is completed.

6.8 Auxiliary Function Selection

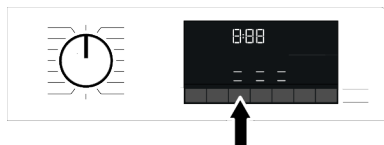

Select the desired auxiliary functions before starting the programme. Whenever a programme is selected, icons of the auxiliary function symbol that is selected together with it lights.



When an auxiliary function button that cannot be selected with the current programme is pressed, the washing machine will make a warning sound.

Some functions cannot be selected together. If a second auxiliary function conflicting with the first one is selected before starting the machine, the function selected first will be cancelled and the second auxiliary function selection will remain active. For example, if you want to select Quick Wash after you have selected the Additional Water, Additional Water will be cancelled and Quick Wash will remain active.

An auxiliary function that is not compatible with the programme cannot be selected. (See "Programme and consumption table") Some programmes have auxiliary functions that must be operated simultaneously. Those functions cannot be cancelled. The frame of the auxiliary function will not be lit, only inner area will be lit.

6.8.1 Auxiliary Functions

• Fast+

After selecting the program, you can press the Quick wash setting button to shorten the program duration. For some programs, the duration can be shortened by more than 50%. However, thanks to the modified algorithm, good washing performance is ensured.

Although it varies with each program, once you press the Quick wash button, the program time decreases to a certain level. Press the same button a second time and the time will be reduced to a minimum.

For better washing performance, do not use the Quick wash slider when washing heavy dirty clothes.

For medium and low soiled laundry, use the Quick wash button to shorten the program time.

• Steam

This function helps reduce wrinkles, reduce ironing times and soften and remove dirt from your cotton, synthetic and mixed laundry.

*Under conditions where the steam function is applied at the end of the program, your clothes may be warmer at the end of the washing. This is expected within the program operating conditions.



do not use liquid detergents when you activate the steam function unless you have a liquid container or liquid detergent dosing capability. There is a risk of stain on the laundry.

• AutoDose

With this auxiliary function key, you can change your detergent and dosage preferences. For detailed information, see BK. "Dosage choices, cancellation or use of powdered detergents"

• Auto Dosing Setting

You can use this function to change the amount of liquid detergent and softener dosage. Press the Auto dosing button to activate the function.

Take into account the amount of laundry, the amount of pollution of the laundry and the hardness of the water for the use of an adequate amount of detergent in washing. For automatic dosing, you must define the recommended amount of use of the detergent you use to ensure that your machine can dosing the appropriate amount of detergent. For this, see the "changing the liquid detergent and softener dosage settings" section below.

You can find out the water hardness from the water operator responsible for your area, or you can determine it with a water hardness test. Detergent companies recommend using more detergents when water hardness is high.

15–200 ml for 4-5 kg medium dirty laundry to your machine, taking into account the water hardness. you can define a reference value between. Depending on the detected laundry characteristics, the dosage will be adjusted automatically.

For soft/Medium water hardness:

It is dirty: Ml.

Medium dirty: **b ml**.

It is very dirty: :C ml.

For hard water hardness:

Less dirty :d ml.

Medium dirty: **e ml**.

It is very dirty. :F ml.

Detergent companies share recommendations for use similar to the table above. The value you need to define to the machine is the medium dirt value. According to water hardness **b** or **e** define the value to the machine.

If the amount of laundry you wash is different than 4-5 kg, you do not need to change the dosage setting. Your machine automatically adjusts the dosage amount according to the load quantity.



When you change the detergent model you are using, we recommend that you re-adjust the dosage for best results.

Laundry by dirt level Program Recommendation

You can use the "Quick" feature for your un-dersoiled laundry. When you select the "fast" feature, your machine will adjust the detergent dosage to suit low-soiled laundry. You can use the "busy" feature for your very dirty laundry. When you select the "intensive" feature, your machine will adjust the detergent dosage to suit very dirty laundry.

Dirt level in automatic program

In the automatic program, dirt detection is done by the machine. Depending on the detected dirt, the duration of the program and the amount of detergent dosed will vary.

Changing the liquid detergent and softener dosage settings:



1. Press the auto dosing key. When the liquid detergent is switched on and the softener is switched off, the liquid detergent setting screen becomes active. When the liquid detergent is switched off and the softener is switched on, the softener setting screen becomes active. The LED of the active setting screen lights up.




2. Press the "+" and "-" keys to change the dosage reference values.
3. When the dosing amount adjustment process is over, you can return to the main menu by pressing any key. All programs will be dosed according to the latest settings you selected until a new setting is selected.

• Remote Control

You can connect your to smart devices using this auxiliary function key. For detailed information, see HomeWhiz feature and Remote Control function.

• Customized Program

This auxiliary function is only available for cotton and synthetic programs in combination with the HomeWhiz app. When this function is enabled under the HomeWhiz "personalize" menu, you can add up to 5 additional rinse steps to the program. You can select and use some auxiliary functions, even if not on your product. You can increase and decrease the duration of the cotton and synthetic programs in a safe range.

 When the customized Program Auxiliary function is selected, wash performance and energy consumption differ from the specified value.

6.8.2 Functions/Programmes Selected by Pressing the Function Keys for 3 Seconds


• AntiCrease+

Pressing and holding the corresponding auxiliary function button for 3 seconds will select this function and the program tracking light of the corresponding step will illuminate. When this function is selected, the drum rotates for up to 8 hours to prevent the laundry from wrinkling at the end of the program. During this 8-hour period, you can cancel the program and take off your clothes at any time. Press the function selection key or the machine on/off key to cancel the function. The program tracking

light stays on until the function is cancelled or the step is complete. If the function is not cancelled, it remains active during subsequent wash cycles.


• Child Lock

Using the child Lock feature, you can prevent children from tampering with the machine. This way, you can prevent changes to an ongoing program.

 With the child Lock engaged, you can switch the machine on and off with the on/off button. When you start the machine again, the program resumes where it left off. If the buttons are pressed while child Lock is active, the audible warning sounds. If the buttons are pressed five times in a row, the buzzer cancels.

To activate child lock:

Press and hold the corresponding auxiliary function button for 3 seconds. When the "3-2-1" countdown on the display has ended, the child Lock icon appears on the display. When this warning appears, you can release auxiliary function button 3.

 You can activate the child lock function only after the program has started.

To deactivate the child lock:

Press and hold the corresponding auxiliary function button for 3 seconds. The child Lock icon disappears when the "3-2-1" countdown on the screen ends.

• Bluetooth

You can pair your machine with your smart device using the Bluetooth connection function. This way, you can get information about your machine and control it using your smart device.

To enable Bluetooth connection:

Press and hold the remote control function button for 3 seconds. The countdown "3-2-1" is displayed and the Bluetooth sym-

bol appears on the screen. Release the remote control function button. The Bluetooth icon blinks when the product is paired with the smart device. If the connection is successful, the icon remains on.

To disable Bluetooth connection:

Press and hold the remote control function button for 3 seconds. The countdown "3-2-1" is displayed and the Bluetooth symbol disappears on the screen.



The initial setup of the HomeWhiz app must be completed for the Bluetooth connection to be enabled. After installation, if you press the remote control function button while the button is in the Program Download/Remote Control position, Bluetooth connection is automatically activated.

6.9 End Time

Time display

When the end time function is selected, the remaining time until the programme starts is shown in hours such as 1h, 2h, and the remaining time to complete the programme after your programme starts is shown in hours and minutes as in the 01:30 example.




Programme duration may differ from the values in section "Programme and consumption table" depending on the water pressure, water hardness and temperature, ambient temperature, amount and the type of laundry, auxiliary functions selected and the changes at the mains voltage.




After a certain period when the end time function is activated, the machine switches to stand-by mode and some LEDs on the display are turned off. LEDs are illuminated in case of any user entry.

With the End Time function, the end time of the programme may be set up to 24 hours. After pressing End Time button, the programme's estimated ending time is displayed. If the End Time is set, End Time indicator is illuminated.

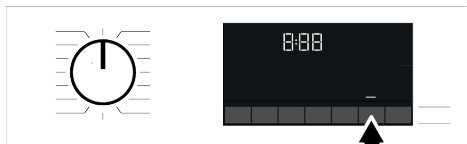

In order for the End Time function to be activated and the programme is completed at the end of the specified time, you must press Start/Pause button after adjusting the time.

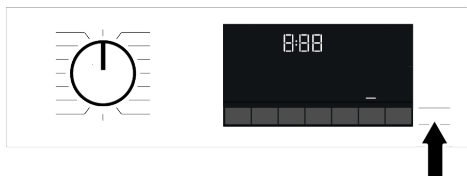


If you want to cancel End Time function, press On/Off button to turn off and on the machine.




When you have activated the End Time function, do not add liquid detergent in the powder detergent compartment no 2. There is the risk of staining of the clothes

1. Open the loading door, place the laundry and put detergent, etc.
2. Select the washing programme, temperature, spin speed and, if required, the auxiliary functions.
3. Set the End Time of your choice by pressing the End Time button. End Time indicator lights.
4. Press Start / Pause. Time countdown starts.


 Additional laundry can be added into the machine during the End Time countdown. At the end of the countdown, End Time indicator turns off, washing cycle starts and the time of the selected programme appears on the display.

6.10 Starting the Programme

1. Press Start / Pause button to start the programme.
2. The Start / Pause button's light which was off before starts to illuminate steadily now, indicating that the programme has started.

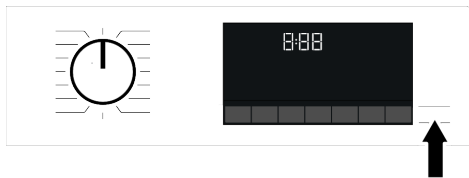

3. Loading door is locked. The door lock symbol appears on the display after the loading door is locked.

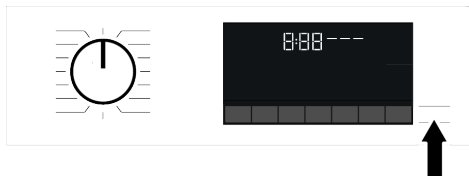


4. Programme follow-up indicator lights on the display will show the current programme step.

6.11 Loading Door Lock


There is a locking system on the loading door of the machine that prevents opening of the loading door in cases when the water level is unsuitable.


"Door Locked" symbol appears on the display when the loading door is locked.




 If the Remote Control Function is selected, the door will be locked. In order to open the door you must deactivate Remote Control Function by either pressing the Remote Control button or changing the programme position.

Opening the loading door in case of power failure:


 In case of power failure, you can use the loading door emergency handle under the pump filter cap to open the loading door manually.

 To avoid any water overflow before opening the loading door, make sure there is no water left inside the machine.

1. Turn off and unplug the appliance.
2. Open the pump filter lid.

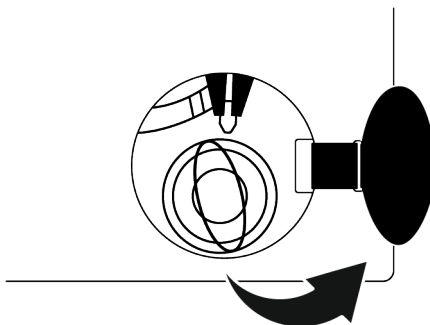


3. Pull down the loading door emergency handle with a tool and release. Then open the loading door.
4. If the loading door does not open then repeat the previous step.

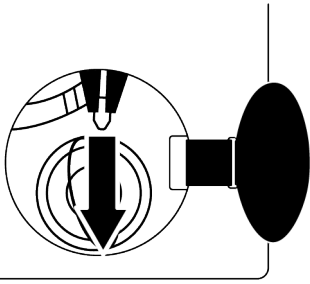


6.12 Changing the Selections After Programme has Started


Adding laundry after the programme has started :

If the water level in the machine is suitable when you press Start/Pause button, the door lock will be deactivated and the door will open, allowing you to add garments. The door lock symbol on the display goes off when the door lock is deactivated. After adding garments, close the door and press Start/Pause button once again to resume the washing cycle.

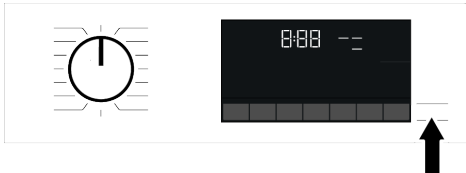


If the water level in the machine is not suitable when you press Start/Pause button, the door lock cannot be deactivated and the door lock symbol on the display remains on.

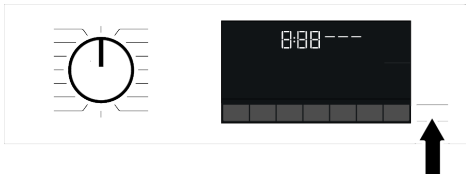


 If the temperature of the water inside the machine is above 50°C, you cannot deactivate the door lock for safety reasons, even if the water level is suitable.

Switching the machine to pause mode:
Press the Start/Pause button to switch the machine to pause mode. Pause symbol will flash on the display.

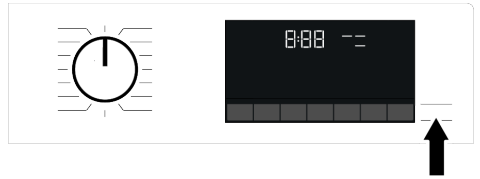

Changing the programme selection after programme has started:


The programme change is not allowed when the current programme is running. You can select the new programme after switching the current programme to pause mode.

 The selected programme starts anew.

Changing the auxiliary function, speed and temperature:

Depending on the step the programme has reached, you can cancel or activate the auxiliary functions. See "Auxiliary function selection"

You can also change the speed and temperature settings. See "Spin speed selection" and "Temperature selection".

 The loading door will not open if the water temperature in the machine is high or the water level is above the loading door baseline.

6.13 Cancelling the Programme

The programme is cancelled when programme selection knob is turned to a different programme or machine is turned off and on again using the programme selection knob.



If you turn the programme selection knob when the Child Lock is enabled, the programme will not be cancelled. You should cancel the Child Lock first.

If you want to open the loading door after you have cancelled the programme but if it is not possible to open the loading door since the water level in the machine is above the loading door baseline, then turn the Programme Selection knob to Pump+Spin programme and drain the water in the machine.

6.14 End of Programme

End symbol appears on the display when the programme is completed.

If you do not press any button for 10 minutes, the machine will switch to OFF mode. Display and all indicators are turned off.

Completed programme steps will be displayed if you press On/Off button.

6.15 HomeWhiz Feature and Remote Control Function

HomeWhiz enables you to control your washing machine by using your smart appliance and get information about the status of the machine. With HomeWhiz application, you can use your smart appliance to perform various operations on the machine. Furthermore, you can use some features only with HomeWhiz function.

In order to use the Bluetooth feature of your machine, you must download HomeWhiz application from the application store of your smart appliance.

Make sure your smart appliance is connected to the internet to install the application. If you are using the application for the first time, please follow the instructions on the screen to complete your user account registration. Once the registration procedure is complete, you can use all products with the HomeWhiz feature in your house on this account.

You can touch the "Appliances" tab in the HomeWhiz application to view appliances paired with your account. Following the installation of the application, HomeWhiz function enables the washing machine to send you instant notifications via your smart appliance.



In order to use the HomeWhiz function, the application must be installed on your smart appliance, and your washing machine must be paired with your smart appliance via Bluetooth. If your washing machine is not paired to your smart device it works as an appliance which does not have a HomeWhiz feature.

Your product will operate as paired to your smart device via bluetooth. The controls made by means of the application will be enabled through this pairing. Therefore the bluetooth signal strength between the appliance and the smart device must be adequate.

Please visit www.homewhiz.com to see the Android and iOS versions supported by the HomeWhiz application.



All the safety measures described in "**GENERAL SAFETY INSTRUCTIONS**" section of your user manual apply to the remote operation through HomeWhiz function as well


6.15.1 HomeWhiz Setup

In order run the application, a connection must be established between your appliance and HomeWhiz application. In order to establish this connection, you must follow the steps given below for the setup process on both your appliance and the HomeWhiz Application.


1. If you are adding a device for the first time, touch "Appliances" tab on the HomeWhiz Application. Select "ADD AP-

PLIANCE" (touch here for setting up a new appliance) button in the upper right corner. Perform the setup by following both the steps below and the steps in the HomeWhiz Application.

2. To start the setup, make sure that your machine is turned off. Press and hold the Temperature button and the Remote Control Function button simultaneously for 3 seconds to switch your machine to HomeWhiz setup mode.

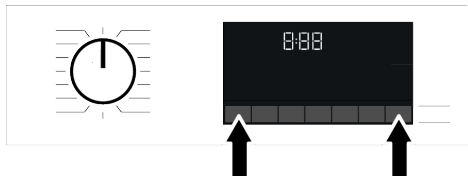

3. When the appliance is in HomeWhiz setup mode, you will see an animation on the display and the bluetooth icon will flash until your machine gets paired with smart device. Only programme knob will be active in this mode. Other buttons will be inactive.

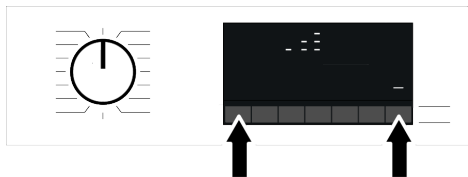

4. Follow the instructions in display of HomeWhiz application.
5. Wait until the installation is complete. Once the setup is completed, give your washing machine a name. Now, you can tap and see the product you have added in the HomeWhiz Application.




If you cannot successfully perform the setup within 5 minutes, your washing machine will turn off automatically. In this case, you will have to start over the setup procedure. If the problem persists contact the Authorised Service Agent.


You can use your washing machine with more than one smart appliance. In order to do this, download the HomeWhiz application to the other smart appliance. When you launch the application, you must log into the account you previously created and paired with your washing machine. Otherwise, please read "Setting up a washing machine that is connected to someone else's account".



You need internet connection on your smart device to proceed with HomeWhiz setup. Otherwise, the HomeWhiz application will not let you finish the setup procedure successfully. Please contact your internet service provider if you are having problems with your internet connection.

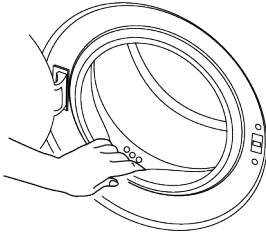

HomeWhiz Application may require you to type the product number shown on the product label. You can find the product label inside of the appliance door. The product number is located on this label.

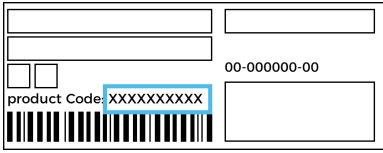

6.15.2 Setting up a Washing Machine Connected to Someone Else's Account

If the washing machine you want to use was previously introduced to the system with someone else's account, you must establish a new connection between your HomeWhiz Application and the appliance.

1. Download HomeWhiz Application on the new smart device you want to use.
2. Create a new account and log in to this account on the HomeWhiz app.
3. Follow the steps described in HomeWhiz Setup Setup and proceed with the setup procedure.



Due to the pairing process of your product's HomeWhiz Feature and Remote Control function using Bluetooth or Wi-Fi technology (depending on the model), it is important to note that only one HomeWhiz application can operate your product at any given time.

6.15.3 Remote Control Function and Using It

Bluetooth is automatically turned on after setting up HomeWhiz. To activate or deactivate the Bluetooth connection, please see Bluetooth 3".

If you turn off and on your machine while bluetooth is active, it will automatically reconnect. In cases such as paired device going off the range, bluetooth will automatically turn off. For this reason, you will need to turn on the bluetooth again if you want to use the Remote Control function.

You can check the bluetooth symbol on the display to track your connection status. If the symbol is continuously on, you have bluetooth connection. If the symbol is flashing, the product is trying to connect. If the symbol is off, it means you are not connected.




If the Bluetooth connection is turned on in your product, then the Remote Control function can be selected.

If the Remote Control function cannot be selected, check the connection status. If the connection cannot be established, repeat the initial setup settings on the appliance.

NOTICE: For safety reasons, the product's door will remain locked while the Remote Control function is enabled, independently of the operating mode. If you want to open the door of the product, you will need to turn the programme selection knob or press the remote control key to deactivate the remote control function.

If you want to control your washing machine remotely, you need to activate the Remote Control function by pressing the Remote Control button while the programme knob is in the Download Programme/Remote Control position button on the control panel of your washing machine after clos-

ing the front door. Once access is established to the product, you will see a screen similar to the one below.

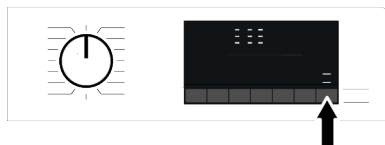

When the Remote Control is on, you can only manage, turn-off and status follow-up operations through your washing machine. And all functions except child lock can be managed through the application.

You can monitor from the function indicator on the button whether the Remote Control function is on or off.

If the Remote Control function is off, all operations are performed over the machine, only the performance of status follow-up is allowed over the application.

If the Remote Start function cannot be turned on, you will hear a warning sound when you press the button. This may be experienced if the appliance is turned on and there is no appliance paired with Bluetooth. As an example for these cases; the Bluetooth setting is turned off or the product cover is open.

When you activate this function in the washing machine, this function remains active except under certain circumstances and allows you to control your washing machine remotely via Bluetooth.

Under certain conditions, it is automatically disabled for safety reasons:

- When your machine's power is cut.

7 Maintenance and Cleaning



Please read the "Safety Instructions" section first!

Service life of your product extends and frequently experienced problems will be reduced if it is cleaned at regular intervals.

- When the program button is turned and a different program is selected or the appliance is turned off.

6.15.4 Troubleshooting

Do the following if you have a problem with controlling or connection. Observe whether the problem persists or not after the action you have performed.

1. Check whether your smart device is connected to the relevant home network.
2. Restart the product application.
3. Turn Bluetooth or Wi-Fi off and on via the control panel, depending on the model of your product.
4. If the connection cannot be established with the above processes, repeat the initial set-up settings on the washing machine.

If the problem persists, consult an Authorised Service Agent.

6.16 Drum Illumination

Drum illumination lamp of your machine will light up during programme selection. The lamp will go off 10 minutes after the programme starts. If no programme is started or no key is pressed within 10 minutes during programme selection process, the drum illumination lamp will go off.

Drum illumination lamp of your machine will light up after the programme is completed. When you turn off your machine, the lamp turns off. The drum illumination lamp will go off if you do not press any button within 10 minutes after the programme has ended.

7.1 Cleaning the Detergent Drawer

When to clean

- When you open the dosing tank cover and see a thickened non-fluid detergent or softener,


- If you are not satisfied with the washing results, it may be that the detergent or softener has become stiff and therefore cannot be taken into the washing area,
- If the liquid in the tank does not decrease although dosing is selected and you do not load detergents or softeners for a long time,
- If you want to change the washing ingredients you have filled in the chamber (for example, if you are not satisfied with the detergent and do not want to use it) or if you have done incorrect loading (for example, if you have placed detergent or softener in the detergent tank),
- If a different brand of detergent or softener will be added,
- If a washing agent with different specifications (e.g. if detergent is added for coloured ones when there is detergent in the tank for whites) is added,
- If a different-concentration washing agent is added (to avoid wasting the previously filled detergent, you can put them in the powder detergent compartment in the next washing and consume it by selecting the «powder detergent active» position on the screen.)
- If the new softener has the same specifications but only a different scent, (it should be noted that the scent of the mixture will be different if it is added without cleaning the remaining softener),
- If it is not going to be used for a long time (e.g. at the time of moving to the summer house and at the time of return, for 3 months or more), the liquid washing agent may become denser and may become stiffer at the end, and may not make dosing although the system indicates full.

Cleaning:


Before starting cleaning, unplug your appliance by pressing the On/Off button.




It is recommended to wear a suitable glove so that you do not come into direct contact with the detergent and other washing materials that you will empty from the detergent drawer.

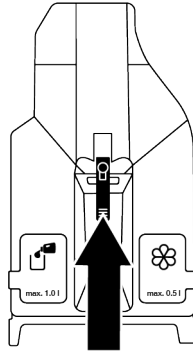

1. Press the blue part in the middle of the detergent drawer to pull it towards you and remove it.

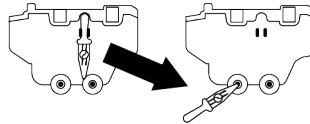


2. Remove the drain stick located at the back of the drawer from its slot.
3. Place the slot behind the detergent drawer to be emptied towards the inside of the compartment to be emptied.
4. Gently push the drain stick into the slot behind the detergent compartment.
5. The detergent will start to pour into the container.
6. The same is carried out for the softener compartment.

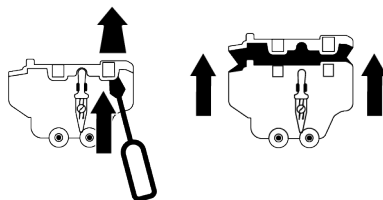


7. The guides holding the top cover of the detergent drawer are removed with a flathead screwdriver (there are total of 6 guides, two each on the right, left and back of the drawer) and the inside of the drawer is washed.
8. After the completion of the washing process, the cover is inserted to the drawer. Make sure that all guides are in place. If the guides do not fit, liquid may spill from the drawer, or the detergent box may get trapped in the drawer rail or move in difficulty. Therefore, make sure that the guides are firmly seated.
9. Insert the drain stick back into its slot in the back of the drawer.
10. Refit the drawer by paying attention to its slot and slides and push the drawer to close. Once detergents and softeners are added, they will be ready for use in dosed programs.

7.2 Cleaning the Loading Door and the Drum

For products with drum cleaning programme, please see the Operating the product section.

 Repeat Drum Cleaning process in every 2 months.
NOTICE: Use an anti-limescale suitable for the washing machines.

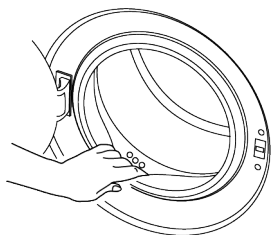

After every washing make sure that no foreign substance is left in the product. If the holes on the door gasket shown in the figure is blocked, open the holes using a toothpick.

Foreign metal substances will cause rust stains in the drum. Clean the stains on the drum surface by using cleaning agents for stainless steel.

Never use steel wool or wire wool. These will damage the painted, chrome coated and plastic surfaces.


We recommend you to wipe the door gasket with a dry and clean cloth at the end of the programme. This will remove residues on the door gasket in your machine and prevent formation of malodours.

7.3 Cleaning the Body and Control Panel

Wipe the body of the product with soapy water or non-corrosive mild gel detergents as necessary, and dry with a soft cloth. Use only a soft and damp cloth to clean the control panel. Do not use cleaning products that contain bleach

7.4 Cleaning the Water Intake Filters

There is a filter at the end of each water intake valve at the rear of the product and also at the end of each water intake hose where they are connected to the tap. These filters prevent foreign substances and dirt in the water to enter the product. Filters should be cleaned if they are dirty.

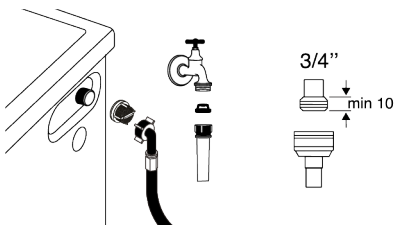

1. Close the taps.
2. Remove the nuts of the water intake hoses to access the filters on the water intake valves and clean them with an appropriate brush. If the filters are too dirty, remove them from their places with a pliers and clean in this way.

3. Take out the filters on the flat ends of the water intake hoses together with the gaskets and clean thoroughly under running water.
4. Replace the gaskets and filters carefully and tighten their nuts by hand.

7.5 Draining Remaining Water and Cleaning the Pump Filter

The filter system in your product prevents solid items such as buttons, coins and fabric fibres clogging the pump impeller during draining of washing water. Thus, the water will be drained without any problem and the service life of the pump will extend.

If the product fails to drain water inside it, the pump filter is clogged. Filter must be cleaned whenever it is clogged or in every 3 months. Water must be drained off first to clean the pump filter.

In addition, prior to transporting the product (e.g., when moving to another house) water should be drained completely.



NOTICE:

Foreign substances left in the pump filter may damage your product or may cause noise problem.

In regions where freezing is possible, the tap must be closed, system hose must be removed and the water inside the product must be drained when the product is not in use.

After each use, turn off the tap to which the mains hose is connected.


In order to clean the dirty filter and drain the water:

1. Unplug the product to cut off the supply power.




Temperature of the water inside the product may rise up to 90 °C. To avoid the risk of scalding, clean the filter after the water inside the product is cooled down.

2. Open the filter cover.

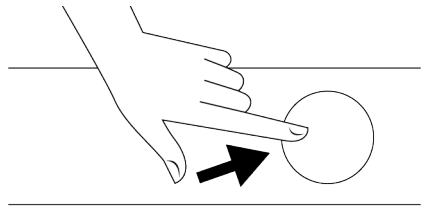

3. Follow the below procedures in order to drain water.

 If the product has an emergency water draining hose, in order to drain the water:



- Pull the emergency draining hose out of its seat.
 - Place the end of the hose in a large container. Drain the water into the container by pulling out the plug at the end of the hose. When the container is filled, close the end of the hose with the plug. Drain all water by repeating the procedure specified above after draining the container.
 - When the water drain is finished, close the end with the plug again and fix the hose in its place.
 - Unscrew the pump filter.
1. Clean any residues inside the filter as well as fibres, if any, around the pump impeller region.
 2. Replace the filter.
 3. If the filter cap is composed of two pieces, close the filter cap by pressing on the tab. If it is one piece, seat the tabs in the lower part into their places first, and then press the upper part to close.

8 Troubleshooting



Please read the "Safety Instructions" section first!

Programmes do not start after the loading door is closed.

- Start / Pause /Cancel button might not be pressed. >>> * Press the Start / Pause /Cancel button.
- It may be difficult to close the loading door in case of excessive loading. >>> Reduce the amount of laundry and make sure that the loading door is closed properly.

Programme cannot be started or selected.

- The product has switched to self-protection mode due to a supply problem (line voltage, water pressure, etc.). >>> Depending on the product model, select another program by turning the Program Selection button or pressing and holding the On/Off button for 3 seconds to cancel the program. Previous programme will be cancelled. See Cancelling the Programme ► 34]

Water inside the product.

- Some water has remained in the product due to the quality control processes in the production. >>> This is not a failure; water is not harmful to the product.

The product does not take water in.

- Tap is turned off. >>> Turn on the taps.
- Water inlet hose is bent. >>> Flatten the hose.
- Water inlet filter is clogged. >>> Clean the filter.
- Loading door is not closed. >>> Close the door.

The product does not drain water.

- Water drain hose is clogged or twisted. >>> Clean or flatten the hose.
- Pump filter is clogged. >>> Clean the pump filter.

Product vibrates or makes noise.

- Product is standing unbalanced. >>> Adjust the stands to balance the product.
- A hard substance has entered into the pump filter. >>> Clean the pump filter.
- Transportation safety bolts are not removed. >>> Remove the transportation safety bolts.
- Laundry quantity in the product is too little. >>> Add more laundry to the product.
- Excessive laundry is loaded in the product. >>> Take out some of the laundry from the product or distribute the load by hand to balance it homogeneously in the product.
- Product is leaning on a rigid item. >>> Make sure that the product is not leaning on anything.

There is water leaking from the bottom of the product.

- Water drain hose is clogged or twisted. >>> Clean or flatten the hose.
- Pump filter is clogged. >>> Clean the pump filter.

Product stopped shortly after the programme started.

- Machine has stopped temporarily due to low voltage. >>> Product will resume running when the voltage restores to the normal level.

Product directly drains the water it takes in.

- Draining hose is not at adequate height. >>> Connect the water draining hose as described in the user manual.

No water can be seen in the product during washing.

- Water is inside the invisible part of the product. >>> This is not a failure.

Loading door cannot be opened.

- Loading door lock is activated because of the water level in the product. >>> Drain the water by running the Pump or Spin programme.

- Product is heating up the water or it is at the spinning cycle. >>> Wait until the programme completes.
- Loading door may be stuck because of the pressure it is subjected to. >>> Grab the handle and push and pull the loading door to release and open it.
- If there is no power, loading door of the product will not open. >>> To open the loading door, open the pump filter cap and pull down the emergency handle positioned at the rear side of the said cap. See Loading Door Lock [► 33]

Washing takes longer than specified in the user manual. (*)

- Water pressure is low. >>> Product waits until taking in adequate amount of water to prevent poor washing quality due to the decreased amount of water. Therefore, the washing time extends.
- Voltage is low. >>> Washing time is prolonged to avoid poor washing results when the supply voltage is low.
- Input temperature of water is low. >>> Required time to heat up the water extends in cold seasons. Also, washing time can be lengthened to avoid poor washing results.
- Number of rinses and/or amount of rinsing water have increased. >>> Product increases the amount of rinsing water when good rinsing is needed and adds an extra rinsing step if necessary.
- Excessive foam has occurred and automatic foam absorption system has been activated due to too much detergent usage. >>> Use recommended amount of detergent.

Programme duration does not countdown. (On models with display) (*)

- Timer may stop during water intake. >>> Timer indicator will not countdown until the product takes in adequate amount of water. The product will wait until there is sufficient amount of water to avoid poor washing results due to lack of water. Timer indicator will resume countdown after this.

- Timer may stop during heating step. >>> Timer indicator will not countdown until the product reaches the selected temperature.
- Timer may stop during spinning step. >>> Automatic unbalanced load detection system is activated due to the unbalanced distribution of the laundry in the product.

Programme duration does not countdown. (*)

- There is unbalanced load in the product. >>> Automatic unbalanced load detection system is activated due to the unbalanced distribution of the laundry in the product.

Product does not switch to spinning step. (*)

- There is unbalanced load in the product. >>> Automatic unbalanced load detection system is activated due to the unbalanced distribution of the laundry in the product.
- The product will not spin if water is not drained completely. >>> Check the filter and the draining hose.
- Excessive foam has occurred and automatic foam absorption system has been activated due to too much detergent usage. >>> Use recommended amount of detergent.

Washing performance is poor: Laundry turns gray. ()**

- Insufficient amount of detergent has been used over a long period of time. >>> Use the recommended amount of detergent appropriate for water hardness and the laundry.
- Washing has been made at low temperatures for a long time. >>> Select the proper temperature for the laundry to be washed.
- Insufficient amount of detergent is used with hard water. >>> Using insufficient amount of detergent with hard water causes the soil to stick on the cloth and this turns the cloth into gray in time. It is difficult to eliminate graying once it hap-

pens. Use the recommended amount of detergent appropriate for water hardness and the laundry.

- Excessive amount of detergent is used. >>> Use the recommended amount of detergent appropriate for water hardness and the laundry.

Washing performance is poor: Stains persist or the laundry is not whitened. ()**

- Insufficient amount of detergent is used. >>> Use the recommended amount of detergent appropriate for water hardness and the laundry.
- Excessive laundry is loaded in. >>> Do not load the product in excess. Load with amounts recommended in the "Programme and consumption table".
- Wrong programme and temperature were selected. >>> Select the proper programme and temperature for the laundry to be washed.
- Wrong type of detergent is used. >>> Use original detergent appropriate for the product.
- Excessive amount of detergent is used. >>> Put the detergent in the correct compartment. Do not mix the bleaching agent and the detergent with each other.

Washing performance is poor: Oily stains appeared on the laundry. ()**

- Regular drum cleaning is not applied. >>> Clean the drum regularly. For this procedure, see Cleaning the Loading Door and the Drum [► 40]

Washing performance is poor: Clothes smell unpleasantly. ()**

- Odours and bacteria layers are formed on the drum as a result of continuous washing at lower temperatures and/or in short programmes. >>> Leave the detergent drawer as well as the loading door of the product ajar after each washing. Thus, a humid environment favourable for bacteria cannot occur in the machine

Colour of the clothes faded. ()**

- Excessive laundry was loaded in. >>> Do not load the product in excess.

- Detergent in use is damp. >>> Keep detergents closed in an environment free of humidity and do not expose them to excessive temperatures.
- A higher temperature was selected. >>> Select the proper programme and temperature according to the type and soiling degree of the laundry.

Washing machine does not rinse well.

- The amount, brand and storage conditions of the detergent used are inappropriate. >>> Use a detergent appropriate for the washing machine and your laundry. Keep detergents closed in an environment free of humidity and do not expose them to excessive temperatures.
- Detergent was put in the wrong compartment. >>> If detergent is put in the prewash compartment although prewash cycle is not selected, the product can take this detergent during rinsing or softener step. Put the detergent in the correct compartment.
- Pump filter is clogged. >>> Check the filter.
- Draining hose is folded. >>> Check the drain hose.

Laundry became stiff after washing. ()**

- Insufficient amount of detergent is used. >>> Using insufficient amount of detergent for the water hardness can cause the laundry to become stiff in time. Use appropriate amount of detergent according to the water hardness.
- Detergent was put in the wrong compartment. >>> If detergent is put in the prewash compartment although prewash cycle is not selected, the product can take this detergent during rinsing or softener step. Put the detergent in the correct compartment.
- Detergent was mixed with the softener. >>> Do not mix the softener with detergent. Wash and clean the drawer with hot water.

Laundry does not smell like the softener. ()**

- Detergent was put in the wrong compartment. >>> If detergent is put in the pre-wash compartment although prewash cycle is not selected product, the can take this detergent during rinsing or softener step. Wash and clean the drawer with hot water. Put the detergent in the correct compartment.
- Detergent was mixed with the softener. >>> Do not mix the softener with detergent. Wash and clean the drawer with hot water.
- Softener dosage setting may be in low level. >>> Increase the softener dosage amount by one level. See "Automatic Dosage Setting".

Detergent residue in the detergent drawer. ()**

- Detergent was put in wet drawer. >>> Dry the detergent drawer before putting in detergent.
- Detergent has gotten damp. >>> Keep detergents closed in an environment free of humidity and do not expose them to excessive temperatures.
- Water pressure is low. >>> Check the water pressure.
- The detergent in the main wash compartment got wet while taking in the prewash water. Holes of the detergent compartment are blocked. >>> Check the holes and clean if they are clogged.
- There is a problem with the detergent drawer valves. >>> Call the Authorised Service Agent.
- Detergent was mixed with the softener. >>> Do not mix the softener with detergent. Wash and clean the drawer with hot water.
- Regular drum cleaning is not applied. >>> Clean the drum regularly. For this procedure, see Cleaning the Loading Door and the Drum [► 40]

Too much foam forms inside the product. ()**

- Improper detergents for the washing machine is used. >>> Use detergents appropriate for the washing machine.
- Excessive amount of detergent is used. >>> Use only sufficient amount of detergent.
- Detergent was stored under improper conditions. >>> Store detergent in a closed and dry location. Do not store in excessively hot places.
- Some meshed laundry such as tulle may foam too much because of their texture. >>> Use smaller amounts of detergent for this type of item.
- Detergent was put in the wrong compartment. >>> Make sure you place the detergent in the appropriate compartment.

Foam is overflowing from the detergent drawer.

- Too much detergent is used. >>> Mix 1 tablespoonful softener and ½ l water and pour into the main wash compartment of the detergent drawer. >>> Put detergent into the product suitable for the programmes and maximum loads indicated in the "Programme and consumption table". When you use additional chemicals (stain removers, bleaches and etc.), reduce the amount of detergent.

Laundry remains wet at the end of the programme. (*)

- Excessive foam has occurred and automatic foam absorption system has been activated due to too much detergent usage. >>> Use recommended amount of detergent.

(*) The product does not switch to spinning step when the laundry is not evenly distributed in the drum to prevent any damage to the product and to its surrounding environment. Laundry should be rearranged and respun.

(**) Regular drum cleaning is not applied. Clean the drum regularly. See Cleaning the Loading Door and the Drum [► 40]



If you cannot eliminate the problem although you follow the instructions in this section, consult your dealer or the Authorised Service Agent. Never try to repair a nonfunctional product yourself.



Check the HomeWhiz section for the relevant troubleshooting information.

9 DISCLAIMER / WARNING

Some (simple) failures can be adequately handled by the end-user without any safety issue or unsafe use arising, provided that they are carried out within the limits and in accordance with the following instructions (see the “Self-Repair” section).

Therefore, unless otherwise authorized in the “Self-Repair” section below, repairs shall be addressed to registered professional repairers in order to avoid safety issues. A registered professional repairer is a professional repairer that has been granted access to the instructions and spare parts list of this product by the manufacturer according to the methods described in legislative acts pursuant to Directive 2009/125/EC.

However, only the service agent (i.e. authorized professional repairers) that you can reach through the phone number given in the user manual/warranty card or through your authorized dealer may provide service under the guarantee terms. Therefore, please be advised that repairs by professional repairers (who are not authorized by Beko) shall void the guarantee.

Self-Repair

Self-repair can be done by the end-user with regard to the following spare parts: door, door hinge and seals, other seals, door locking assembly and plastic peripherals such as detergent dispensers (an updated list is also available in support.beko.com as of 1st of March 2021)

Moreover, to ensure product safety and to prevent risk of serious injury, the mentioned self-repair shall be done following the instructions in the user manual for self-repair

or which are available in support.beko.com For your safety, unplug the product before attempting any self-repair.

Repair and repair attempts by end-users for parts not included in such list and/or not following the instructions in the user manuals for self-repair or which are available in support.beko.com , might give rise to safety issues not attributable to support.beko.com , and will void the warranty of the product.

Therefore, it is highly recommended that end-users refrain from the attempt to carry out repairs falling outside the mentioned list of spare parts, contacting in such cases authorized professional repairers or registered professional repairers. On the contrary, such attempts by end-users may cause safety issues and damage the product and subsequently cause fire, flood, electrocution and serious personal injury to occur.

By way of example, but not limited to, the following repairs must be addressed to authorized professional repairers or registered professional repairers: motor, pump assembly, main board, motor board, display board, heaters etc.

The manufacturer/seller cannot be held liable in any case where end-users do not comply with the above

The spare part availability of the washing machine or washer-dryer that you purchased is 10 years. During this period, original spare parts will be available to operate the washing machine or washer-dryer properly.

BEKO UK AND ROI STANDARD MANUFACTURER GUARANTEE TERMS AND CONDITIONS

Your new Beko product is guaranteed against faulty materials, defective components or manufacturing defects.

The standard guarantee starts from the date of original purchase of the product and lasts for a period of twelve (12) months unless Beko plc (the "Manufacturer") agrees to extend the guarantee for the product in writing.

If you have purchased an American style Fridge freezer, the standard guarantee starts from the date of original purchase of the product, and lasts for a period of twenty four (24) months unless Beko plc (the "Manufacturer") agrees to extend the guarantee for the product in writing.

If you have any questions about the guarantee on your product (including how long it is valid), please contact your retailer or our Customer Service Team on 0333 207 9710 (UK and Northern Ireland) or 01 862 3411 (Republic of Ireland)

This guarantee does not in any way diminish or affect your statutory rights in connection with the product. This guarantee is in addition to your statutory rights as a consumer. If you have any questions about these rights, please contact the retailer from which you purchased the product. In certain circumstances, it is possible that your statutory rights may offer additional or higher levels of protection than those offered under the terms of this guarantee.

What is covered by this guarantee?

- Repairs to the product required as a result of faulty materials, defective components or manufacturing defects.
- Functional replacement parts to repair a product.
- The costs of a Beko plc Authorised Service Representative or Approved Engineer (together the "Service Representatives") to carry out the repair.

What is not covered?

- Transit and delivery damage.
- Cabinet or appearance parts, including but not limited to control knobs, flaps and handles.
- Accessories and/or consumable items including but not limited to ice trays, scrapers, cutlery baskets, filters and lightbulbs.
- Repairs necessary as a direct or indirect result of:
 - Accidental damage, misuse or abuse of a product.
 - An attempted repair of a product by anyone other than a Service Representative.
 - Installation or use of a product where such installation or use fails to meet the requirements contained in this guarantee or the User Instructions Booklet.
- Repairs to a product operated at any time on commercial or non-residential household premises (unless we have previously agreed to the installation environment).

This guarantee is limited to the cost of repairing the product. To the extent permitted by law, the Manufacturer does not accept and will not be held liable for any financial loss incurred in connection with the failure of any product to operate in accordance with the expected standards. Such financial loss includes but is not limited to loss arising from:

- Time taken off work.
- Damaged food, clothing or other items.
- Meals taken at restaurants or from takeaways.
- General compensation for inconvenience.

Important Notes

1. Your product is designed and built for domestic household use only.
2. The guarantee will automatically be void if the product is installed or is used in commercial or non-residential domestic household premises, unless we have previously agreed to the installation environment.
3. The product must be correctly installed, located and operated in accordance with the instructions contained in the User Instructions Booklet provided with your product.
4. Professional installation by a qualified electrical domestic appliance installer is recommended for all Washing Machines, Dishwashers and Electric Cookers (as incorrect installation may result in you having to pay for the cost of repairing the product).
5. Gas Cookers must be professionally installed by a Gas Safe (or Gas Networks Ireland for Republic of Ireland) registered gas installer.
6. This guarantee is given in respect of products purchased and used within the United Kingdom and the Republic of Ireland.
7. This guarantee is effective from the initial date of purchase of a new product from an authorised retailer and will be void if the product is resold.
8. This guarantee does not apply to graded sales (where the product is purchased as a "second").
9. Possession of a copy of these terms and conditions does not necessarily mean that a product has the benefit of this guarantee. If you have any questions, please call our Customer Service Team on the number set out above.
10. The Manufacturer reserves the right to terminate the guarantee if its staff or representatives are subjected to physical or verbal abuse in the course of carrying out their duties.
11. Optional extras, where available (i.e. extendable feet) are supplied on a chargeable basis only.

Does Beko offer replacements?

This is a repair-only guarantee. On occasion, the Manufacturer may at its sole discretion, replace your product with a new product instead of carrying out a repair. Where a replacement is offered, this would normally be an identical model but when this is not possible, a model of similar specification will be provided. Subject to agreement, the Manufacturer will cover the costs and arrange for the delivery of the new product and for the return of the old product. Any costs related to disconnecting the faulty product and installing the replacement product will not be borne by the Manufacturer unless previously agreed to in writing. The original guarantee will continue to apply to the replacement product; the new product will not come with a new guarantee.

When will the repair take place?

Our Service Representatives work Monday to Friday 9.00am to 5.00pm. Appointments outside these hours may be possible at the sole discretion of the Manufacturer but cannot be guaranteed. Whilst our Service Representatives will endeavour to minimize inconvenience and to meet requests for specific timed appointments, this cannot be guaranteed. We will not be liable for delays or if it is unable to carry out a repair because a convenient appointment cannot be arranged.

Will there be any charge for the repairs?

It is your responsibility to provide evidence to the Service Representative that your product is covered by this guarantee with a proof of purchase. The Manufacturer reserves the right to charge for the reasonable cost of any service call if:

- You cannot provide evidence that your product is covered by this guarantee.

- Where a service call has been made and the Service Representative finds that there is no fault with your product.
- That your product has not been installed or operated in accordance with the User Instructions Booklet.
- That the fault was caused by something other than faulty materials, defective components or manufacturing defects.
- For missed appointments.

Payment of these costs are due immediately upon the Service Representative providing you with an invoice. The Manufacturer reserves the right to terminate the guarantee if you fail to pay the costs for the service call in a timely manner.

If you are a resident of the United Kingdom, this guarantee will be governed by English law and subject to the exclusive jurisdiction of the English Courts, save where you live in another part of the United Kingdom, in which case the governing law and exclusive jurisdiction of the courts of that country will apply.

If you are resident in the Republic of Ireland, this guarantee will be governed by Irish law and the Irish courts will have exclusive jurisdiction.

This guarantee is provided by Beko plc. Beko House, 1 Greenhill Crescent, Watford, Hertfordshire. WD18 8QU.

Beko plc is registered in England and Wales with company registration number 02415578.

BEKO UK AND ROI BUILT-IN APPLIANCES GUARANTEE TERMS AND CONDITIONS

If you have purchased a built-in or integrated appliance, and registered it within 90 days of purchase by completing the online registration form, then the standard 12 month guarantee will be extended to 24 months, under the same terms and conditions as detailed in our Standard Guarantee Terms and Conditions.

BEKO UK AND ROI PARTS GUARANTEE TERMS AND CONDITIONS

This 10 year parts guarantee relates to Beko products.

To confirm if your Beko appliance has our 10-year parts guarantee you can visit our website at beko.co.uk/guarantee-terms or telephone our registrations team on 0800 497 0732. The Parts guarantee terms and conditions are in addition to our Standard guarantee terms and conditions detailed in the previous section.

In order to activate the 10 year parts guarantee you MUST register the appliance within 90 days of the original purchase date. You can register by visiting our websites. For UK customer visit beko.co.uk/register or phone 0800 497 0732. For ROI customers visit beko.ie/register or phone 1800 911 690. Our Beko branded appliances carry FREE replacement parts for the first 10 years, provided they are fitted by our Service Representatives, at the applicable labour charge.

Beko free standing appliances come with a 12 month parts and labour guarantee as standard.

Beko built-in, integrated appliances or American fridge freezers come with a 12 month parts and labour guarantee as standard. This is extended to 24 months, free of charge, upon registration of the appliance. When you register your appliance for additional guarantee, you will automatically activate the 10 year parts guarantee. You do not need to register twice.

To make a claim against your Beko Parts Guarantee (the "Guarantee"), all customer and product details must be registered with Beko plc using the procedure outlined below:

1. This extra 9 years (for free standing appliances) or 8 years (for built-in or integrated appliances or American fridge freezers) guarantee is only effective after the expiration of the standard manufacturer's guarantee.

2. It is only valid for certain models of Beko branded products serviced or repaired by Beko plc Authorised Service Representative and Own Engineers (the "Service Representative") and does not cover any labour charge or any:
 - a. Components including but not limited to cabinet or appearance parts, control knobs, flaps and handles.
 - b. Accessories and/or consumable items including but not limited to ice trays, scrapers, cutlery baskets, filters and light bulbs.
3. To activate your guarantee, you MUST register your appliance within 90 days of the original purchase date, For UK customers, visit beko.co.uk/register or phone 0800 497 0732. For ROI customers visit beko.ie/register or phone 1800 911 690.
4. Registrations made after 90 days of the original purchase date, may be required to pay an additional fee to activate the 10 year free parts guarantee.
5. Any repair must be carried out by a Service Representative and booked directly with Beko plc.
6. Labour for the repair is not included in this guarantee and is chargeable at the time of booking a repair.
7. The repair is guaranteed for 12 months for the same defect.
8. In the unlikely event that the appliance is beyond economical repair we may at the sole discretion of Beko plc offer you an appliance at a reduced price. Our call out fee will still apply.
9. If the fault can't be identified and the appliance is functioning normally a call out fee will apply.
10. The guarantee is not transferable and cannot be exchanged for cash.
11. There are no alternative or additional offers to this guarantee.
12. The guarantee is exclusive of the manufacturer's standard guarantee.
13. All repair pricing can be found here beko.co.uk/guarantee-terms (UK & ROI). Alternatively contact our Customer Services Team for further information.
14. All prices are subject to change without notice.
15. The Terms and Conditions shown above are in addition to the standard terms and conditions of your product guarantee. Please read and refer to such Terms and Conditions when making any claim.
16. We may use the information you provide for marketing purposes and to analyse your purchasing preferences. We may keep your information for a reasonable period for these purposes in accordance with the applicable Data Protection Laws and General Data Protection Regulations (GDPR). You can opt into this service during the registration process. Further details are available at beko.co.uk/cookie-and-privacy-policy
17. These Terms and Conditions are governed by the laws of England and Wales; manufacturer: Beko plc, Beko House, 1 Greenhill Crescent, Watford WD18 8QU. Company Registration Number: 02415578.

HOW TO OBTAIN SERVICE FOR YOUR APPLIANCE

Please keep your purchase receipt or other proof of purchase details in a safe place; you will need to have this documentation available should the product require attention under guarantee.

Please take a few moments to complete the details below, as you will need this information when you call us, or to use our online services. For help please visit beko.co.uk/support/model-finder

- The product model number is printed on the Operating Instruction Booklet / User guide
- The product model and serial number is printed on the Rating Label affixed to the appliance.

- The Retailer (Purchased from) and Date of purchase will be printed on your purchase receipt or other proof of purchase paperwork

Recording of these details alone will not count as proof of purchase. A valid proof of purchase is required for requesting service under guarantee.

Model number	Serial number	Purchased from	Date of purchase

For service under guarantee or for product advice please call our Customer Service Team

Before requesting service please check the troubleshooting guide in the Operating Instructions booklet or our video support found beko.co.uk/support/how-to-guides, as a charge may be levied where no fault is found, even though your product may still be under guarantee.

After arranging a service visit please ensure the area around the product must be easily accessible to the Service Representative, without the need for cabinets or furniture to be removed or moved.

It is your responsibility to ensure our Service Representatives have a clean and safe environment to carry out any repairs.

Please have your Model number and Serial number available when you call us, as you will be required to provide it prior to booking a service visit

UK Mainland & Northern Ireland:

0333 207 9710

Landline or mobile calls to 0333 numbers cost no more than calls to geographic numbers 01 or 02 and are charged at the basic rate. Calls from landlines and mobiles are included in free call packages but please check with your telephone service provider for exact call charges.

Republic of Ireland:

01 862 3411

Service once the manufacturers guarantee has expired

If you have purchased an extended guarantee please refer to the instructions contained within the extended guarantee agreement document, otherwise please call us using the appropriate number above, where service can be obtained at a charge.

If you do not have any extended guarantee you can call the Customer Services Team for UK customers on **0330 123 1750** and ROI customers on **01 862 3411**

Contact us through our website

Send us a secure message through our online contact us form. Please visit our website, click Contact Us and choose a product support topic from the list of options. Complete the required details and click send message.

Product registrations

For UK registrations please visit beko.co.uk/register and for the Republic of Ireland visit beko.ie/register.

