



Dishwasher
User Manual



BDEN38560CHPA

15 2566 0100/ EN/ AA/ 26/04/2024 16:24
7610593877



Please read this manual first!

Dear Customer,




Beko thank you for choosing the product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product.

Follow all warnings and information in the user manual. By this way, you will protect yourself and your product against possible dangers.

Keep the user manual as a reference for future use. If you handover the product to someone else, give the user manual as well. The warranty conditions, usage and troubleshooting methods for your product are provided in this manual.

Symbols and Their Explanations

Throughout this user manual the following symbols are used:

	Danger that may result in death or injury.
	Important information or useful hints about usage.
	Read the user manual.
NOTICE	Danger to the product or its surroundings that may result in material damage.

Contents

1 Safety Instructions.....	5	6.4 Filling the salt.....	21
1.1 Intended Use.....	5	6.5 Detergent.....	22
1.2 Child, vulnerable person and pet safety.....	5	6.6 Rinse aid.....	24
1.3 Electrical safety.....	6	6.7 Parts not suitable for washing in the dishwasher.....	25
1.4 Transportation Safety.....	7	6.8 Placing the dishes in the dishwasher.....	25
1.5 Installation Safety.....	7	6.9 Lower Spray Arm.....	27
1.6 Operation Safety.....	8	6.10 Upper Spray Arm.....	27
1.7 Maintenance and Cleaning Safety.....	9	6.11 Cutlery basket.....	27
1.8 Interior Light Bulb Replacement.....	9	6.12 Cutlery basket.....	27
1.9 Maintenance and Cleaning Safety.....	9	6.13 Foldable lower basket wires.....	28
1.10 Heat Pump.....	10	6.14 Lower Basket Glass Holder.....	28
1.11 General Information on Heat Pump.....	11	6.15 Lower basket multi-purpose / height-adjustable serving rack.....	28
2 Environmental Instructions.....	11	6.16 Height Adjustable Upper Basket Rack.....	29
2.1 Compliance with WEEE Regulation and Disposal of Waste Products.....	11	6.17 Lower basket with bottle wire.....	30
2.2 Package Information.....	11	6.18 Upper basket multi-function service rack.....	30
2.3 Compliance with WEEE Directive and Disposing of the Waste Product.....	12	6.19 Upper basket multi-function service rack.....	30
2.4 Note for Test Institutes.....	12	6.20 Adjusting the height of the upper basket.....	31
2.5 Standard conformity and test information / EC declaration of conformity.....	12	6.21 Adjusting the height of the upper basket.....	32
2.6 This section applies for products with Wifi feature.....	12	6.22 Adjusting the height of the upper basket.....	33
2.7 Energy Label.....	12	6.23 Tray Washing Support.....	33
2.8 Conformity Declaration for UKCA.....	13	6.24 Bottle and Dish Holder on the Lower Basket.....	33
3 Technical Specifications.....	14	6.25 Foldable upper basket wires.....	34
4 General View.....	15	6.26 Cutlery basket.....	34
5 Installation.....	16	6.27 Cutlery basket.....	34
5.1 Correct location for installation....	16	7 Operation of the Product.....	35
5.2 Connecting to the water supply....	16	7.1 Operation of the Product.....	35
5.3 Connecting to the water drain.....	17	7.2 Cycle Information and Average Consumption Values Table.....	37
5.4 Adjusting the feet.....	17	7.3 Additional functions.....	39
5.5 Electricity connection.....	18	7.4 Functions Under the Settings Menu.....	41
5.6 Fitting a Different Plug.....	18	7.5 Changing the Warning Tone Level.....	41
6 Preparation.....	18	7.6 Programming the Washing Time..	42
6.1 Considerations for energy saving.....	18	7.7 Starting of the Cycle.....	42
6.2 Water softening system.....	19	7.8 Cancelling the Cycle.....	42
6.3 Setting the Water Softening System.....	19	7.9 Low Salt Warning Indicator.....	43
		7.10 Low Rinse Aid Warning Indicator..	43
		7.11 Setting the Rinse aid Amount.....	43

7.12	End of cycle	43
7.13	Heat Pump	43
7.14	Heat Pump System Failure (E26) .	44
7.15	Heat Pump Warning	44
8	Maintenance and Cleaning	44
8.1	Maintenance and cleaning.....	44
8.2	Cleaning the filters	44
8.3	Micro Filter Cleaning Mechanism	45
8.4	Cleaning the hose filter	45
8.5	Cleaning the spray arms	45
9	Troubleshooting	47
9.1	Error Codes, Causes and Solutions.....	47
9.2	Troubleshooting	47
10	DISCLAIMER / WARNING	51
11	BEKO UK AND ROI STANDARD MANUFACTURER GUARANTEE TERMS AND CONDITIONS	52
12	BEKO UK AND ROI PARTS GUARANTEE TERMS AND CON- DITIONS	54
13	HOW TO OBTAIN SERVICE FOR YOUR APPLIANCE.....	55

1 Safety Instructions

This section contains safety instructions that will help protect from risk of personal injury or property damage.

Our company shall not be held responsible for any damages that may arise in case of non-compliance with these instructions.

- Installation and repair procedures must always be performed by Authorised Service Agents.
- Use only original spare parts and accessories.
- Do not repair or replace any component of the product unless it is clearly specified in the user manual.
- Do not make technical modifications to the product.

1.1 Intended Use

This product is intended for use in homes and in the following types of enclosed spaces: For example;

- Staff kitchens of shops, offices and other working environments;
- Farm houses;
- Areas for the use of guests of hotels, motels and other accommodation facilities;
- Places serving bed and breakfast, hostel-like environments.

- The product should only be used for household dish washing.

- The product is not suitable for commercial or public use.
- The lifetime of the product you have purchased is 10 years. This is the period for which the spare parts required for the operation of this product as defined.
- This product is intended for use in the home and under counter.

1.2 Child, vulnerable person and pet safety

- 8 years and older children and people with reduced physical, sensory, and mental abilities as well as unskilled or inexperienced persons can use this appliance provided that they are supervised and instructed on safe use of the appliance as well as to the related dangers.
- Children under 3 years of age should be kept away from the product unless constantly supervised.
- Children should not play with the appliance.

- Electrical products are dangerous for children and pets. Children and pets must not play with, climb on or enter into the product.
- Remember to close the door of the product when leaving the room where the product is located. Children and pets can be locked inside the product and suffocate.
- Cleaning and user maintenance must not be made by children without supervision.
- Keep the packing materials away from the children. Risk of injury and suffocation.
- Keep all detergents and additives used in the product out of the reach of children.
- For the safety of children, disconnect the power plug and break the locking mechanism before disposing of the product.
- Do not pinch the power cord under or behind the product. Do not place a heavy object on the power cord. The power cord must not be excessively bent or crushed, and must not come into contact with any heat source.
- Do not use an extension cord, multiple power outlets, or adapters to operate the product.
- Portable multiple power outlets or portable power supplies can overheat and cause a fire. Therefore, do not keep multiple power outlets behind and near the product.
- The plug must be within easy reach. If this is not possible, the electrical installation to which the product is connected must be equipped with a device (fuse, switch, circuit breaker, etc.) that complies with electrical regulations and disconnects all poles from the mains.
- Do not touch the plug with wet hands.
- When removing the plug from the socket, pull it by the plug, not by the cable.

1.3 **Electrical safety**

- The product must not be plugged in during installation, maintenance, cleaning, repair and transport.
- If the power cord is damaged, it must be replaced by an authorised service centre to prevent possible hazards.



1.4 Transportation Safety

- Before transporting the product, unplug the plug and disconnect the drain and water supply connections. Drain the water remaining inside the product completely.
- Do not carry the product alone as it is heavy.

NOTICE Do not hold the door or panel to move the product.

NOTICE If you have to move the product, move it in an upright position and hold it by the back. Tilting the product towards the front may cause the electronic parts inside to get wet and damaged.

NOTICE When putting the product in place after installation or cleaning, take care not to fold, pinch or break the hoses.



1.5 Installation Safety

- To make the product ready for use, check the information in the manual and installation instructions to make sure that the electrical installation, clean water installation and drainage are appropriate. Otherwise, call a qualified electrician and plumber to make the neces-

sary arrangements. These processes are at the customer's expense.

- Before installing the product, inspect the product for any damage. Do not install the product if it is damaged.
- Do not install the product in places where the temperature drops below 0 °C.
- Do not place the product on a carpet or similar surface. It causes fire risk since it cannot get air from the bottom.
- Place the product on a clean, flat and hard floor and balance it with the help of adjustable feet. If the feet are not adjusted properly, the door may not close completely and hot vapour may escape. It may cause serious burns and injuries and may also damage your furniture.
- Do not install the product near heat sources (radiators, stoves, etc.) and do not install it under the cooking area of a hob.
- If the product is intended to be used in a cupboard/cabinet/module, keep the cupboard doors open during operation if there are no gaps to ensure sufficient air circulation.

- Connect the product to an earth-grounded socket protected by a fuse rated in accordance with the current ratings indicated on the rating plate. Have the earthing installation done by a qualified electrician. Do not use the product without earthing in accordance with local/national regulations.
- Plug the product into an outlet complying with the voltage and frequency values indicated on the rating plate.
- Do not plug the product into sockets that are loose, out of the socket, broken, dirty, greasy, at risk of contact with water (e.g. water that may leak from the workbench).

NOTICE The new hose sets supplied with the product must be used. Do not reuse old hose assemblies. Do not splice the hoses.

NOTICE Connect the water inlet hose directly to the water tap. The pressure supplied from the tap must be at least 0.03 MPa (0.3 bar) and no more than 1 MPa (10 bar). If the water pressure exceeds 1 MPa (10 Bar), a pressure reducing valve must be installed. Maximum allowable water temperature is 25°C.

- Position the power cable and hoses so that there is no risk of tripping.

1.6 Operation Safety

Only detergents, rinse agents and additives intended for dishwashers should be used.

Never use chemical solvents in the product. These substances pose a risk of explosion.

Do not drink the wash water in your product.

Dishwasher detergents contain strong alkali, which can be extremely dangerous if swallowed. Avoid contact with skin and eyes and do not allow children near the product when the lid is open. Check that the detergent tank is empty after the wash cycle is completed.

When you pull out the upper and lower baskets completely, the door of the product takes the entire load of the baskets. Do not sit or place other loads on the door, otherwise the product may tip over.



Product's Maximum Washing capacity: Indicated on the Energy Label and Quick Use Card under Cycle Table.

To avoid possible injury, always place long and pointed dishes such as serving forks, bread knives, etc. in the cutlery basket

with the pointed end downwards or horizontally on the dishwasher baskets.

If you need to open the door while the product is running, open it carefully. Be careful of hot steam and splashes of hot water.

Do not operate a faulty or damaged product. Unplug the product (or switch off the fuse to which it is connected), turn off the water tap and call for authorised service.

Do not place a flame source (burning candle, cigarette, etc.) on or near the product. Do not place flammable/explosive materials near the product.

Do not climb on the product. Unplug the product and switch off the tap when you will not use the product for a long time.

This product is designed to operate up to 2000 m. above sea level.

1.7 Maintenance and Cleaning Safety

Maintenance and cleaning safety

Do not wash the product by spraying or pouring water on it.

Do not use sharp or abrasive tools to clean the product. Do not use materials such as

household cleaning agents, detergents, gas, gasoline, alcohol, wax, etc.

Wear gloves worn when cleaning the product.


Be careful of possible injuries when cleaning sharp surfaces on the back of the product!


NOTICE Remember to install the filter of your machine back after cleaning it. Otherwise, the pumps may get clogged and the product may get damaged.


1.8 Interior Light Bulb Replacement


Contact an authorized service when you need to replace the LED/bulb used for lighting according to the model of your machine.

1.9 Maintenance and Cleaning Safety

 Do not wash the product by spraying or pouring water on it.

 Do not use sharp or abrasive tools to clean the product. Do not use materials such as household cleaning agents, detergents, gas, gasoline, alcohol, wax, etc.

 Wear gloves worn when cleaning the product.

 Be careful of possible injuries when cleaning sharp surfaces on the back of the product!

NOTICE! Remember to install the filter of your machine back after cleaning it. Otherwise, the pumps may get clogged and the product may get damaged.

Interior Lighting



Contact a service when you need to replace the LED/bulb used for lighting according to the model of your machine.

1.10 Heat Pump

For models equipped with a heat pump:



Make sure that the air intake of the dishwasher is open and well ventilated.



The product contains refrigerant R600A. R600A is an environmentally friendly but flammable refrigerant.



Due to the kickback effect, you should provide adequate ventilation to prevent gases from appliances operated with other types of fuels, including open flames, from accumulating inside the room.



Exhaust air should not be directed into a flue used for exhaust gases from appliances using gas or other fuels.



R600A is a flammable refrigerant. Therefore, make sure that the system and pipes are not damaged during operation and transportation.



Keep the product away from potential heat sources that could cause it to catch fire in the event of damage.



Do not dispose of the product by discarding it into fire.



Move the product vertically. If you have to tilt the product, keep it in an upright position for 4 hours before starting it.





Your machine belongs to the latest environmentally friendly product range category. (R600A) has been used in the heating system of your machine. There are natural materials in your machine that do not contain CFC/HFC. These materials may inflame when exposed to fire. Therefore, be careful not to damage the heating circuit/pipes of your machine during its transportation and operation. In case of damage, do not expose your machine to fire or a possible source of ignition and ventilate the room immediately where it is located.





This label indicates that R600a refrigerant is present in your appliance.


1.11 General Information on Heat Pump


 In order to prevent performance loss depending on the ambient temperature, the resistance heater may be activated along with the heat pump system.


 Programme durations may vary depending on the ambient temperature which your machine is operated at.


 Cool air may come from under the counter while your machine is running, this is a regular situation.


 While the heat pump system is running, noise may come from the fan of the product and from the water drainage system.

 It is normal to sometimes hear a metallic noise from the compressor during operation.

 Power consumption and program duration of your product varies as per the ambient temperature.

 The compressor and the heating resistor may activate under conditions at and below 15 degrees.

 You shall be informed with the warning symbol when the heating resistor is activated.

 Heat pump system is deactivated when the heating resistor is activated.

2 Environmental Instructions

Frequency Band : 2.400-2.484 Ghz
Max. Transmission Power : < 100mW
Conformity declaration for UKCA
Beko hereby declares that this appliance complies with The Radio Equipment Regulations 2017.

The complete text of the UK declaration of conformity is available in the following internet address:

support.beko.com

2.1 Compliance with WEEE Regulation and Disposal of Waste Products

This product does not contain harmful and prohibited substances specified in the "Regulation on the Control of Waste Electrical and Electronic Equipment" published by the Ministry of Environment and Urbanisation of the Republic of Turkey. It complies with WEEE Regulation.



This product is manufactured from high quality parts and materials that are recyclable and reusable. Therefore, do not dispose of the product with household or other waste at the end of its service life. Take it to a collection point for recycling electrical and electronic equipment. Ask the local authority in your area for these collection points. Help protect the environment and natural resources by recycling used products. Before disposing of the product, disconnect the power plug for the safety of children and break the locking mechanism of the loading door to render it inoperable.

2.2 Package Information

The packaging of the product is made of recyclable materials in accordance with our National Legislation. Do not dispose of packaging waste with household or other

waste, dispose of it at the packaging collection points specified by the local authorities.

2.3 Compliance with WEEE Directive and Disposing of the Waste Product



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical and electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

Compliance with RoHS Directive:

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

2.4 Note for Test Institutes


The information required for performance tests is available on request.

You can send your request via the e-mail address below:

dishwasher@standartloading.com

In your enquiry e-mail, be sure to include your contact details as well as the code, stock number and serial number of the product to be tested. The product code, stock number and serial number can be found on the type label attached to the side of the door

2.5 Standard conformity and test information / EC declaration of conformity

 The development, production and sale of this product are carried out in accordance with the safety regulations of all relevant directives of the European Community. 2014/35/EU, 2014/30/EU, 93/68/EC, IEC 60436 / EN 60436

2.6 This section applies for products with Wifi feature.

Frequency Band 2.4Ghz


Max. Conduction Power : < 100mW

Declaration of conformity for CE Arçelik A.Ş. hereby declares that this appliance complies with Directive 2014/53/EU.

The full text of EU Conformity Declaration is on the web site:

Products, address
support.beko.com

2.7 Energy Label

 You can access technical information about the product by scanning the QR code on the energy label with a mobile device connected to the internet.



XXXXXXXXXX (*)



2.8 Conformity Declaration for UKCA



Frequency Band : 2.400-2.484 Ghz

Max. Transmission Power : < 100mW

ARÇELİK hereby declares that this appliance complies with The Radio Equipment Regulations 2017. The complete text of the UK declaration of conformity is available in the following internet address: support.beko.com

3 Technical Specifications

Maximum washing capacity: Indicated on the Energy Label and Quick Use Card under Cycle Table.
Height: 82-87
Width: 60
Depth:57
Electricity input:220-240 V, 50 Hz
Total power:1800-2100 W
Heater power:1800 W
Total current: 10 A *
Pump power:105 W
Drain pump power: 30 W*
* For detailed electrical values see the type label on the machine's door.
Water Pressure 0.3 -10 bar (= 3 – 100 N/cm ² = 0.03-1.0 Mpa)



Technical specifications may be amended without prior notice to improve product quality.




The figures in the manual are schematic and may not be in exact harmony with the product.




The values provided with the appliance or its accompanying documents are laboratory readings in accordance with the respective standards. These values may differ depending on the use and ambient conditions.

4 General View

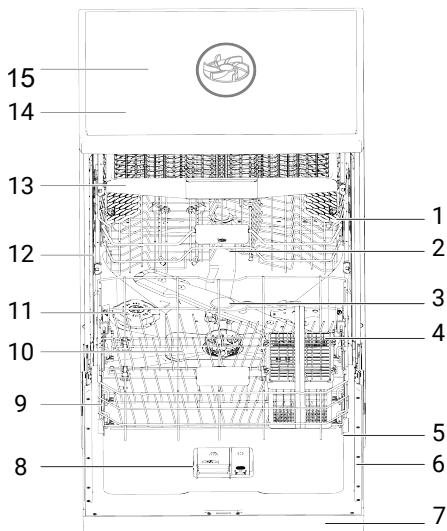

- | | |
|--|--------------------------------------|
| 1 Upper Basket | 2 Upper Spray Arm |
| 3 Lower Spray Arm | 4 Cutlery Basket |
| 5 Door | 6 Type Label |
| 7 Control Panel | 8 Detergent Compartment |
| 9 Lower Basket | 10 Filters |
| 11 Salt Compartment Cover | 12 Upper Basket Rail |
| 13 Ceiling Cutlery Basket (depends on the model) | 14 Upper Rack (depends on the model) |
| 15 Upper Impeller (depends on the model) | |

16. Drying System with fan (depends on the model)

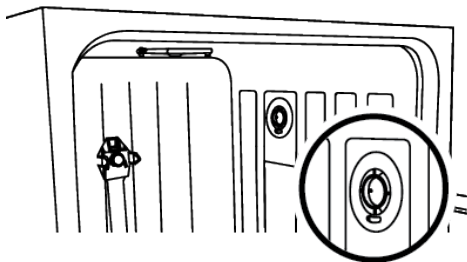

Type label varies depending on the model.



Illustration 1:

5 Installation



Read the "Safety Instructions" section first!

The preparation of the electrical, clean water and waste water installation of the place where the product will be placed is under the responsibility of the customer. Before calling the authorised service to make the product ready for use, if the electrical installation, clean water installation and water drainage are not suitable, call a qualified electrician and plumber to make the necessary arrangements.



Installation and electrical connections must be carried out by the authorised service. The manufacturer cannot be held responsible for any damages that may arise from the operations performed by unauthorised persons.



Before installing the product, inspect the product for any damage. Do not install the product if it is damaged. Damaged products pose a danger to your safety.



For free-standing and under-counter models, do not remove the kick plate of the appliance. This will void the warranty.

- When placing the product in place after installation or cleaning, make sure that the water inlet and drain hoses are not folded, pinched or broken.
- Be careful not to damage the floor, wall, pipes, etc. when placing the product. Do not hold the door or panel to move the product.

5.1 Correct location for installation

- There must not be any lockable, sliding or hinged doors in the place where the product is installed, which would restrict the full opening of the door.

- Place the product on a solid and level surface with sufficient load-bearing capacity! Placing the machine on a level surface is essential for the door to close properly and tightly.
- Do not install the product in places where the temperature drops below 0 °C.
- Place the product on a hard floor. Do not place it on a long-pile carpet or similar surface.
- Choose a place where you can load and unload the dishes easily and quickly.
- Place the product close to the tap and drain. Choose the location of the product in such a way that you do not change it after it has been connected.



Do not place the product on the power cable. The cable may be damaged, causing a risk of electric shock or fire.


5.2 Connecting to the water supply

To prevent dirt (sand, clay, rust, etc.) from the city network or your water supply system from damaging the machine and your dishes, we recommend installing a filter on the water inlet.

Maximum allowable water inlet temperature:

- With AquaSafe+ feature containing models, it is 60 °C.
- Up to 25 °C for other models.

AquaSafe+ feature

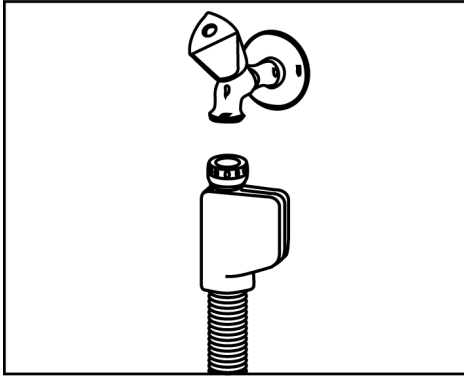


- Protect the AquaSafe+ against water leaks at the hose inlet. Water contact with the valve box of the system must be prevented. Otherwise, electrical components will be damaged.
 - Do not shorten the hose in any way or extend it with additional parts as the hose contains electrical connections and components.
 - If the system is damaged, unplug the product and call the authorised service.
- The dishwasher must not be connected to warm water appliances or running water heaters.

NOTICE Do not use an old or used water inlet hose on a new product. Use the new water inlet hose supplied with the machine. Do not splice the hoses.

NOTICE Connect the water inlet hose directly to the water tap. The pressure supplied from the tap must be at least 0.3 and no more than 10 bar. If the water pressure exceeds 10 Bar, a pressure reducing valve must be installed.



NOTICE The water supply and drain hose must be securely fastened and undamaged.

NOTE After making the connections, open the tap fully and check for water leaks.

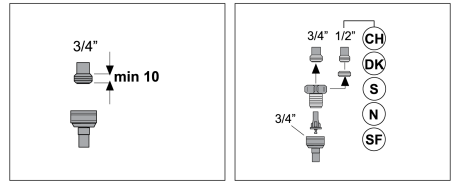

5.3 Connecting to the water drain

The water drain hose can be connected directly to the waste water drain or to the drain of the sink. For more detailed information, refer to the installation instructions supplied with your machine.

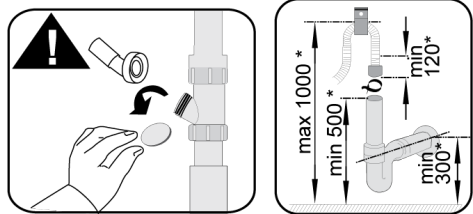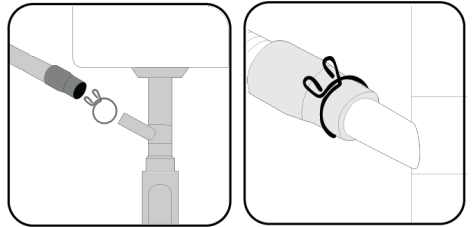

* mm

The waste water drain must be connected to the sewer and must not be connected to surface water.

5.4 Adjusting the feet

If the door of the product does not close properly or shakes when you push it gently with your hand, this means that the feet are not adjusted. Adjust the feet of the product as shown in the installation manual supplied with the product.



Hot steam may escape if the dishwasher door is not adjusted properly. Serious burns can cause injury and damage your furniture.

5.5 Electricity connection



Connect the product to a grounded socket protected by a fuse in accordance with the values in the "Technical specifications" table. Our company shall not be responsible for any damages that may occur if the product is used without grounding in accordance with local regulations.

- The connection must comply with national regulations.
- The plug of the power cord must be easily accessible following the installation.
- Connect the product to a grounded socket protected by a 16 ampere fuse.
- The specified voltage must be equivalent to your mains voltage.



Do not connect with extension cords or multiple sockets.



A damaged power cord must be replaced by authorised service.

5.6 Fitting a Different Plug

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals on your plug, proceed as follows:

6 Preparation



Read the "Safety Instructions" section first!


6.1 Considerations for energy saving

The following information will help you to use the product in an ecological and energy-saving way.

Remove all coarse waste before placing the dishes in the machine.

1. Connect the green - yellow or green (earth) wire to the terminal in the plug marked 'E' or with the symbol or coloured green and yellow or green.
2. Connect the blue (neutral) wire to the terminal in the plug marked 'N' or coloured black.
3. Connect the brown (live) wire to the terminal in the plug marked 'L' or coloured red.

Green and yellow
or green

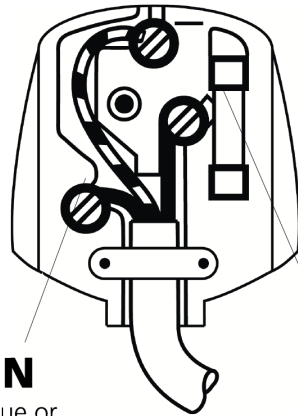

Blue or
black

Brown or red

With the alternative plugs a 13A fuse must be fitted either in the plug or adaptor or in the main fuse box. If in doubt contact a qualified electrician.



It is not recommended to pre-clean the dishes before loading them into the machine as this will consume energy and water.



Washing the dishes in the dishwasher consumes less energy and water than washing them by hand.

Start the machine after it is fully loaded. Pay attention to the "Cycle Information and Average Consumption Table" when selecting a cycle.

Do not use more detergent than recommended on the detergent packaging.

6.2 Water softening system

The machine is equipped with a special water softening system that reduces the hardness of the mains water. This system softens the water to the level required for washing dishes to the desired quality.



Mains water must be softened if its hardness is above 7°dH. Otherwise hardness ions will accumulate on the washing utensils and may affect the washing, rinsing and drying performance of the machine.

Setting the water softening system

Washing efficiency will be improved when the water softening system is set correctly. Read the section on adjusting the water softening system first.

Regeneration of the water softening system can take place in all cycles during the drying step. When regeneration is performed, the duration of the cycle, energy and water consumption are increased. For the regeneration process, the table below shows the frequency of the regeneration process, maximum additional time, water and energy consumption depending on the water consumption for the Eco 50 °C cycle when the dishwasher is operated under standard conditions with a water supply of 14 dH.

Eco 50 °C water consumption (l)	renew after cycle	Additional time (min)	Additional water consumption (l)	Additional energy consumption (kWh)
12.3-14.7	5	5	3.0	0.05
9.6-12.2	6	5	3.0	0.05
9.0-9.5	7	5	3.0	0.05
8.0-9.0	8	5	3.0	0.05
7.0-7.9	9	5	3.0	0.05

For water consumption in the Eco 50 °C cycle of your dishwasher, refer to the Cycle Information and Average Consumption Values Table given in the Cycle Table.

6.3 Setting the Water Softening System

When the water softening system is set correctly, the washing, rinsing and drying performance of your dishwasher will increase.

NOTICE! To set the system, first find out your water hardness level from the authorised service in your region and set it as follows.

After the determination of the water hardness:

1. After turning on your machine, press the Menu button for 3 seconds.



In some models, you just need to press the menu key 1 time to access the settings menu.

- Using the <- and +> buttons, scroll until the water hardness setting indicator lights up (position "r" appears on the display).
- Set the water hardness to a proper level for the hardness of your mains water with the Select key. For the correct setting, refer to the "Water hardness level setting table".
- Save by pressing On / Off key.







Hardness Level	English Hardness °dE	German Hardness °dH	French Hardness °dF	Water Hardness Level Indicator
0. Level 	0-5	0-4	0-8	Bring the water hardness setting to position 1 by pressing the Select key. (r1)
1. Level 	6-9	5-7	9-13	Bring the water hardness setting to position 1 by pressing the Select key. (r1)
2. Level 	10-15	8-12	14-22	Bring the water hardness setting to position 2 by pressing the Select key. (r2)
3. Level 	16-19	13-15	23-27	Bring the water hardness setting to position 3 by pressing the Select key. (r3)
4. Level 	20-24	16-19	28-34	Bring the water hardness setting to position 4 by pressing the Select key. (r4)
5. Level 	25-62	20-50	35-90	Bring the water hardness setting to position 5 by pressing the Select key. (r5)

Table 1: Water Hardness Level Setting Table


Make the same hardness level you set on the control panel with the regeneration adjustment switch. For example, if the setting on the control panel is 3, set the regeneration setting switch to 3.

- If the hardness of the water you use is above 50°dH (French hardness) or if you use well water, it is recommended to use filters and water purifiers.
- If the hardness of the water you use is below 7°dH, you do not need to use salt in your dishwasher. In this case, the "Salt Shortage Warning Indicator" on the control panel of your machine will be on continuously.
- If your water hardness setting is at level 1, the "Salt Shortage Warning Indicator" will remain on continuously even though you do not need to use salt. If you use salt in this position, salt will not be consumed and the lamp will not light.



In case of relocation, you need to adjust the water hardness setting of your machine again according to the water hardness of the place you move to, taking into account the information given above. If the water hardness setting of your machine has been adjusted before, the last water hardness setting will be displayed on the screen of your machine.

Mechanical Water Hardness Adjustment

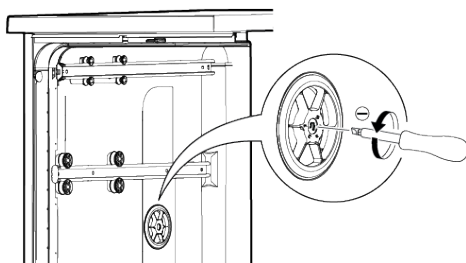

The glass care function setting is used to adjust the water hardness level of the pre-softened wash water in the dishwasher. The setting must be made according to the water hardness setting level. The adjustment is made with a wide, flat screwdriver. The screwdriver is used to turn the mech-

anical glass care adjustment switch. Only turn the mechanical switch to the same position as the water hardness setting level.

For example,

Set the Mechanical Glass Care adjustment switch to position 3 for water hardness level "r3"

Set the Mechanical Glass Care adjustment switch to position 4 for water hardness level "r4"

6.4 Filling the salt


The water softening system must be renewed in order for the machine to operate at the same performance at all times. Dishwasher salt is used for this purpose.

i Only use special softening salt for use in dishwashers.


i It is recommended to use granulated or powdered softening salts in the water softening system. Do not use salts such as table salt and rock salt that do not dissolve completely in water. Otherwise, the performance of the system may deteriorate over time.

i The salt compartment fills with water when you switch on the machine. Therefore, fill the salt compartment before starting the machine.

1. Initially remove the lower basket to load softening salt.
2. Open the salt compartment lid by turning it anti-clockwise (A).

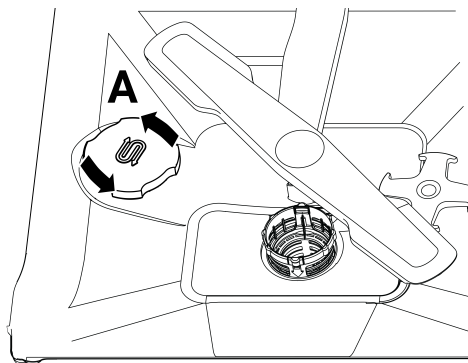

3. Only add 1 litre of water to the salt compartment when using your machine for the first time.
4. Fill the salt compartment with salt (D). Stir with a spoon to speed up the dissolution of the salt in the water.

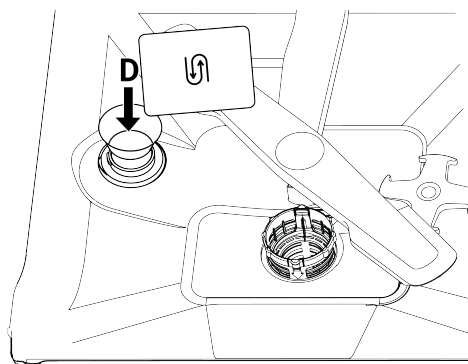

i You can put approx. 2 kg of softening salt in the salt compartment.

1. When the compartment is full, replace the lid and close by turning.

i Adding salt should be performed just before starting the machine. In this way, the overflowing brine is cleaned immediately and the risk of corrosion inside the machine is prevented. If you are not going to wash immediately, run the machine empty and without detergent in the shortest cycle.



Depending on the different salt particle sizes of different brands on the market and the water hardness, it may take several hours for the salt to dissolve in the water. For this reason, the "Salt Shortage Warning Indicator" will remain on for a certain period of time after the salt is filled into the machine.

6.5 Detergent

You can use powder, liquid / gel and tablet detergent in the machine.



Use only detergents intended for use in dishwashers. We recommend that you do not use detergents containing chlorine and phosphates as these are harmful to the environment.

Filling the detergent



For good washing and drying results, observe the instructions on the detergent packaging. Contact the detergent manufacturer for further questions.



Do not put solvents in the detergent compartment. There is a risk of explosion!

Put the detergent in the detergent compartment as follows immediately before starting the machine.


1. Open the detergent compartment door by pushing the latch to the right (A). (depends on the model)

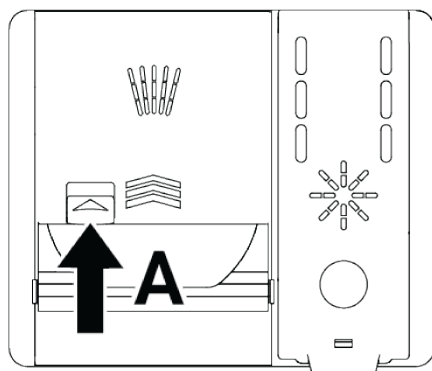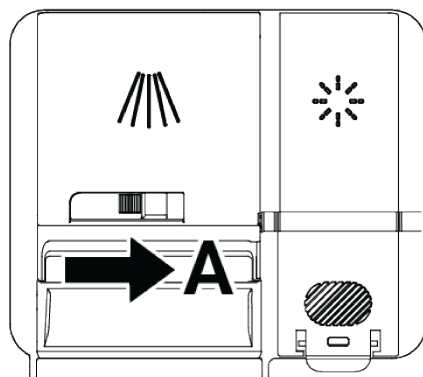




2. Put the specified amount of powder, liquid/gel or tablet detergent into the compartment.



There are level lines on the inside of the detergent compartment to help you use the correct amount of powdered detergent. The detergent compartment holds 45 cm³ of detergent when fully loaded. Fill the detergent compartment up to the level lines of 15 cm³ or 25 cm³ of detergent, depending on how full the machine is and/or how dirty your dishes are. If tablet detergent is used, one tablet is sufficient.

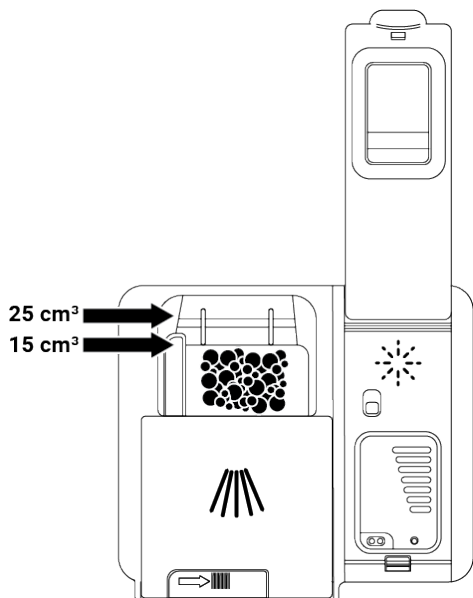

3. Close the lid of the detergent compartment by pushing it in the direction of the arrow. A "click" sound is heard when the lid is closed.

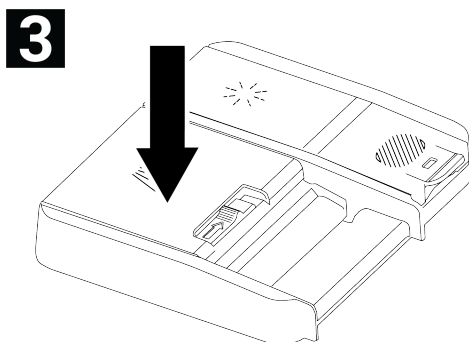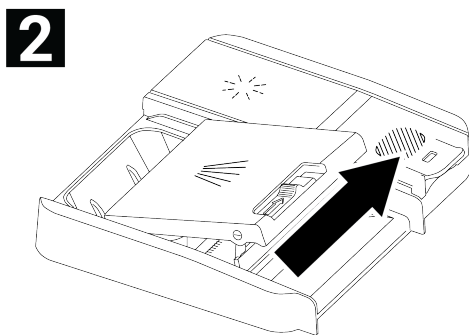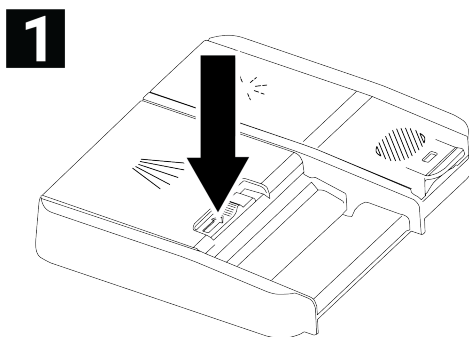


i Since the solubility of tablet detergents varies depending on temperature and time, always use powder or liquid/gel detergent in short cycles without pre-wash.

Tablet detergents

In addition to conventional tablet detergents, there are also tablet detergents on the market that contain water softening salt and/or rinse aid. Some of them also

contain special components such as glass preservatives and stainless steel preservatives. These tablets work up to a certain water hardness level (21°dH). Water softening salt and rinse aid should be used together with the tablet detergent above this level. The best washing performance in dishwashers is achieved by using detergent, rinse aid and water softening salt separately.

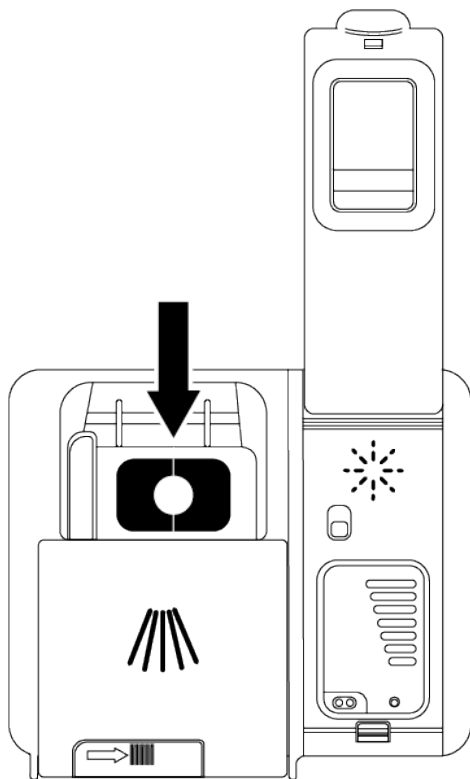

When using tablet detergents, follow the manufacturer's instructions on the detergent packaging.

When using tablet detergent, contact the detergent manufacturer if your dishes are wet when the wash cycle has finished and/or if you notice limescale stains, especially on glasses.

When you change from tablet detergent to powder detergent:

- Make sure the salt and rinse aid compartment is full.


- Set the water hardness setting to the highest position and run a wash cycle with the machine empty.
- After the empty wash cycle, read the instruction manual and adjust the water hardness setting again according to your mains water.
- Set the appropriate rinse aid setting.

6.6 Rinse aid

The rinse aid used in dishwashers is a special compound to improve drying efficiency and to prevent traces of water or limescale from remaining on the washed items. For this reason, make sure that there is rinse aid in the rinse aid compartment and use only rinse aid that is intended for use in dishwashers.


Filling the rinse aid

1. Open the rinse aid cap with the latch.

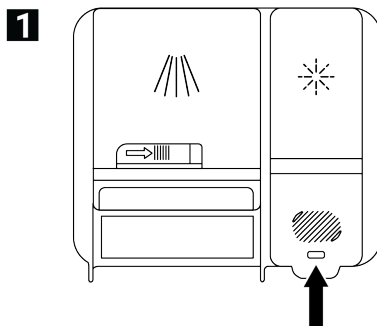


2. Fill the compartment to the MAX level.

2

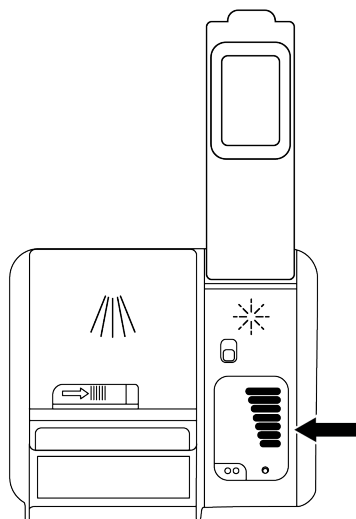

3. Close the compartment lid by pressing it lightly against point (B).

3

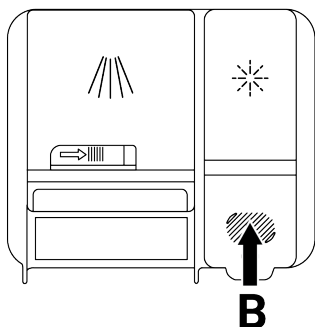

4. Increase the setting if water marks appear on the crockery after washing, or decrease it if a blue mark remains when wiped by hand. This setting is set to position 3 at the factory.



The rinse aid setting is described under the heading "Adjusting the rinse aid quantity" in the operation of machine section.



Wipe off any rinse aid spilled outside the chamber. Accidental spillage of rinse aid will cause foaming and reduce washing performance.

6.7 Parts not suitable for washing in the dishwasher

- Do not wash dishes contaminated with cigarette ash, wax residue, varnish, paint, chemicals, etc. in the machine.
- Do not wash forks, spoons and knives with wooden or bone handles, glued parts, non-heat-resistant plastic parts, copper and pewter utensils in the machine.



As with hand washing, the dishwasher may discolour and tarnish decorative prints on porcelain, aluminium and silver. Some types of delicate glass and crystals may lose their transparency over time. We recommend that you pay particular attention to the fact that the new tableware you buy is appropriate for washing in the dishwasher.

6.8 Placing the dishes in the dishwasher

If you place the dishes correctly in accordance with the washing capacity of your dishwasher, you will make the best use of the machine in terms of energy consumption, washing and drying performance.

- Remove any food residues (bones, fruit pits, etc.) from the dishes before placing them in the machine.
- If possible, place thin, narrow-bodied items in the centre compartments of the baskets.
- Place very dirty and large items in the lower basket and small, delicate and light items in the upper basket.
- Place deep containers such as bowls, glasses and pots with their mouths downwards. This prevents water from accumulating in them.




To avoid possible injury, always place long and pointed dishes such as serving forks, bread knives, etc. in the cutlery basket with the pointed end downwards or horizontally on the dishwashing baskets.


Empty the dishes in the lower basket first, then the dishes in the upper basket.

Alternative Basket Layout Examples




Lower Basket


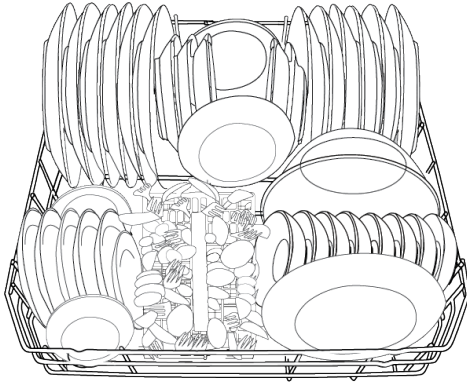


Upper Basket

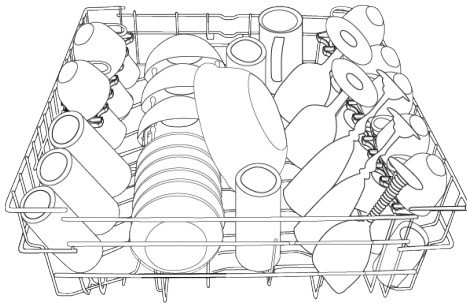

Incorrect Placements

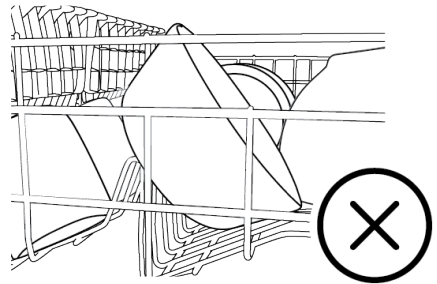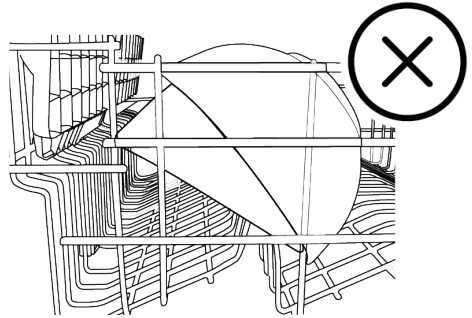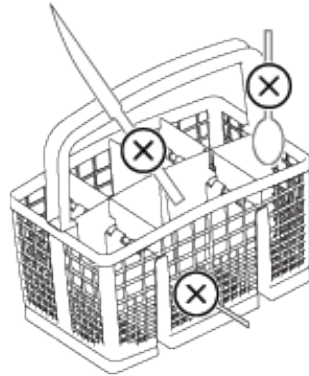

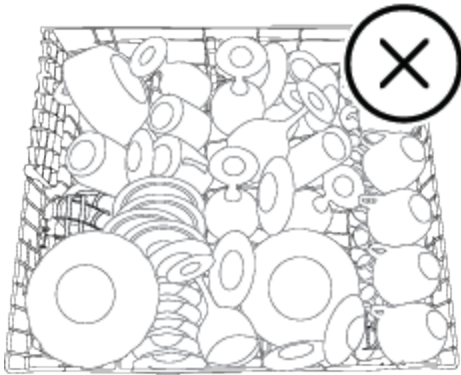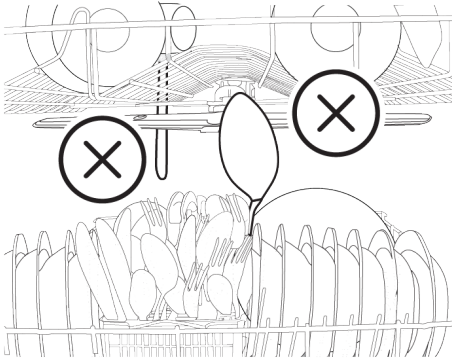

6.9 Lower Spray Arm

The lower spray arm washes the dishes in the lower basket.

6.10 Upper Spray Arm



The upper spray arm washes the dishes in the upper basket.

6.11 Cutlery basket

(depends on the model)

The cutlery basket is specially designed for cleaner washing of knives, forks, spoons, etc.

Thanks to the movable (A, B) feature of the cutlery basket, you can create wider areas when placing your dishes in the lower basket and open space for your dishes of different sizes.

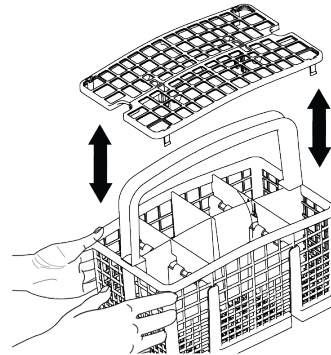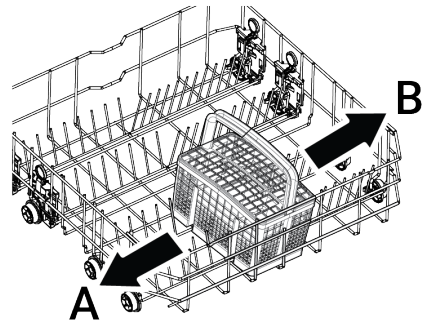


6.12 Cutlery basket

(depends on the model)

The cutlery basket is specially designed for cleaner washing of knives, forks, spoons, etc.


Thanks to the movable (A, B) feature of the cutlery basket, you can create wider areas when placing your dishes in the lower basket and open space for your dishes of different sizes. If you want to place more cutlery, you can fold the separators to the side. (C)

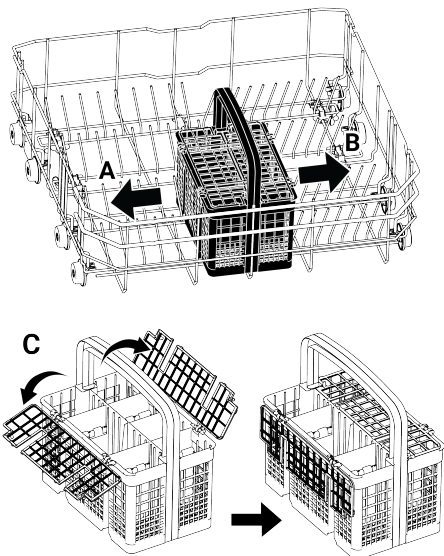

6.13 Foldable lower basket wires


(depends on the model)

The folding wires in the lower basket of the machine, consisting of six parts (A), are designed for you to place large items such as pots, bowls, etc. more easily. If you want, you can create larger spaces by folding each piece individually or all together.

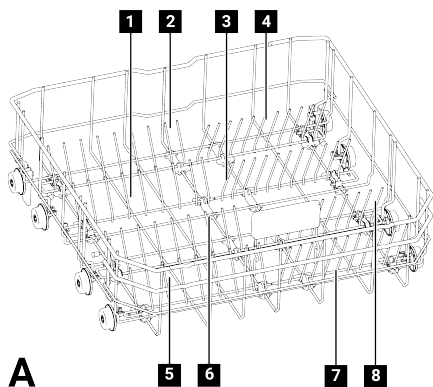

To fold the foldable wires into the lying position, push the wires in the direction of the arrows by holding them in the centre (B).

Lift upwards to return the wires to the upright position. The foldable wires will snap back into the latch (C).

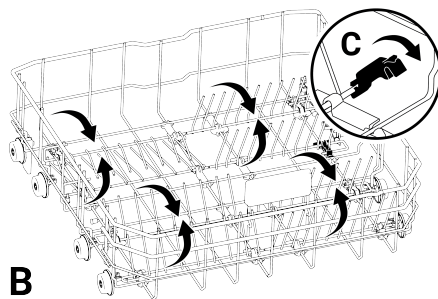


i Bringing the wires to horizontal position by holding them from their ends may cause them to be bent. Thus, it is advisable to bring the wires in the middle to horizontal or vertical position by holding from the bottom position and pushing through the direction of arrow.

6.14 Lower Basket Glass Holder

(depends on model)




Lower Basket Glass Holder found in the lower basket of your machine enables a safe washing for your oversized and tall glasses.

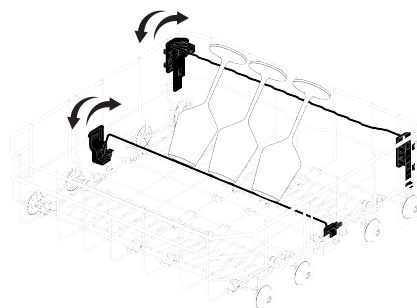

6.15 Lower basket multi-purpose / height-adjustable serving rack

(depends on the model)

Thanks to this accessory in the lower basket of your machine, you can easily wash your extra glasses or pieces such as long ladles and bread knives.

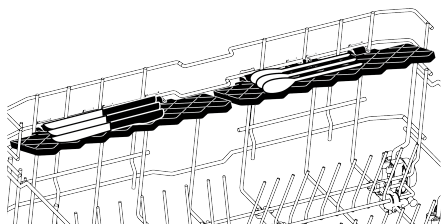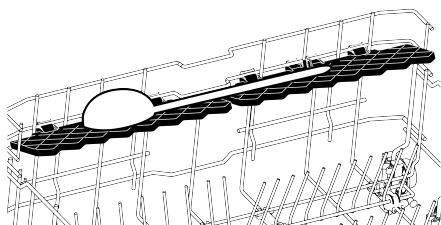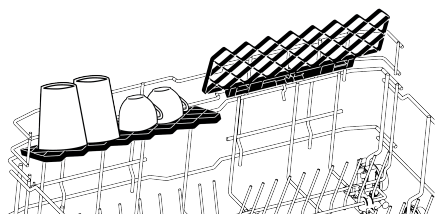


You can use the racks as you wish by positioning them up or down, or you can close them to create a large space in the lower basket.



Make sure that the spray arm does not hit the dishes placed on the racks

To return the racks to the closed position;


1. Fold the rack (A).
2. Slide the rack upwards (B).
3. Bring the rack to the upright position (C).
4. Slide the rack downwards and lock it with the tabs (D).

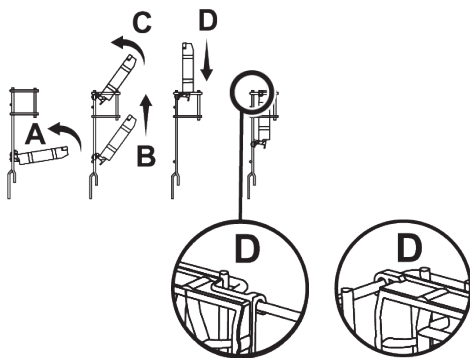

You can switch the rack to open position by doing the same operations in reverse.

To adjust the height of the racks:

1. Fold the rack (E).
2. Slide the rack upwards (F).

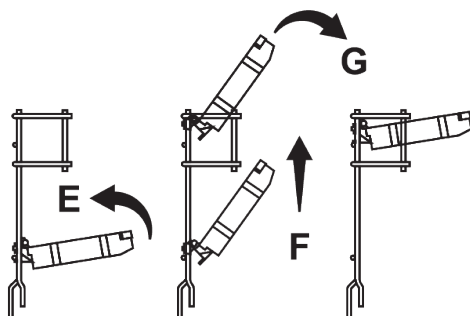


3. Open the rack to the desired level (G).

6.16 Height Adjustable Upper Basket Rack

(depends on the model)


You can use the upper and lower sides of the height-adjustable racks in the upper basket of the machine as you wish by positioning them up or down according to the height of the dishes such as glasses, cups, etc. (A, B, C).

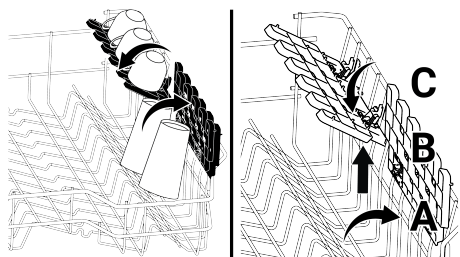

6.17 Lower basket with bottle wire

(depends on the model)


The bottle wire is designed to make it easier for you to wash wide-mouthed and high items. When not in use, you can remove the bottle wire from the basket by pulling it outwards from both sides (H).

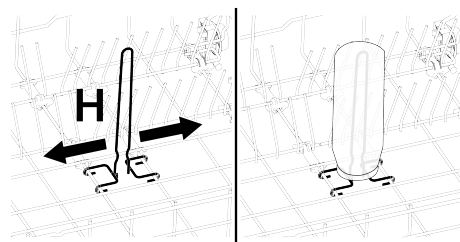


6.18 Upper basket multi-function service rack

(depends on the model)

Thanks to this accessory in the upper basket of your machine, you can easily wash the pieces such as long ladles and bread knives.

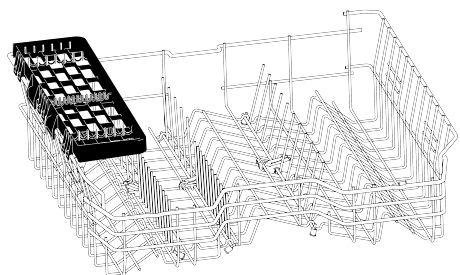

You may remove the upper basket multi-function service rack by lifting it upwards when you do not want to use it.

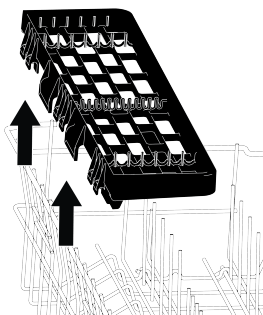

You may reinstall the upper basket multi-function service rack on the side of your upper basket easily to use it again.

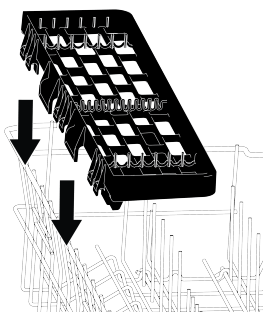


Illustration 2:

6.19 Upper basket multi-function service rack

(depends on the model)

Thanks to the upper basket multi-function service rack on the upper basket of your appliance, you may load and wash long service-ware and kitchen-ware easily. Also, the wineglass securing compartments available on the front side of this accessory allows easier placing of the stemware with proper sizes on the upper basket.

6.20 Adjusting the height of the upper basket


(depends on the model)

Upper basket height adjustment mechanism is designed so that you can create wide spaces on the upper or lower compartment of the machine by adjusting the basket upwards or downwards either while it is empty or full.


Thanks to this mechanism, you may use your basket in three different positions, namely lower, centre or upper positions.

1. To raise the basket, hold the wires of the basket and pull the basket upwards with both hands while the basket is at the lowermost position (A)
2. Release the basket when the basket catches on to the next upper position with a "Click" that may be heard from the right and left mechanisms.

Repeat the same operation if the height is not adequate.

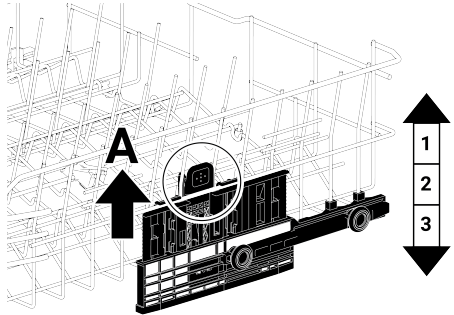

You may remove the upper basket multi-function service rack by lifting it upwards when you do not want to use it.

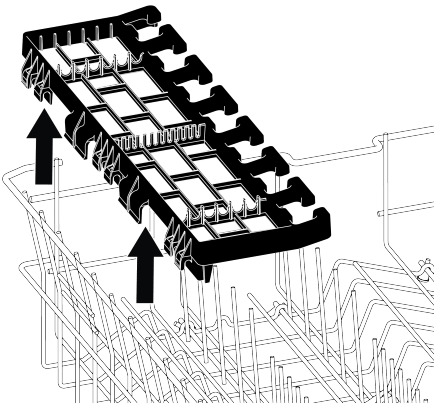

You may reinstall the upper basket multi-function service rack on the side of your upper basket easily to use it again.


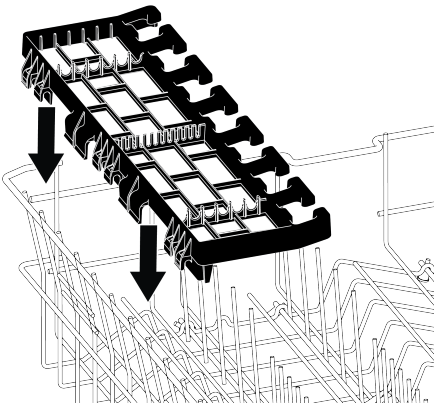


Illustration 3:

To lower the basket, perform the following while the basket is at uppermost position;

1. Holding the upper basket wires with both hands and lifting the basket slightly upwards, press and release the latches shown in the figure (B) at the same time.
2. Lower the basket to the next lower position.
3. Release the basket when it catches on to the next lower position.

Repeat the same operation if the height is not adequate.

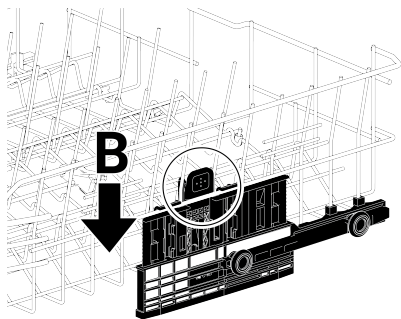

The movement mechanism may not work properly when the upper basket is overloaded or when the load is unbalanced. And it may fall to the next lower position in heavier conditions.



Ensure that the adjustment mechanisms on the right and left of the upper basket are aligned.

6.21 Adjusting the height of the upper basket

(depends on the model)


Upper basket height adjustment mechanism is designed so that you can create wide spaces on the upper or lower compartment of the machine by adjusting the basket upwards or downwards either while it is empty or full.

Thanks to this mechanism, you may use your basket in three different positions, namely lower, center or upper positions.

To lower the basket, perform the following while the basket is at uppermost position;


1. Hold the wires of the upper basket and raise the handle of the mechanism upwards as shown in the figure (A).
2. Lower the basket to the next lower position.
3. Release the basket when it catches on to the next lower position.

Repeat the same operation if the height is not adequate.

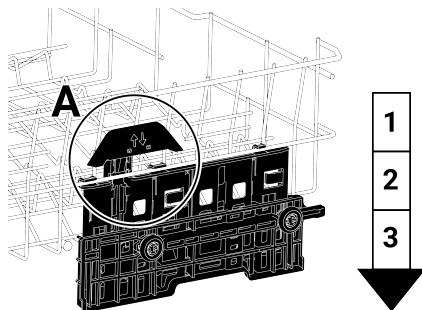

1. To raise the basket, hold the wires of the basket and pull the basket upwards with both hands while the basket is at the lowermost position (B)
2. Release the basket when it catches on to the next upper position with a “Click” that may be heard from the right and left mechanisms.

Repeat the same operation if the height is not adequate.

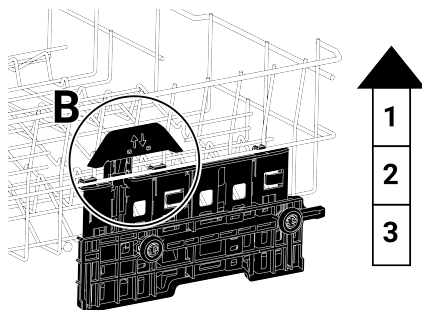

The movement mechanism may not work properly when the upper basket is overloaded or when the load is unbalanced. And it may fall to the next lower position in heavier conditions.






Ensure that the adjustment mechanisms on the right and left of the upper basket are aligned.

6.22 Adjusting the height of the upper basket

(depends on the model)

Place the large pieces, such as pots, to the lower basket. You can adjust the height of upper basket according to the size of your dishes. To adjust basket height; using the basket wheels, open the holders at the end of upper basket rails by rotating them to the side and remove the basket. Change the position of wheels, re-insert the basket to the rail and close the holders.

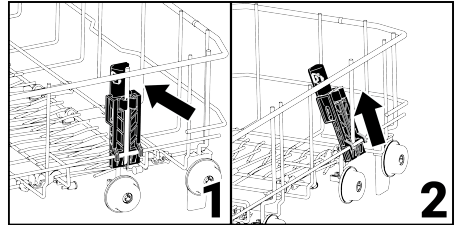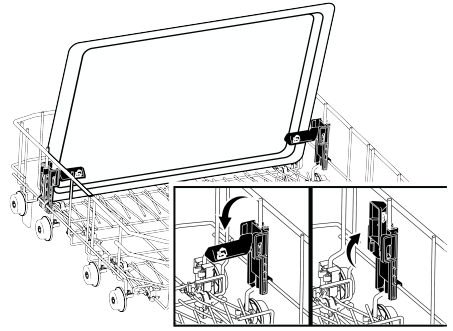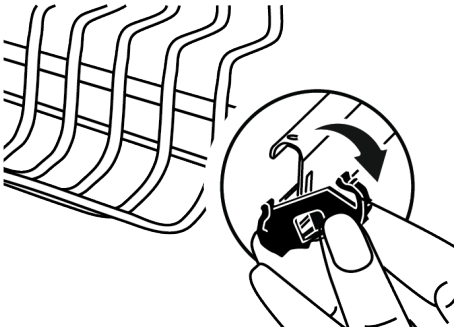

6.23 Tray Washing Support

(depends on the model)

You may use the tray washing supports if you want to wash a tray on your lower basket.


Refer to the Additional Functions section to select the proper cycle and function.

You may fold this part when it is not used to facilitate the placement of your dishes.


6.24 Bottle and Dish Holder on the Lower Basket

(Depends on the Model)

The lower basket bottle and plate holder (A) is designed to make it easier to wash narrow-mouthed and high dishes. After bringing the foldable wires to horizontal position, you may place your bottles on the bottle holders. Secure your bottles by clamping them with the bottle holder clip as shown in the figure below.

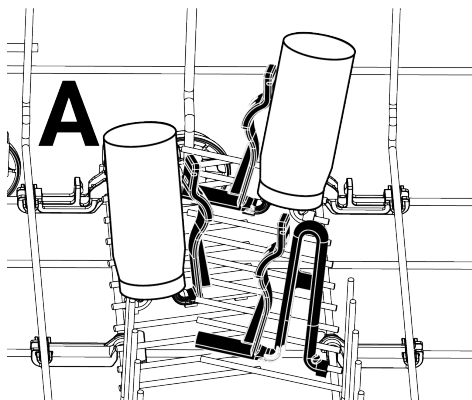

And when you bring the foldable wire to vertical position, you may place your dishes without removing the holders.

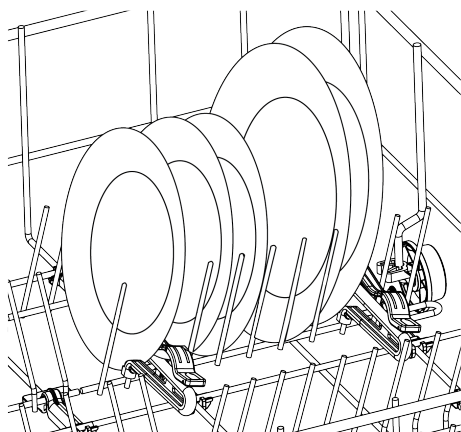

i Bringing the wires to horizontal position by holding them from their ends may cause them to be bent. Thus, it is advisable to bring the wires to horizontal or vertical position by holding them from their bottom.


6.25 Foldable upper basket wires

(depends on the model)

You can use the folding wires when you need more space in the upper basket of the machine for your large dishes.

To fold the foldable wires into the lying position, hold the wires in the centre and push them in the direction of the arrow in the pic-

ture. Place your large dishes in the space created. Lift up to return the wires to the upright position.

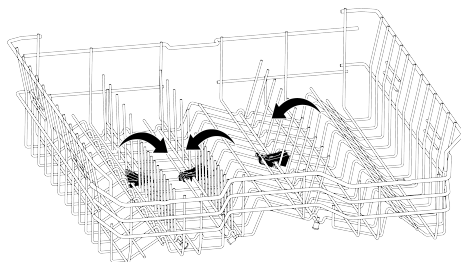


i Bringing the wires to horizontal position by holding them from their ends may cause them to be bent. Therefore, grasp the centre wires by the bottom and push them in the direction of the arrow to bring them into a lying or upright position.

6.26 Cutlery basket

(depends on the model)





The ceiling cutlery basket is designed for washing your forks, spoons, etc. by placing them between the combs on the tray.

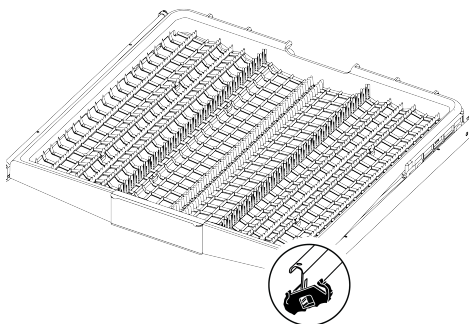

6.27 Cutlery basket

(depends on the model)

The ceiling cutlery basket is designed for washing your forks, spoons, etc. by placing them between the combs on the tray.

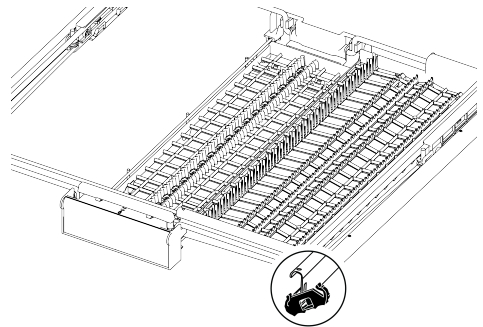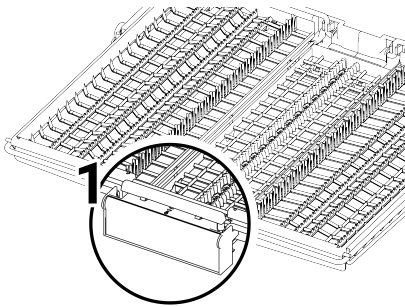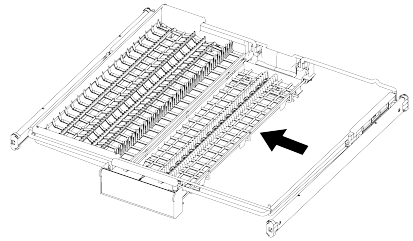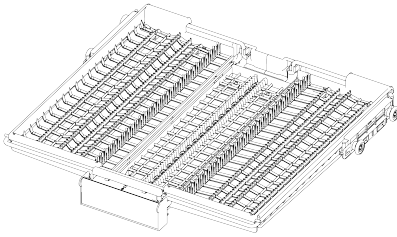


In the models with partial movement feature, when the arm (1) on the handle is pushed, the tray on the middle part of basket goes down to the lower position; system is unlocked and the right and left side trays can be freely moved. The free area established by moving the side trays allows loading long dishes to the upper basket.


When the middle tray is in the lower position, it is possible to place long dishes such as coffee cups, ladles etc. on the tray. When the side trays are leaned to both sides, it is possible to pull the handle and ensure rising the middle tray and locking the system.

7 Operation of the Product


7.1 Operation of the Product

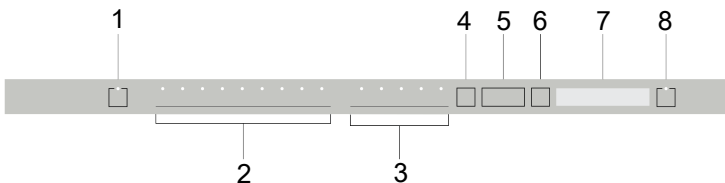

- | | |
|--|------------------------------|
| 1 On/Off Button | 2 Cycle Selection Keys |
| 3 Function Selection Buttons | 4 Menu Button |
| 5 Select Delay Time / Select Menu Direction Keys | 6 Select / Confirm Key |
| 7 Screen | 8 Start / Pause / Cancel Key |

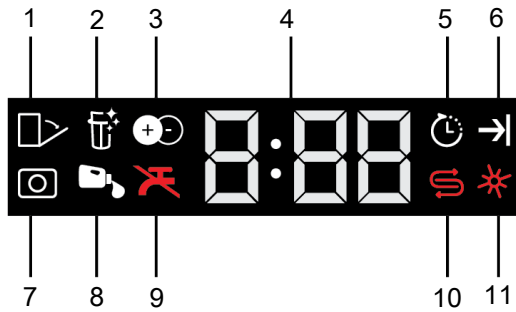

- | | |
|---|--|
| <p>1 Auto Door Opening (depends on the model)</p> <p>3 Additional Function Indicator (depends on the model / Heat pump warning)</p> <p>5 Delay Indicator</p> <p>7 Tablet Detergent Indicator (depends on the model)</p> <p>9 Water Outage Warning Indicator</p> <p>11 Low Rinse Aid Warning Indicator</p> | <p>2 Filter Cleaning Indicator (depends on the model)</p> <p>4 Delay Time / Cycle Time Indicator</p> <p>6 Cycle Ended Indicator</p> <p>8 Automatic Liquid/Gel Detergent Dosage Indicator (depends on the model)</p> <p>10 Low Salt Warning Indicator</p> |
|---|--|

 Read the chapter "Safety Warnings" first!

When you press the Power on/off button, in the ON position the screen indicators lights turn on. In the off position, they turn off.

Cycle Selection / Cancel Cycle Key

Select the cycle that you want to run from the "cycle selection keys" and press the key. To cancel the running cycle, open the machine door and press the Cycle Start / Pause / Cancel button for 3 seconds. The display shows 0:01 after the countdown of 3 - 2 - 1, close the machine door and wait for the drain process to complete. Discarding process will be completed within 2 minutes and your machine will beep when it is done.

Function Buttons

When the Function Buttons are pressed during cycle selection or delay selection, if the cycle you selected supports the function you have selected, a positive button warning sound will be heard. When the indicator of selected function is on, the function is selected. To cancel function selection, press the function button again until the function indicator turns off.

Preparing the machine

1. Open the door of the dishwasher.
2. Load your dishes as described in the user manual.
3. Ensure that lower and upper spray arms are rotating freely.
4. Add adequate amount of detergent in the detergent compartment.

Cycle selection

1. Turn your machine on by pressing the On / Off key.

2. Inspect low salt and low rinse aid indicators and add salt and/or rinse aid if required.

3. Select the proper washing cycle for your dishes considering the cycle information and average consumption values table.

4. The selected cycle starts when you close the door of your dishwasher.

7.2 Cycle Information and Average Consumption Values Table

Programme Data and Average Consumption Values Table


Programme number	0	1	2	3	4	5	6	7	8
Programme name	-	Auto	AquaFlex	Intensive	Eco *	Delicate	Quick&Shine (#)	Mini (#)	Prewash
Cleaning temperature	-	40-65 °C	-	70 °C	50 °C	40 °C	60 °C	35 °C	-
Degree of Soiling	-	Determines the soiling degree of the dishes and sets the temperature and amount of the washing water as well as the washing time automatically. Suitable for all types of dishes.	It is the most suitable for daily mixed dishes including plastic items. While delicate glass items are washed in the upper basket, pans and trays can be washed in the lower basket.	Suitable for heavily soiled dishes, pots and pans.	Suitable for washing dishes with normal amount of soil. It is the most efficient program in terms of combined power and water consumption. This is used for assessing the compliance with EU's eco-design directive.	Special programme for gentle cleaning of delicate glassware.	Daily washing programme for normally soiled dishes in the fastest way.	Suitable for lightly soiled daily dishes that are scraped or pre-cleaned.	Suitable for removing the remnants on the soiled dishes that will be kept waiting in the machine for a few days, and thus, for preventing the bad odour buildup.
Prewash	-	Medium to high	Medium	High	Medium	Low	Medium	Low	-
Wash	-	+	+	+	-	+	-	-	+
Dry	-	+	+	+	+	+	+	+	-
Duration (min)	-	154-216	270	200	290	136	58	30	15
Water (l)	-	9-4-12,4	19,00	16,80	9,90	14,40	10,60	10,80	4,00
Energy (kWh)	-	0,7-1,1	1,1	1,2	0,44	0,92	1,18	0,8	-
Selectable functions	-	T, E, R, Z, H, M, K	T, E, Y, F, Z, H, M, K	T, E, Y, F, R, U, Z, H, M, K	T, E, Y, F, S, R, U, Z, H, M, K	T, E, Y, F, R, B, M, K	T, E, R, B, H, M	T, E, B, M, Z	-


Loading Capacity: 15


The consumption values shown in the table were determined under standard conditions. Differences may therefore occur under practical conditions. * Reference programme for testing institutes. The tests in accordance with EN 50242/60436 must be carried out with a full water softener salt dispenser and a full rinse aid reservoir, and using the test programme. The values given for programmes other than Eco 50°C programme are indicative only. (#) Additional functions might cause changes in programme durations.


7.3 Additional functions

Washing cycles of the machine are designed to achieve the best cleaning performance by considering the soil level, the amount of dirt and the characteristics of the dishes to be washed in the machine. Additional functions have been added to help you save time, water and energy and to perform a more hygienic and comfortable washing, thanks to the customized features settings.

 Additional functions may change the duration of the selected cycle.

 Additional functions are not suitable for all washing cycles. The indicator of the function that is not suitable for the cycle will not be active.


 Functions that can be used in washing cycles are shown with letters such as "A, B,D,E,G,F,K..." in the "Cycle information and average consumption values table. You can find instructions on the use of these functions in the "Additional functions" section of the user manual.

 Some auxiliary functions cannot be used together. If the function you have selected is not active even though it appears in the "Cycle information and average consumption values table", you can activate it after switching off other auxiliary functions.

To add additional functions to the cycle:

1. Select the desired washing cycle.
2. When you select an additional function, the indicator of the additional function lights up. When you press the function button again, the indicator turns off and the selection is cancelled.

If your machine has sub-menu functions depending on the model, see the instructions in the additional functions section for their use.

 Not all of the functions indicated with letters such as "A,B,D,E,G,F,K..." in the cycle information and average consumption values table can be used in your machine, the functions that can be used in your machine are explained in the additional functions section of this manual.

SteamGloss function (E)

(depends on the model)


This function enables high level of drying performance. It can extend the duration of the selected cycle up to 30 minutes.

Hygiene Intense function (H)

(depends on the model)

Designed to be used when more hygiene is required for washing the dishes. This function increases the washing and rinsing temperatures and duration of the selected cycle. Moreover, an additional rinsing cycle is performed to wash and rinse your dishes with more hygiene.

If the Automatic Door Open feature is active on the product,Hygiene Intense function cannot be selected.

 Hygiene Intense function hygiene efficiency related information can be found in the function data sheet.

Self Dry Function (K)

(Depends on the Model)

"Self Dry " " feature of your machine increases drying efficiency of your machine and saves energy.

When you activate this function, the door of your machine opens automatically at the end of the washing cycle.

Function can extend the duration of the selected cycle up to 35 minutes.

i Function can extend the duration of the selected cycle up to 35 minutes.

i Self Dry feature opens the door of the machine at the end of the washing cycle, thanks to the "door opening shafts". This process takes approximately 2 minutes. If the power fails while the shafts are moving out, do not force to close the door. When the power is back, the process shall be completed, and the shafts shall return to their initial position.

Interior Lighting

(Depends on the Model)

In suitable models there is a lamp illuminating the inside of your machine when the door is opened.

1. After turning on your machine, press to the Setting Menu button for 3 seconds.

i In some models, you just need to press the menu key 1 time to access the settings menu.

2. Press the <- and +> buttons to move to the "L:" position on the screen. Select the desired position with select key. Interior illumination feature is off in "L:0" position and active in "L:1" position.

3. Turn off your machine with the On/Off key to save the setting.

Fast+ function (F)


(depends on the model)

By enabling the selected cycle to wash at higher pressure and temperature, it shortens the washing time and reduces the amount of water.

DeepWash function (B) / (Z)

(depends on the model)

The Bottle/Pot sprayer (A) situated under the lower spray arm provides a deeper wash for your bottles and heavily soiled dishes placed on the right side of the lower basket.

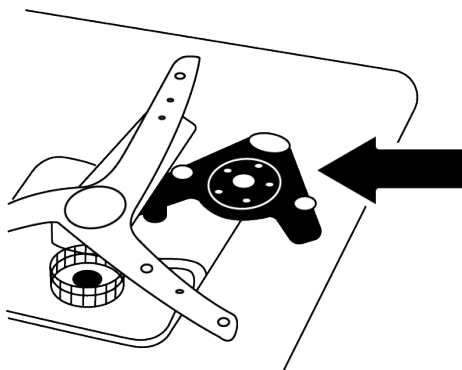

i Do not try to remove the Bottle/Pot washer part!

i It can extend the duration of the selected cycle by up to 35 minutes.

i It can be used as Pot Washer (Z) or Bottle Washer (B) according to your cycle selection. For detailed information, please refer to the Cycle Information and Average Consumption Values Table.

Tablet Detergent Function (T)

(depends on the model)

Depending on the mains water hardness, it provides better drying performance in washings made with multi-purpose detergents which are named 2in1, 3in1, 4in1, 5in1, all-in-one etc. When you select the tablet detergent function, the Tablet Detergent indicator lights up.

i Depending on the control system of your machine, if the Tablet Detergent function is not available in the cycle you selected, its indicator turns off. You can find the information in which cycles the tablet detergent function can be used in the "Cycle information and average consumption values table".

i In some models, depending on the control system of your machine, even though the Tablet Detergent function is not available in the cycle you have selected, its indicator may remain lit as long as the Tablet detergent function is not turned off. You can find the information in which cycles this function can be used in the "Cycle information and average consumption values table".

i If you used the Tablet Detergent feature in the last washing cycle you used, the Tablet Detergent function will remain active in the next washing cycle you selected.

i The tablet detergent function can increase the cycle time up to 35 minutes.

IonGuard function

(depends on the model)

The "IonGuard function" is activated at regular intervals and prevents the formation of odour due to the dirty dishes waiting in the machine. When this function is selected, your machine will be activated when it is turned off and the IonGuard light on the panel will flash, while it is normal to hear a ventilation sound from your machine. The system is automatically activated at regular intervals until the function selection is turned off.

7.4 Functions Under the Settings Menu

(depends on the model)

Additional functions under the settings of your dishwasher depends on the model. Press and hold the Menu key for 3 seconds to access these functions. Select the function or setting you want to make changes on with the <- and +> keys.

i In some models, you just need to press the menu key 1 time to access the settings menu.

Change the function or setting you want to make a change on with the selection key and turn off the dishwasher to save the settings.

Sub Menu Functions:

(depends on the model)

Self Dry Function Off / On



Tablet Detergent Function Off / On:



Additional Function Off / On:

(depends on the model)

(Heat Pump Warning)




7.5 Changing the Warning Tone Level

1. After turning on your machine, press the Menu button for 3 seconds.

i In some models, you just need to press the menu key 1 time to access the settings menu.

2. Press the <- and +> buttons to move to the "S:" position on the screen.
3. Each time you press the selection key, the warning volume changes to "S:0" off, "S:1" medium, "S:2" high.
4. Turn off your machine with On / Off button to save.

 Your machine is set to "S:2" at the factory.

7.6 Programming the Washing Time

Delaying


If economy billing schedule is applied for power in your region, you may use the delay function to wash your dishes at the relevant times.

You may delay the start time of the cycle you have selected up to 24 hours.

1. Press the delay key after selecting the washing cycle and any other additional functions.
2. When you press the delay key, "0:30" is displayed on the Screen Info Line and Delay indicator starts to flash.
3. Set the desired period by pressing the delay key. Each time you press the button, the time increases in 30 minute increments up to 6 hours and then in 1 hour increments up to 24 hours.
4. Close the door of your machine after the delay. Cycle shall start automatically when the delay period is over.

Changing the settings while the delay function is active


While the delay function is active, you cannot make changes to the washing cycle, additional functions or to the delay period.

 It is not possible to set/change the cycle and auxiliary functions after the start of the cycle.

To cancel the delay function:


Open the machine door and press Select Cycle / Cancel Cycle button for three seconds. After the 3 - 2 - 1 countdown, the


display will show 0:01, close the door of the dishwasher and wait until the draining process is completed. Discarding process will be completed within 2 minutes and your machine will beep when it is done.


 The delay function cannot be set after the cycle has started.

7.7 Starting of the Cycle

Close the door of your dishwasher to start your machine after selecting the cycle and additional functions.

 Machine softens the water as per the hardness of the mains water. The washing cycle time may also change while the cycle is being executed as a result of the room temperature, mains water temperature and the amount of dishes.

 Pay attention to avoid opening of the door while the machine is being operated. Be careful as steam may come out when you open the door of the machine.

 To ensure that the water remaining on the dishes and inside the machine is completely drained and that the water softener is removed after rinsing operation, it resumes operation at drying cycle after keeping silent for a while.

7.8 Cancelling the Cycle

Open the machine door and press Select Cycle / Cancel Cycle button for three seconds. After the 3 - 2 - 1 countdown, the display will show 0:01, close the door of the dishwasher and wait until the draining process is completed. Discarding process will be completed within 2 minutes and your machine will beep when it is done.



Detergent or rinse aid may remain inside the machine and/or the dishes being washed as per the step of the cycle you have cancelled.

7.9 Low Salt Warning Indicator

Check the low salt warning indicator on the screen of your machine to determine if the softening salt available in your machine is adequate. You shall add salt to the salt compartment when the low salt warning indicator on the screen of your machine starts to illuminate.



Setting of water hardness level is described in the Water Softening System section.

7.10 Low Rinse Aid Warning Indicator

Check the low rinse aid warning indicator on the screen of your machine to determine if the rinse aid available in your machine is adequate. You shall add rinse aid to the rinse aid compartment when the low salt warning indicator on the screen of your machine starts to illuminate.

7.11 Setting the Rinse aid Amount

1. After turning on your machine, press the Menu button for 3 seconds.



In some models, you just need to press the menu key 1 time to access the settings menu.

2. With the <- and +> buttons, it comes to "P." position on the screen.

3. Set to a proper level with the Select key.

4. Turn off your machine with On / Off button to save.

Applies no rinse aid in P:0 position during washing cycle.

Applies 1 dose of rinse aid in P:1 position.

Applies 2 dose of rinse aid in P:2 position.

Applies 3 dose of rinse aid in P:3 position.

Applies 4 dose of rinse aid in P:4 position.

7.12 End of cycle

When the cycle you have selected ends, an audible warning will alert you to switch off the machine.

This audible warning is repeated at regular intervals until your machine switches off.

Cycle End indicator illuminates when the washing cycle has ended.

1. Open the cover of the machine.

2. Press the On/Off key to switch off your machine

3. Switch off the tap.

4. Unplug the machine from the socket.

To save energy, the machine switches off automatically at the end of the cycle or if the cycle is not started.

After washing, leave the dishes in the machine for about 15 minutes to cool down. Your dishes shall dry faster if you half close the cover of your machine within this period. This shall improve the drying efficiency of the machine.

7.13 Heat Pump



Read the heat pump section under the safety warnings in the operation manual first.



Power consumption and program duration of your product varies as per the ambient temperature.



The compressor and the heating resistor may activate under conditions at and below 15 degrees.



You shall be informed with the warning symbol when the heating resistor is activated.



Heat pump system is deactivated when the heating resistor is activated.

7.14 Heat Pump System Failure (E26)

Confirm the message by pressing any key. The appliance is ready to be operated. Heat Pump system is not used.

7.15 Heat Pump Warning

Confirm the message by pressing any key. If the ambient temperature is below the specified temperature, the heat pump is deactivated and the heating resistor is activated.

8 Maintenance and Cleaning

8.1 Maintenance and cleaning



Read the "Safety Instructions" section first!



Unplug the machine and switch off the tap before cleaning.



Do not use abrasive materials when cleaning.



Clean the filter and spray arms at least once a week for efficient operation of the machine.

Regular cleaning will prolong the service life of the product and reduce common problems.

Cleaning the outer surface of the machine

Gently wipe the exterior of your machine and the door seals with a delicate cleaning agent and a damp cloth. Wipe the "control panel" only with a slightly damp cloth.

Cleaning the inside of the machine

Clean the machine monthly with detergent or special machine cleaning agents by running the machine on the cycle running at the highest possible temperature. This will help to remove debris and limescale from inside the machine.


If water remains in the machine, drain the water from the machine by following the procedure in the section "Cancelling the cycle". If the water cannot be drained, remove the filters as described in the "Cleaning the filters" section and check the bot-

tom of the machine for any dirt particles that have accumulated and blocked the waterway, and clean them if necessary.


8.2 Cleaning the filters

Clean the filters at least once a week for efficient machine operation. Check that no food residue remains on the filters. If any food residue remains, remove the filters and clean them thoroughly under the tap.


1. Remove the microfilter and coarse filter group by turning them anti-clockwise and pulling them out.

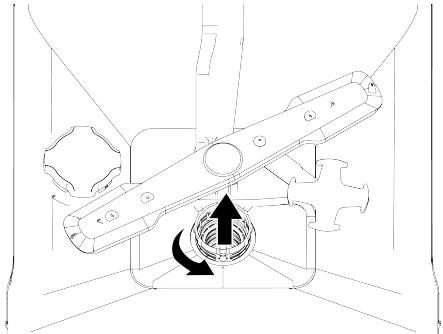

2. Pull out the metal/plastic filter (3).

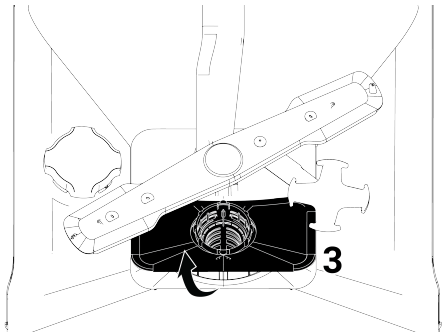

3. Press the two latches on the coarse filter inwards to separate the coarse filter from the group.

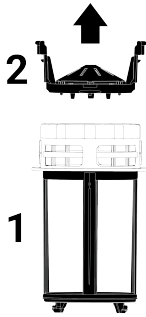

4. Clean all three filters under the tap with a brush.
5. Replace the metal/plastic filter.
6. Insert the coarse filter into the microfilter. Make sure that it is positioned correctly. Turn clockwise until it clicks.

i The machine must not be used without filters.


i Failure to install the filters correctly will reduce the washing efficiency.

8.3 Micro Filter Cleaning Mechanism

(depends on model)

i Filter cleanliness is increased by 80% with the micro filter cleaning system available on your machine.


i If your machine has auto filter cleaning feature do not remove the micro filter cleaning mechanism (4) for cleaning.

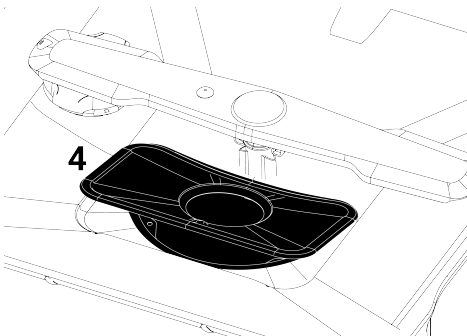

8.4 Cleaning the hose filter

The machine is prevented from being damaged by dirt (sand, clay, rust, etc.) from the mains or your water supply system by means of a filter in the water inlet hose. Check the filter and hose from time to time and clean them if necessary.

1. Switch off the tap and disconnect the hose.
2. After removing the filter from the hose, clean it under the tap.
3. Place the cleaned filter back in its place in the hose.
4. Attach the hose to the tap.
(depends on the model)

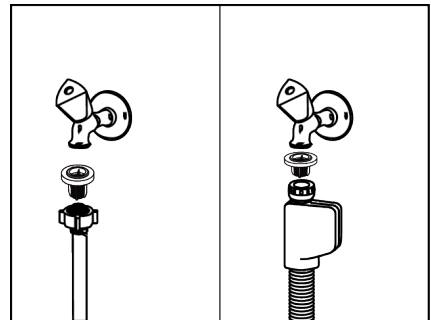


8.5 Cleaning the spray arms


Clean the spray arms at least once a week for efficient machine operation.

Lower spray arm

Check the lower spray arm (1) holes for blockage. If there is a blockage, remove and clean the spray arm. You can remove the lower spray arm by pulling it upwards (depending on model)

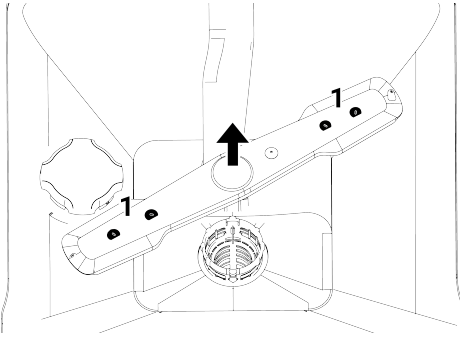

Check whether the holes of the spray arm assembly are blocked. If there is a blockage, remove and clean the spray arm assembly. (depends on the model)

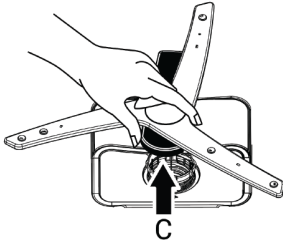




To disassemble and clean the lower spray arm assembly together, remove it by grasping the points (C) shown in the figure with one hand and pulling it upwards. After cleaning, reinstall the spray arm assembly by reversing the same procedure.

i Do not try to rotate the spray arm by holding it by its ends. Attempting to turn the spray arm by its ends may cause the gear system inside the spray arm to break.

Upper spray arm

Check the upper spray arm (1) holes for blockage. If there is a blockage, remove and clean the spray arm. You can remove the upper spray arm by turning the nut to the left.

Make sure that the nut is fully tightened when replacing the upper spray arm.

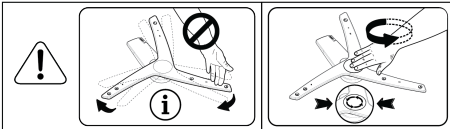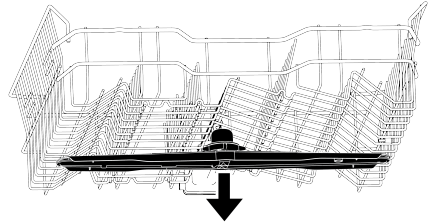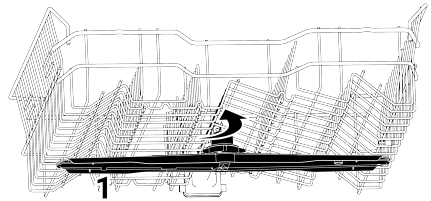

9 Troubleshooting

9.1 Error Codes, Causes and Solutions

Error Code	Cause	Solution
E01 Warning P1 Blinks Power LED blinks	Chassis water filling fault	1-Error algorithm is activated. 2-Cycle ends. If you see the error continuously, 1-Cut off the electricity. 2-Close the valve. 3-Get in touch with the authorized service.
E02 Warning P2 Blinks Water cut icon is lights up Wash LED is lights up	Water outage error	Check the water supply.
	Filter is blocked	1-Cut off the electricity connection. 2-Cut off the water connection. 3-Remove water inlet hose. 4-Check and clean the filter. 5-Establish the water connection. 6-Establish the electricity connection.
	Other	If the error continues, 1-Close your machine. 2-Get in touch with the authorized service.
E06 Warning P2 blinks P6 blinks	Temperature sensor in the machine is faulty	If you see this error continuously and washing performance has reduced, 1-Close your machine. 2-Get in touch with the authorized service.
E07 Warning F2 blinks F1 and F2 blinks	Flowmeter is faulty	1-Error algorithm is activated. 2-Cycle ends. If you see the error continuously, 1-Cut off the electricity. 2-Close the valve. 3-Get in touch with the authorized service.



Error codes may vary by model of your product.

9.2 Troubleshooting

Machine does not work.

- The mains plug may not be plugged in. >>> Check that the mains plug is plugged in.
- The fuse may have blown. >>> Check the fuses in your house.
- Water may not be coming out. >>> Make sure that the water inlet tap is open.
- The machine door may be open. >>> Make sure that the machine door is closed.
- "On/Off button" may not have been pressed. >>> Make sure to switch on the machine by pressing the "On/Off button".

Dishes are not cleanly washed

- Dishes are placed irregularly. >>> Place the dishes as specified in the user manual.
- The proper cycle is not selected. >>> Select a cycle with a higher temperature and washing for a longer time.
- Dishes are very dirty >>> Remove the coarse dirt of your dishes with a napkin and then place them into your machine.
- Spray arms are stuck. >>> Before starting the cycle, make sure that the upper and lower spray arms rotate freely by rotating them with your hand.
- The holes of the spray arms are clogged. >>> Upper or lower holes of the spray arms may be clogged with food residues such as lemon seeds. Clean the spray arms regularly as shown in the Section "Cleaning and maintenance."
- Filters are clogged. >>> Check whether the filter system is cleaned. Clean the filter system regularly as shown in the "Cleaning and maintenance" section.
- Filters are not installed correctly. >>> Inspect the filter system and make sure that it is installed correctly.
- Baskets are overloaded. >>> Do not load baskets above their capacity.
- Detergent is stored under improper conditions. >>> If you are using a powder detergent, do not store the detergent package in humid environments. If possible, store the detergent in a storage container with a lid. We recommend you to use tablet detergent for easy storage.
- Adequate amount of detergent is not added. >>> If you are using a powder detergent, put the amount of detergent suitable for the soil level of your dishes and for the definitions of the cycles. We recommend using tablet detergents to achieve the best results.
- Insufficient amount of rinse aid. >>> Inspect the low rinse aid warning indicator and add rinse aid, if required. If adequate amount of rinse aid is available in the machine, increase the setting for rinse aid.

- Detergent compartment cover is not closed. >>> Always close the cover of the detergent compartment after adding detergent.

Dishes are not dried

- Dishes are placed irregularly. >>> Place your dishes so that water shall not collect inside them during washing.
- Insufficient amount of rinse aid. >>> Inspect the low rinse aid warning indicator and add rinse aid, if required. If adequate amount of rinse aid is available in the machine, increase the setting for rinse aid.
- Machine is unloaded right after the end of washing cycle. >>> Do not unload your machine right after the end of washing cycle. Keep the door ajar and let the steam come out for some time and unload the machine when the dishes are cooled so that they are OK to be contacted by hand. Start the unloading operation from the lower basket. Thus, the water remaining on any dish on the upper basket is prevented from dripping on the dishes on the lower basket.
- The proper cycle is not selected. >>> Drying performance is low as the rinsing temperature is also low in short cycles. For a higher drying performance, select longer cycles.
- Tablet detergent is used, and tablet button is not pressed >>> If your machine has a "tablet detergent" function, activate it while using multi-purpose detergents.
- Surface quality of the kitchenware is poor. >>> You may achieve the expected washing performance on kitchenware with damaged surfaces, and the use of such kitchenware is not correct in terms of hygiene. Moreover, it is difficult for water to flow over damaged surfaces. It is not recommended to wash such kitchenware in the dishwasher.
- It is natural to have concerns about drying for Teflon kitchenware. This condition is a result of the structure of Teflon. As

the surface tensions of Teflon and water are different, water particles remain like beads on the Teflon surface.

Tea, coffee or lipstick stains are left on the dishes.

- The proper cycle is not selected. >>> Select a cycle with a higher temperature and washing for a longer time.
- Surface quality of the kitchenware is poor. >>> When tea, coffee stains and other stains caused by dyeing materials penetrate the damaged surfaces, it is not possible to remove such stains dishwashers. You may achieve the expected washing performance on kitchenware with damaged surfaces, and the use of such kitchenware is not correct in terms of hygiene. It is not recommended to wash such kitchenware in the dishwasher.
- Detergent is stored under improper conditions. >>> If you are using a powder detergent, do not store the detergent package in humid environments. If possible, store the detergent in a storage container with a lid. We recommend you to use tablet detergent for easy storage.

Lime stains remain on dishes and glassware looks blurred

- Insufficient amount of rinse aid. >>> Inspect the low rinse aid warning indicator and add rinse aid, if required. If adequate amount of rinse aid is available in the machine, increase the setting for rinse aid.
- Water hardness setting is low or salt level is inadequate. >>> Check the water hardness setting by measuring the hardness of the mains water accurately.
- There is a leak of salt. >>> Take care not to pour salt around the filler opening while adding salt. Ensure that the water softener lid is closed after adding salt. Clean the salt spilt into the machine by running the pre-wash cycle. Check the lid once more at the end of the cycle, as the salt particles remaining under the lid will dissolve in the pre-wash step, and thus the lid may loosen.

There is a different smell inside the machine

- New machines have a certain smell. This smell shall disappear after a few washing cycles.
- Filters are clogged. >>> Check whether the filter system is cleaned. Clean the filter system regularly as shown in the "Cleaning and maintenance" section.
- Chemicals that may cause odour are put inside the rinse aid reservoir. >>> Do not use chemicals such as vinegar, hand washing detergents, and descaling agents.
- Soiled dishes were kept in the dishwasher for 2-3 days. >>> If you shall start the machine immediately after putting the dishes into the machine, remove the soil on the dishes and run the Pre-Wash cycle without detergent every two days. Do not close the door of the machine completely to prevent occurrence of odour inside the machine in such cases. You may also use commercially available deodorizing and machine cleaning agents.

Rust stains, tarnishing, surface deterioration on the dishes

- There is a leak of salt. >>> Salt may cause deterioration and corrosion on metal surfaces. Take care not to pour salt around the filler opening while adding salt. Ensure that the water softener lid is closed after adding salt. Clean the salt spilt into the machine by running the pre-wash cycle. Check the lid once more at the end of the cycle, as the salt particles remaining under the lid will dissolve in the pre-wash step, and thus the lid may loosen.
- Salty food residues have remained on the dishes for a long period of time. >>> If kitchenware soiled with such foods are to be kept in the machine, the soil shall be removed from the surface of the dish by the pre-washing cycle or the dishes shall be washed without waiting.

- There is no earth line in the electrical installation. >>> Check if your machine is connected to a true earth line. Otherwise, the static electricity generated in the machine causes arcs and pits on the surface of the metal objects, removing the protective layer on the surface, and cause tarnishing of the surface.
- Intensive cleaning agents such as bleach are used. >>> The protective layer on metal surfaces gets damaged when it comes into contact with cleaning agents such as bleach, and thus loses its effect over time. Do not wash your dishes with bleach. If you want to wash your dishes using bleach, your dishwasher shall have a special equipment and a function that allows washing with bleach. With this equipment and function, the appropriate amount of bleach shall be taken into the washing environment in the right step, then we may benefit from its hygienic effect and rinse the dishes in the best way.
- Metal items, such as knives in particular, were used outside of their intended use. >>> If the knives are used for purposes such as opening the cans, the protective layer on their ends shall be damaged. Do not use metal kitchenware outside of their intended use.
- Cutlery are made of low quality stainless steel. >>> It is inevitable that such items will rust, thus they shall not be washed in the dishwashers.
- Previously rusted kitchenware are washed in the dishwasher. >>> Rust on a corroded item may migrate to other stainless steel surfaces during washing and cause rust to appear on those surfaces, too. Such items shall not be washed in dishwashers.
- Opening of the detergent reservoir lid is prevented during washing operation. >>> Place the dishes in a way that does not prevent the detergent reservoir lid from opening and water from the spray arms flowing into the reservoir.
- Detergent is stored under improper conditions. >>> If you are using a powder detergent, do not store the detergent package in humid environments. If possible, store the detergent in a storage container with a lid. We recommend you to use tablet detergent for easy storage.
- The holes of the spray arms are clogged. >>> Upper or lower holes of the spray arms may be clogged with food residues such as lemon seeds. Clean the spray arms regularly as shown in the Section "Cleaning and maintenance."

Patterns and decorations on kitchenware are erased.

- Patterned glasses and porcelain items with a pattern on the glaze are not suitable for washing in the dishwasher. Glass and porcelain tableware manufacturers do not recommend washing such kitchenware in the dishwasher.

The dishes are being scratched.

- Kitchenware and accessories made of aluminium or that contain aluminium shall not be washed in the dishwasher.
- There is a leak of salt. >>> Take care not to pour salt around the filler opening while adding salt. Salt spread around may cause scratching. Ensure that the water softener lid is closed after adding salt. Clean the salt spilt into the machine by running the pre-wash cycle. Check the lid once more at the end of the cycle, as the salt particles remaining under the lid will dissolve in the pre-wash step, and thus the lid may loosen.
- Water hardness setting is low or salt level is inadequate. >>> Check the water hardness setting by measuring the hardness of the mains water accurately.
- The dishes are not placed properly. >>> When placing glasses and other glass kitchenware in the basket, do not lean them

Detergent residues are present in the detergent reservoir.

- Detergent was put in a long time before the washing procedure. >>> Take care to put in the detergent just before starting the washing operation.

against other dishes, but on the edges of the basket, on the racks or on the glass supporting wire. When two glasses or other dishes being washed hit each other due to the impact of water during washing operation, this may cause scratching/ breaks on the surfaces.

- A blurred stain that looks like a milk soil remains on glasses, which cannot be removed when wiped by hand. When exposed to light, a bluish /rainbow coloured appearance is observed.
- Excessive amount of rinse aid is used. >>> Lower the setting of rinse aid. While adding the rinse aid, always clean the rinse aid overflow to the surroundings.
- Corrosion has occurred on the glass due to soft water. >>> Check the water hardness setting by measuring the hardness of the mains water accurately. Do not use salt if your mains water is soft (<5 dH). Use cycles with a higher temperature setting (e.g. 60-65 degrees) for washing. You may also use commercially available glass-protecting detergents.

Foam occurs in the machine.

- Dishes are washed by hand with dish washing detergent and then put into the machine without rinsing before they are placed in the machine. >>> No foam control characteristics are available in dish washing detergents intended for hand

10 DISCLAIMER / WARNING

Some (simple) faults can be repaired by end users without causing any safety problems or unsafe use, provided that they are carried out in accordance with the following instructions. (See the section "I Want To Repair Myself").

Therefore, except for the parts specified in the "I Want to Repair Myself" section that can be repaired by end users, repair by an authorised service station is strongly recommended to prevent safety problems and is mandatory for the continuation of the Beko product warranty.

washing. You do not need to hand wash the dishes with detergent before placing them in the machine. Simply rinse off the coarse soil on the surface of the dish with water or scrape it off with a paper napkin or a fork.

- Rinse aid was spilt into the machine while adding rinse aid. >>> Take care not to spill rinse aid into the machine while adding rinse aid. Clean spilt rinse aid with a paper napkin/towel.
- The rinse aid reservoir lid has been left open. >>> Make sure to close the rinse aid reservoir lid after adding rinse aid.

Kitchenware break.

- Dishes are placed irregularly. >>> Place the dishes as specified in the user manual.
- Baskets are overloaded. >>> Do not load baskets above their capacity.
- Water remains in the dishwasher after the end of the cycle.
- Filters are clogged. >>> Check whether the filter system is cleaned. Clean the filter system regularly as shown in the "Cleaning and maintenance" section.
- The drain hose is clogged / blocked. >>> Inspect the drain hose. Remove the hose if required to remove the blockage and then install it again as described in the installation instructions.

Repairs to be carried out by end users can be performed for the following spare parts: External Power Supplies, Remote Control. (Current spare parts list is available at <https://www.beko.com.tr/destek> address as of 1 March 2021)

In addition, to ensure product safety and to avoid the risk of serious injury, repairs must be carried out according to the instructions in the instruction manual or at <https://www.beko.com.tr/destek> address. For your safety, unplug the product before carrying out any repair work.

I WANT TO REPAIR MYSELF

Beko cannot be held responsible for any safety problems that may arise due to repair operations or attempts by end-users to repair parts other than those specified in the user manuals or in accordance with the instructions in the <https://www.beko.com.tr/destek> address and parts in the current parts list available at the <https://www.beko.com.tr/destek> address. In such a case, the Beko product warranty will be invalid.

Therefore, end-users are strongly recommended to refrain from performing repair operations for parts other than the spare parts mentioned above by themselves and to contact an authorised service station if

necessary. Such repair attempts by end users may cause safety issues; damage the product and subsequently result in fire, flooding, electric shock and serious personal injury.

Repair processes of the following parts, but not limited to those listed, should be performed by authorised service stations: Internal Power Supply, Capacitors, Battery and Accumulators, etc.

The manufacturer/seller cannot be held responsible for any failure of end users to comply with the above.

11 BEKO UK AND ROI STANDARD MANUFACTURER GUARANTEE TERMS AND CONDITIONS

Your new Beko product is guaranteed against faulty materials, defective components or manufacturing defects.

The standard guarantee starts from the date of original purchase of the product and lasts for a period of twelve (12) months unless Beko plc (the “Manufacturer”) agrees to extend the guarantee for the product in writing. If you have purchased an American style Fridge freezer, the standard guarantee starts from the date of original purchase of the product, and lasts for a period of twenty four (24) months unless Beko plc (the “Manufacturer”) agrees to extend the guarantee for the product in writing.

If you have any questions about the guarantee on your product (including how long it is valid), please contact your retailer or our Customer Service Team on 0333 207 9710 (UK and Northern Ireland) or 01 862 3411 (Republic of Ireland) This guarantee does not in any way diminish or affect your statutory rights in connection with the product. This guarantee is in addition to your statutory rights as a consumer. If you have any questions about these rights, please contact the retailer from which you purchased the product. In certain circumstances, it is possible that your statutory rights may of-

fer additional or higher levels of protection than those offered under the terms of this guarantee.

What is covered by this guarantee?

- Repairs to the product required as a result of faulty materials, defective components or manufacturing defects.
- Functional replacement parts to repair a product.
- The costs of a Beko plc Authorised Service Representative or Approved Engineer (together the “ServiceRepresentatives”) to carry out the repair.

What is not covered?

- Transit and delivery damage
- Cabinet or appearance parts, including but not limited to control knobs, flaps and handles
- Accessories and/or consumable items including but not limited to ice trays, scrapers, cutlery baskets, filters and light bulbs
- Repairs necessary as a direct or indirect result of: -Accidental damage, misuse or abuse of a product. -An attempted repair of a product by anyone other than a Service Representative. -Installation or use of a product where such installation or use fails to meet the requirements contained in this guarantee or the User Instructions Booklet

•Repairs to a product operated at any time on commercial or non-residential household premises (unless we have previously agreed to the installation environment).

This guarantee is limited to the cost of repairing the product. To the extent permitted by law, the Manufacturer does not accept and will not be held liable for any financial loss incurred in connection with the failure of any product to operate in accordance with the expected standards. Such financial loss includes but is not limited to loss arising from:

- Time taken off work
- Damaged food, clothing or other items
- Meals taken at restaurants or from takeaways
- General compensation for inconvenience.

Important Notes

1. Your product is designed and built for domestic household use only.

2. The guarantee will automatically be void if the product is installed or is used in commercial or non-residential domestic household premises, unless we have previously agreed to the installation environment.

3. The product must be correctly installed, located and operated in accordance with the instructions contained in the User Instructions Booklet provided with your product.

4. Professional installation by a qualified electrical domestic appliance installer is recommended for all Washing Machines, Dishwashers and Electric Cookers (as incorrect installation may result in you having to pay for the cost of repairing the product). 48/EN

5. Gas Cookers must be professionally installed by a Gas Safe (or Gas Networks Ireland for Republic of Ireland) registered gas installer.

6. This guarantee is given in respect of products purchased and used within the United Kingdom and the Republic of Ireland.

7. This guarantee is effective from the initial date of purchase of a new product from an authorised retailer and will be void if the product is resold.

8. This guarantee does not apply to graded sales (where the product is purchased as a “second”).

9. Possession of a copy of these terms and conditions does not necessarily mean that a product has the benefit of this guarantee. If you have any questions, please call our Customer Service Team on the number set out above.

10. The Manufacturer reserves the right to terminate the guarantee if its staff or representatives are subjected to physical or verbal abuse in the course of carrying out their duties.

11. Optional extras, where available (i.e. extendable feet) are supplied on a chargeable basis only.

Does Beko offer replacements?

This is a repair-only guarantee. On occasion, the Manufacturer may at its sole discretion, replace your product with a new product instead of carrying out a repair. Where a replacement is offered, this would normally be an identical model but when this is not possible, a model of similar specification will be provided. Subject to agreement, the Manufacturer will cover the costs and arrange for the delivery of the new product and for the return of the old product. Any costs related to disconnecting the faulty product and installing the replacement product will not be borne by the Manufacturer unless previously agreed to in writing. The original guarantee will continue to apply to the replacement product; the new product will not come with a new guarantee.

When will the repair take place?

Our Service Representatives work Monday to Friday 9.00am to 5.00pm. Appointments outside these hours may be possible at the sole discretion of the Manufacturer but cannot be guaranteed. Whilst our Service Representatives will endeavour to minimize inconvenience and to meet requests for

specific timed appointments, this cannot be guaranteed. We will not be liable for delays or if it is unable to carry out a repair because a convenient appointment cannot be arranged.

Will there be any charge for the repairs?

It is your responsibility to provide evidence to the Service Representative that your product is covered by this guarantee with a proof of purchase. The Manufacturer reserves the right to charge for the reasonable cost of any service call if:

- You cannot provide evidence that your product is covered by this guarantee.
- Where a service call has been made and the Service Representative finds that there is no fault with your product.
- That your product has not been installed or operated in accordance with the User Instructions Booklet.
- That the fault was caused by something other than faulty materials, defective components or manufacturing defects.
- For missed appointments.

Payment of these costs are due immediately upon the Service Representative providing you with an invoice. The Manu-

facturer reserves the right to terminate the guarantee if you fail to pay the costs for the service call in a timely manner.

If you are a resident of the United Kingdom, this guarantee will be governed by English law and subject to the exclusive jurisdiction of the English Courts, save where you live in another part of the United Kingdom, in which case the governing law and exclusive jurisdiction of the courts of that country will apply.

If you are resident in the Republic of Ireland, this guarantee will be governed by Irish law and the Irish courts will have exclusive jurisdiction. This guarantee is provided by Beko plc. Beko House, 1 Greenhill Crescent, Watford, Hertfordshire. WD18 8QU. Beko plc is registered in England and Wales with company registration number 02415578.

If you have purchased a built-in or integrated appliance, and registered it within 90 days of purchase by completing the online registration form, then the standard 12 month guarantee will be extended to 24 months, under the same terms and conditions as detailed in our Standard Guarantee Terms and Conditions.

12 BEKO UK AND ROI PARTS GUARANTEE TERMS AND CONDITIONS

This 10 year parts guarantee relates to Beko products.

To confirm if your Beko appliance has our 10-year parts guarantee you can visit our website at beko.co.uk/guarantee-terms or telephone our registrations team on 0800 497 0732. The Parts guarantee terms and conditions are in addition to our Standard guarantee terms and conditions detailed in the previous section.

In order to activate the 10 year parts guarantee you MUST register the appliance within 90 days of the original purchase date. You can register by visiting our websites. For UK customer visit beko.co.uk/register or phone 0800 497 0732. For ROI customers visit beko.ie/register or phone 1800 911 690. Our Beko

branded appliances carry FREE replacement parts for the first 10 years, provided they are fitted by our Service Representatives, at the applicable labour charge.

Beko free standing appliances come with a 12 month parts and labour guarantee as standard. Beko built-in, integrated appliances or American fridge freezers come with a 12 month parts and labour guarantee as standard. This is extended to 24 months, free of charge, upon registration of the appliance. When you register your appliance for additional guarantee, you will automatically activate the 10 year parts guarantee. You do not need to register twice. To make a claim against your Beko Parts Guarantee (the "Guarantee"), all customer and

product details must be registered with Beko plc using the procedure outlined below:

1. This extra 9 years (for free standing appliances) or 8 years (for built-in or integrated appliances or American fridge freezers) guarantee is only effective after the expiration of the standard manufacturer's guarantee.

2. It is only valid for certain models of Beko branded products serviced or repaired by Beko plc Authorised Service Representative and Own Engineers (the "Service Representative") and does not cover any labour charge or any:

a. Components including but not limited to cabinet or appearance parts, control knobs, flaps and handles.

b. Accessories and/or consumable items including but not limited to ice trays, scrapers, cutlery baskets, filters and light bulbs.

3. To activate your guarantee, you MUST register your appliance within 90 days of the original purchase date, For UK customers, visit beko.co.uk/register or phone 0800 497 0732. For ROI customers visit beko.ie/register or phone 1800 911 690.

4. Registrations made after 90 days of the original purchase date, may be required to pay an additional fee to activate the 10 year free parts guarantee.

5. Any repair must be carried out by a Service Representative and booked directly with Beko plc.

6. Labour for the repair is not included in this guarantee and is chargeable at the time of booking a repair.

7. The repair is guaranteed for 12 months for the same defect.

8. In the unlikely event that the appliance is beyond economical repair we may at the sole discretion of Beko plc offer you an appliance at a reduced price. Our call out fee will still apply.

9. If the fault can't be identified and the appliance is functioning normally a call out fee will apply.

10. The guarantee is not transferable and cannot be exchanged for cash.

11. There are no alternative or additional offers to this guarantee.

12. The guarantee is exclusive of the manufacturer's standard guarantee.

13. All repair pricing can be found here beko.co.uk/guarantee-terms (UK & ROI). Alternatively contact our Customer Services Team for further information.

14. All prices are subject to change without notice.

15. The Terms and Conditions shown above are in addition to the standard terms and conditions of your product guarantee.

Please read and refer to such Terms and Conditions when making any claim.

16. We may use the information you provide for marketing purposes and to analyse your purchasing preferences. We may keep your information for a reasonable period for these purposes in accordance with the applicable Data Protection Laws and General Data Protection Regulations (GDPR). You can opt into this service during the registration process. Further details are available at beko.co.uk/cookie-and-privacy-policy

17. These Terms and Conditions are governed by the laws of England and Wales; manufacturer: Beko plc, Beko House, 1 Greenhill Crescent, Watford WD18 8QU. Company Registration Number: 02415578.

13 HOW TO OBTAIN SERVICE FOR YOUR APPLIANCE

Please keep your purchase receipt or other proof of purchase details in a safe place; you will need to have this documentation available should the product require attention under guarantee.

Please take a few moments to complete the details below, as you will need this information when you call us, or to use our online services. For help please visit beko.co.uk/support/model-finder

- The product model number is printed on the Operating Instruction Booklet / User guide
- The product model and serial number is printed on the Rating Label affixed to the appliance.

- The Retailer (Purchased from) and Date of purchase will be printed on your purchase receipt or other proof of purchase paperwork
- Recording of these details alone will not count as proof of purchase. A valid proof of purchase is required for requesting service under guarantee.

Model Number	Serial Number	Purchased from	Date of Purchase

For service under guarantee or for product advice please call our Customer Service Team

Before requesting service please check the troubleshooting guide in the Operating Instructions booklet or our video support found beko.co.uk/support/how-to-guides, as a charge may be levied where no fault is found, even though your product may still be under guarantee.

After arranging a service visit please ensure the area around the product must be easily accessible to the Service Representative, without the need for cabinets or furniture to be removed or moved.

It is your responsibility to ensure our Service Representatives have a clean and safe environment to carry out any repairs.

Please have your Model number and Serial number available when you call us, as you will be required to provide it prior to booking a service visit

**UK Mainland & Northern Ireland:
0333 207 9710**

Landline or mobile calls to 0333 numbers cost no more than calls to geographic numbers 01 or 02 and are charged at the basic rate. Calls from landlines and mobiles are included in free call packages but please check with your telephone service provider for exact call charges.

Republic of Ireland

01 862 341

Service once the manufacturers guarantee has expired

If you have purchased an extended guarantee please refer to the instructions contained within the extended guarantee agreement document, otherwise please call us using the appropriate number above, where service can be obtained at a charge. If you do not have any extended guarantee you can call the Customer Services Team for UK customers on 0330 123 1750 and ROI customers on 01 862 3411

Contact us through our website

Send us a secure message through our online contact us form. Please visit our website, click Contact Us and choose a product support topic from the list of options. Complete the required details and click send message.

Product registrations

For UK registrations please visit beko.co.uk/register and for the Republic of Ireland visit beko.ie/register