


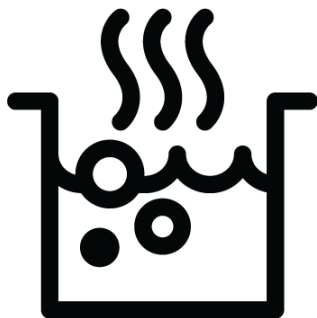

Built-in Hob

User Manual



CIHYQI21B

185920493/ EN/ R.AA/ 14.07.2025 15:11
7757182134



Welcome!

Dear Customer,

Thank you for choosing the Beko product. We want your product, manufactured with high quality and technology, to offer you the best efficiency. Therefore, carefully read this manual and any other documentation provided before using the product.

Keep in mind all the information and warnings stated in the user's manual. This way, you will protect yourself and your product against the dangers that may occur.

Keep the user's manual. If you give the product to someone else, give the manual with it. The warranty conditions, usage and troubleshooting methods for your product are provided in this manual.

The symbols and their descriptions in the user's manual:



Hazard that may result in death or injury.



Important information or useful usage tips.



Read the user's manual.



Hot surface warning.

NOTICE

Hazard that may result in material damage to the product or its environment.

Arçelik A.Ş.
Karaağaç caddesi No:2-6
34445 Söğütözü/İstanbul/TURKEY
Made in TURKEY

Table of Contents

1	Safety Instructions.....	4
1.1	Intended Use.....	4
1.2	Child, Vulnerable Person and Pet Safety	4
1.3	Electrical Safety.....	5
1.4	Transportation Safety	6
1.5	Installation Safety.....	7
1.6	Safety of Use	7
1.7	Temperature Warnings	8
1.8	Cooking Safety	8
1.9	Induction	8
1.10	Maintenance and Cleaning Safety	9
2	Environmental Instructions	9
2.1	Waste Directive.....	9
2.1.1	Compliance with the WEEE Directive and Disposing of the Waste Product	9
2.2	Package Information.....	10
2.3	Recommendations for Energy Saving.....	10
3	Your product	11
3.1	Product introduction	11
3.2	Technical Specifications.....	12
4	First Use	13
4.1	Initial Cleaning	13
5	How to use the hob	13
5.1	General Information About Using the Hob.....	13
5.2	Hob control unit.....	15
6	General Information About Cooking	21
6.1	General information about cooking with hob	21
7	Maintenance and Cleaning	23
7.1	General Cleaning Information.....	23
7.2	Cleaning the hob.....	24
7.3	Cleaning the Control Panel	24
8	Troubleshooting.....	24



1 Safety Instructions

- This section includes the safety instructions necessary to prevent the risk of personal injury or material damage.
- If the product is handed over to someone else for personal use or second-hand use purposes, the user's manual, product labels and other relevant documents and parts should also be given.
- Our company shall not be held responsible for damages that may occur if these instructions are not observed.
- Failure to follow these instructions shall void any warranty.
- Always have the installation and repair works made by the manufacturer, the authorised service or a person that the importer company shall designate.
- Use original spare parts and accessories only.
- Do not repair or replace any component of the product unless it is clearly specified in the user's manual.
- Do not make technical modifications on the product.



1.1 Intended Use

- This product is designed to be used at home. It is not suitable for commercial use.
- Do not use the product in gardens, balconies or other outdoors. This product is intended to be used in households and in the staff kitchens of shops, offices and other working environments.
- **CAUTION:** This product should be used for cooking purposes only. It should not be used for different purposes, such as heating the room.



1.2 Child, Vulnerable Person and Pet Safety

- This product can be used by children 8 years of age and older, and people who are underdeveloped in physical, sensory or mental skills, or who have lack of experience and knowledge, as long as they are supervised or trained about the safe use and hazards of the product.
- Children should not play with the product. Cleaning and user maintenance should not be performed by children unless there is someone overseeing them.

- This product should not be used by people with limited physical, sensory or mental capacity (including children), unless they are kept under supervision or receive the necessary instructions.
- Children should be supervised to ensure that they do not play with the product.
- Electrical products are dangerous for children and pets. Children and pets must not play with, climb on, or enter the product.
- Do not put objects that children may reach on the product.
- Turn the handle of the pots and pans to the side of the counter so that children cannot grab and burn.
- **CAUTION:** During use, the accessible surfaces of the product are hot. Keep children away from the product.
- Keep the packaging materials out of the reach of children. There is a hazard of injury and suffocation.
- Before discarding worn out and useless products:
 1. Unplug the power plug and remove it from the socket.
 2. Cut off the power cable and disconnect it with the plug from the product.

3. Take precautions to prevent children from entering the product.
4. Do not allow children to play with product when it is in idle mode.



1.3 Electrical Safety

- Plug the product into a grounded outlet protected by a fuse that matches the current ratings indicated on the type label. Have the grounding installation made by a qualified electrician. Do not use the product without grounding in accordance with local / national regulations.
- The plug or the electrical connection of the appliance shall be in an easily accessible place. If this is not possible, there should be a mechanism (fuse, switch, key switch, etc.) on the electrical installation to which the product is connected, in compliance with the electrical regulations and separating all poles from the network.
- Unplug the product or switch off the fuse before repair, maintenance and cleaning.
- Plug the product into an outlet that meets the voltage and frequency values specified on the type label.

- (If your product does not have a mains cable) only use the connecting cable described in the "Technical specifications" section.
 - Do not jam the power cable under and behind the product. Do not put a heavy object on the power cable. The power cable should not be bent, crushed, and come into contact with any heat source.
 - Make sure that the power cable is not jammed while putting the product to its place after assembly or cleaning.
 - Use original cable only. Do not use cut or damaged cables.
 - Do not use an extension cord or multi-plug to operate your product.
 - Contact the authorized service centre or importer to use the approved adapter in cases where the use of a converter adapter (for plug type) is necessary.
 - Contact the importer or the authorized service centre if the length of the power line is inadequate.
 - Portable power sources or multiple plugs may overheat and catch fire. Keep multiple plugs and portable power sources away from the product.
 - If the power cable is damaged, it must be replaced by the manufacturer, an authorized service or a person to be specified by the importer company in order to prevent possible dangers.
- If your product has a power cable and plug:
- Never put the product plug into a broken, loose, or out-of-socket plug. Make sure the plug is fully inserted into the socket. Otherwise the connections may overheat and cause a fire.
 - Avoid inserting the device into plugs that are greasy, unclean, or potentially exposed to water (such as those near a worktop where water may escape). Otherwise there is a risk of short circuit and electrocution.
 - Never touch the plug with wet hands!
 - Pull the plug out of the socket using the plug's body rather than the cord itself.



1.4 Transportation Safety

- Disconnect the product from the mains before transporting the product.
- When you need to transport the product, wrap it with bubble wrap packaging mater-

ial or thick cardboard and tape it tightly. Secure the moving parts of the product firmly to prevent damage.

- Before the product is installed, check the product for any damage after transport. Contact the importer or the authorized service centre if damaged.

1.5 Installation Safety

- Before beginning the installation, de-energize the power line to which the product will be connected by turning off the fuse.
- Always wear protective gloves during transport and installation. Otherwise there is a risk of injury from sharp edges!
- Before the product is installed, check the product for any damage. Do not have it installed if the product is damaged.
- Avoid using any heat-insulating materials to cover the interior of the furniture that will be installed.
- Direct sunlight and heat sources, such as electric or gas heaters, must not be present in the area where the product is installed.
- Keep the surroundings of all ventilation ducts of the product open.

- Do not install the product near a window. When you open the window, hot cookware may tip over.
- If there is a socket behind the place where the product will be installed, it must be ensured that the product does not come into contact with the socket nor with the plug plugged into the socket.
- There should be no gas hose, plastic water pipe and socket on the back or side wall of the place where the product will be installed. Otherwise, they may be deformed by the heat effect when the hob is operated and may create a safety risk.

1.6 Safety of Use

- Ensure that the appliance is switched off after every use.
- If you will not use the product for a long time, unplug it or turn off the power from the fuse box.
- Don't use the product if it breaks down or gets damaged while being used. Disconnect the product from the electricity. Contact the importer or the authorized service centre.
- **CAUTION:** If the hob surface is cracked, disconnect the product from the mains to avoid the risk of electric shock.

- **CAUTION:** If the hob glass surface is broken:

Switch off all gas and (if applicable) electric hotplates. Disconnect the product from the electricity.

- Do not touch the appliance surface.
- Do not use the appliance.
- Do not step on the appliance for any reason.
- Never use the product when your judgement or coordination is impaired by the use of alcohol and/or drugs.
- Flammable objects must not be kept in and around the cooking area. Otherwise, these may lead to fire.
- This product is not suitable for use with a remote control or an external clock.

1.7 Temperature Warnings

- **CAUTION:** When the product is in use, the product and its accessible parts will be hot. Care should be taken to avoid touching the product and heating elements. Children under 8 years of age should be kept away from the product unless constantly supervised.

- Do not place flammable / explosive materials near the product, as the surfaces will be hot while it is operating.
- **CAUTION:** Danger of fire: Do not store items on the cooking surfaces.

1.8 Cooking Safety

- **CAUTION:** The cooking process must be observed. Short-term cooking processes must be constantly observed.
- **CAUTION:** In solid or liquid oil cooking, it is dangerous to leave the hob unattended, which may cause a fire. NEVER try to extinguish the fire with water; disconnect the product from the mains, and then cover the flames with a cover or fire cloth (etc.).
- Be careful when using alcoholic drinks in your dishes. Alcohol evaporates at high temperatures and may cause fire since it can ignite when it comes into contact with hot surfaces.

1.9 Induction

- The electrically operated zones of your hob are equipped with advanced "Induction" technology. On the induction hob zones, which save time and energy, cookware suitable for in-

duction cooking must be used; otherwise the hob zone will not work. For detailed information, see the section "Pot selection".

- Since the induction hob creates a magnetic field, it can have harmful effects for people who use devices such as pacemakers or insulin pumps.
- Close the zone from its control panel after use, do not rely on the pot sensor.
- Metal objects such as knives, forks, spoons and lids should not be placed on the hob surface as they will get hot.
- Do not store metal objects in drawers under the hob. During long and intensive use, the materials here may overheat.

- Do not place electronic products such as mobile phones, tablets, computers on the induction hob. Your appliance may be damaged.



1.10 Maintenance and Cleaning Safety

- Wait for the product to cool before cleaning the product. Hot surfaces may cause burns!
- Never wash the product by spraying or pouring water on it! There is the risk of electric shock!
- Do not use steam cleaners to clean the product as this may cause an electric shock.

2 Environmental Instructions

2.1 Waste Directive

2.1.1 Compliance with the WEEE Directive and Disposing of the Waste Product

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).




This product has been manufactured with high quality parts and materials which can be re-used and are suitable for recycling. Therefore, do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to a collection

point for the recycling of electrical and electronic equipment. You can ask your local administration about these collection points. Disposing of the appliance properly helps prevent negative consequences for the environment and human health.

Compliance with RoHS Directive:


The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

DISPOSAL OF PACKAGING MATERIALS

 
The packaging material is 100% recyclable and is marked with the recycle symbol . The various parts of the packaging must

therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

DISPOSAL OF HOUSEHOLD APPLIANCES

This appliance is manufactured with recyclable or reusable materials. Dispose of it in accordance with local waste disposal regulations. For further information on the treatment, recovery and recycling of household electrical appliances, contact your local authority, the collection service for household waste or the store where you purchased the appliance. This appliance is marked in compliance with European Directive 2012/19/EU, Waste Electrical and Electronic Equipment (WEEE) and with the Waste Electrical and Electronic Equipment regulations 2013 (as amended). By ensuring this product is disposed of correctly, you will help prevent negative consequences for the environment and human health. The  symbol on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection center for the recycling of electrical and electronic equipment.

ENERGY SAVING TIPS



Make the most of your hot plate's residual heat by switching it off a few minutes before you finish cooking.

The base of your pot or pan should cover the hot plate completely; a container that is smaller than the hot plate will cause energy to be wasted.

Cover your pots and pans with tight-fitting lids while cooking and use as little water as possible. Cooking with the lid off will greatly increase energy consumption.

Use only flat-bottomed pots and pans.

NOTE: People with a pacemaker or similar medical device should use care when standing near this induction cooktop while

it is on. The electromagnetic field may affect the pacemaker or similar device. Consult your doctor, or the manufacturer of the pacemaker or similar medical device for additional information about its effects with electromagnetic fields of the induction cooktop.

DECLARATIONS OF CONFORMITY

This appliance meets: Ecodesign requirements of European Regulation 66/2014; Energy Labelling Regulation 65/2014; Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2019, in compliance with the European standard EN 60350-1.

This product can contain halogen light (Energy Efficiency Class G) or LED light source (Energy Efficiency Class F).

2.2 Package Information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging waste with the household or other wastes, take it to the packaging material collection points designated by the local authorities.


2.3 Recommendations for Energy Saving

According to EU 66/2014, information on energy efficiency can be found on the product receipt supplied with the product. The following suggestions will help you use your product in an ecological and energy-efficient way:


- Defrost frozen food before baking.
- Use pots / pans with a size and lid suitable for the hob zone. Always choose the right size pot for your meals. More than necessary energy is needed for containers of the wrong size.
- Keep hob baking areas and pot bases clean. Dirt reduces the heat transfer between the baking area and the pot base.

3 Your product

3.1 Product introduction

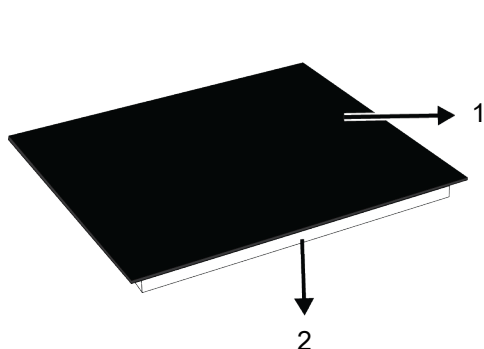

- 1 Glass cooking surface
- 3 Induction cooking zone
- 5 Induction cooking zone

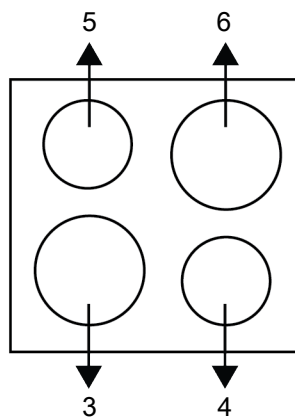

- 2 Lower housing
- 4 Induction cooking zone
- 6 Induction cooking zone

3.2 Technical Specifications

General specifications	
Product external dimensions (height/width/depth) (mm)	50 * /590 /520
Hob installation dimensions (width / depth) (mm)	560 (+2) /490 (+2)
Voltage/Frequency	1N~220-240 V /2N~380-415 V; 50 Hz
Cable type and section used/suitable for use in the product	min. H05V2V2-F 5 x 1,5 mm ²
Total power consumption (kW)	max. 5,6 kW
Fuse to be used (min.)	25 A

Cooking zones	
Front left	Induction cooking zone
Dimension	180 mm
Power	1800 W
Front right	Induction cooking zone
Dimension	145 mm
Power	1400 W
Rear left	Induction cooking zone
Dimension	145 mm
Power	1400 W
Rear right	Induction cooking zone
Dimension	180 mm
Power	1800 W

* The height of the hob specified in the technical table is the base cover height of the product.



Technical specifications may be changed without prior notice to improve the quality of the product.



Figures in this manual are schematic and may not exactly match your product.



Values stated on the product labels or in the documentation accompanying it are obtained in laboratory conditions in accordance with relevant standards. Depending on operational and environmental conditions of the product, these values may vary.

4 First Use

Before you start using your product, it is recommended to do the following stated in the following sections respectively.

4.1 Initial Cleaning

1. Remove all packaging materials.
2. Wipe the surfaces of the product with a wet cloth or sponge and dry with a cloth.

NOTICE: Some detergents or cleaning agents may cause damage to the surface. Do not use abrasive detergents, cleaning powders, cleaning creams or sharp objects during cleaning.

NOTICE: During the first use, smoke and odour may come up for several hours. This is normal and you just need good ventilation to remove it. Avoid directly inhaling the smoke and odours that form.

5 How to use the hob

5.1 General Information About Using the Hob

General warnings

- Do not allow any object to fall onto the glass cooking surface. Even small objects such as salt shakers can damage the glass cooking surface. Do not use a cracked glass cooking surface. Water can seep into these cracks and cause a short circuit. If the surface is damaged in any way (for example, visible cracks), first turn off the fuse, then unplug the product and call the authorized service to reduce the risk of electric shock.
- Do not use unstable or easily tipping cookware on the glass cooking surface.
- Do not heat empty cookware. Cookware and the product may be damaged.
- Be sure to turn off the cooking zones after each use.
- If you operate the cooking zones without the cookware, you will damage the product. Turn off the cooking zones after each use.
- The cooking zones will be hot after each use, so do not place plastic cookware on the cooking zones. Clean up any melted material on the surface immediately.
- Sudden temperature changes on the glass cooking surface may cause damage, be careful not to spill cold liquid during cooking.

- Put the appropriate amount of food in the cookware. This will prevent the food from overflowing and you will not have to do unnecessary cleaning.
- Do not place lids of cookware on the cooking zones.
- Place the cookware so that it is centered on the cooking zones. If you want to move the cookware to another cooking zone, lift it up and place it on the desired cooking zone instead of sliding it.

Working principle of induction hob

An induction hob is like an open circuit. When an induction-compatible cookware is placed on it, the circuit is completed and an electronic system located just below the glass cooking surface produces a magnetic field. The metal base of the cookware heats up by receiving energy from this magnetic field. In this way, the heat is produced not on the glass surface of the hob, but directly in the cookware above it. The glass surface heats up with the heat of the cookware.

Advantages of induction cooking

Induction hobs offer some advantages as the heat is transferred directly to the cookware.

- Foods that overflow during cooking do not burn quickly as the cooking glass surface is not directly heated. Easier cleaning is provided.

- Since the heat is generated directly in the cookware, cooking is faster, thus saving time and energy compared to other types of hobs.
- Since the heat is given directly to the cookware, there is no heat loss and more efficient cooking is achieved.
- As soon as the cookware is removed from the cooking zone, heat transfer stops and the cooking zone does not heat up directly, providing safer use against possible accidents that may occur during cooking.

For safe use:

- Do not select high heating levels when using non-stick cookware coated with no oil or very little oil (Teflon type).
- Do not use the glass cooking area as a surface to place items on or to cut on.
- Do not place metal objects such as cutlery or cookware lids on the cooking zone as they can get hot.
- Never use aluminum foil for cooking. Never place food wrapped in aluminum foil on the induction cooking zone.
- Keep magnetic objects, such as credit cards or tapes, away from the product while the cooking zones are in operation.
- If there is an oven under your hob and it is operating, the sensors in the product may reduce the cooking level or turn the product off.
- Your hob has an automatic shut-off system. Detailed information about this system is available in the following sections.

Cookware

It is recommended that you use only cookware that is ferromagnetic, of good quality and labeled or marked as induction compatible for your induction hob. In general, the higher the iron content, the better the cookware will perform. The diameter of the cookware base should match the induction cooking area. Recommended sizes are listed below.

Suitable cookware:

- Cast iron cookware
- Enamelled steel cookware


- Steel and stainless steel cookware (with a label or warning indicating that it is induction compatible)

Unsuitable cookware:


- Aluminum cookware
- Copper cookware
- Brass cookware
- Glass cookware
- Clay cooking pots
- Ceramic and porcelain cookware

Recommendations:


- Use only flat-bottomed cookware. Do not use cookware with concave or convex bases.

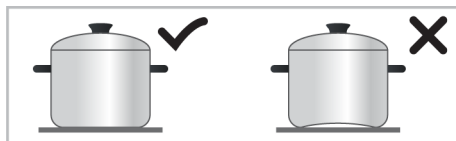


- Only use thick-based, processed cookware. If you use thin-based cookware, these cookware will heat up very quickly and the base of the cookware may melt before the automatic shut-off system is activated, damaging the cooking surface and the product. Sharp edges will scratch the surface.

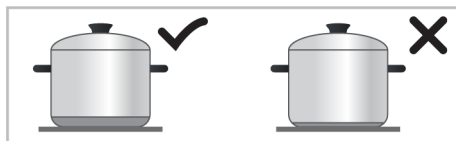

- Some cookware has a ferromagnetic field at the bottom that is smaller than its actual diameter. Only this area is heated by the cooking zone. Therefore, the heat is not distributed evenly and the cooking performance decreases. In addition, such cookware may not be detected by large induction cooking zones. For this reason, the cooking zone should be selected according to the size of the ferromagnetic field.

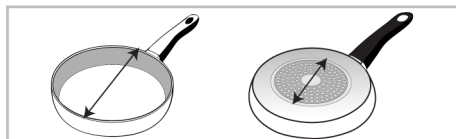

- Some cookware has a base that contains non-ferromagnetic materials such as aluminum. These types of cookware may not heat up sufficiently or may not be detected by the induction cooking zone at all. In some cases, a bad cookware warning may appear.

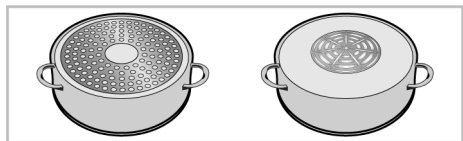

When cooking multiple dishes on induction cooking zones, distributing the cookware equally to the right-left and middle areas when selecting the cooking zone positively affects the cooking performance.

Cookware test

Test if your cookware is compatible with induction hobs using the methods below.

- If the base of the cookware holds a magnet, it is compatible.

- When you place the cookware on the induction cooking zone and turn on the product, if **L** does not flash, it is compatible.


Recommended cookware sizes

In order for the induction cooking area to recognize the cookware, it depends on the ferromagnetic diameter and material of the cookware base. For the recognition of the cookware and efficient cooking, the cookware should be selected according to the cooking zone size. The recommended cookware sizes according to the cooking zone size are given below.

The boiling behavior can vary depending on the type of cookware, the size of the cookware and the size of the cooking zone. For a more uniform boiling behavior, a cooking zone that is one size larger can be used. Using a larger cooking zone does not waste energy on induction hobs, because the heat is only created in the relevant cookware.

Cooking zone diameter - mm	Pot diameter - mm
145	min. 100 - max. 145
180	min. 100 - max. 180
210	min. 140 - max. 210
240	min. 140 - max. 240
280	min. 125 - max. 280
320	min. 125 - max. 320
2 x (92,7 x 200)	min. 100 - max. 180
Cooking zone with wide (flexi) surface	width 230 - length 390

5.2 Hob control unit

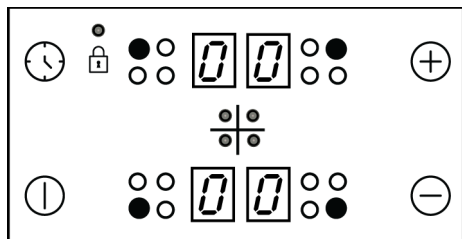

Keys :

- On/Off key
- Timer key

⊕ Increase key

⊖ Decrease key

Symbols :

🔒 Key lock symbol


Cooking zone selection keys :

- Rear left cooking zone selection key
- Front left cooking zone selection key
- Front right cooking zone selection key
- Rear right cooking zone selection key


General warnings for the control panel


- Graphics and figures are for informational purposes only. Actual displays and functions may vary according to the model of your hob.
- This product is controlled with a touch control panel. Each operation you make on your touch control panel will be confirmed by an audible signal.
- Always keep the control panel clean and dry. Having damp and soiled surface may cause problems in the functions.

Turning on the hob

1. Touch the  key on the control panel.

⇒ “0” icon appears on all cooking zone displays.

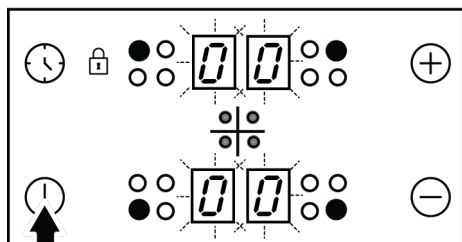


-  If no operation is performed within 20 seconds, the hob will automatically return to Standby mode.

Turning off the hob


1. Touch the  key on the control panel.

⇒ The hob will turn off and return to Standby mode.


-  “H” or “h” symbol that appears on the cooking zone display indicates that the cooking zone is still hot. Do not touch cooking zones.

 
Residual heat indicator

“H” symbol that appears on the cooking zone display indicates that the hob is still hot and may be used to keep a small amount of food warm. This symbol will soon turn to “h” symbol meaning less hot.


-  When power is cut off, residual heat indicator will not light up and does not warn the user against hot cooking zones.

Turning on the cooking zones

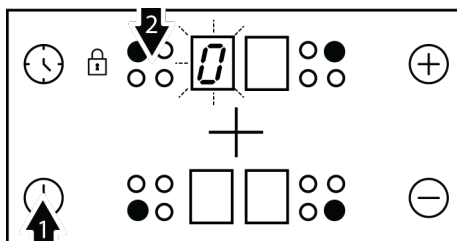




1. Touch  key to turn on the hob.
2. Touch the selection key of the cooking zone you want to turn on.


⇒ “0” symbol appears on the cooking zone display and the related display illuminates more brightly.

-  If no operation is performed within 20 seconds, the hob will automatically return to Standby mode.

Setting the temperature level

Touch  or  keys to set the temperature level between “1” and “9” or “9” and “1”.

-  The product might start-stop when it is operating on levels from 1 to 7, especially with cookware with a small diameter and when water-oil is little. This is not a fault.

-  The outer section of the 280 mm induction hob cooking zone (if your product is equipped with a 280 mm induction hob cooking zone) is activated only when a saucepan large enough to cover the cooking zone is placed on the cooking zone and the temperature is set to a level higher than 8.

Turning off the cooking zones:




A cooking zone can be turned off in 3 different ways:


1. **By dropping the temperature level to "0":** You can turn the cooking zone off by dropping the temperature adjustment to "0" level.
2. **By touching the relevant cooking zone symbol for a certain time:** Turn on the cooking zone by pressing relevant symbol for a certain time to drop temperature value to "0".
3. **By using the turn-off on the timer option for the desired cooking zone:**
When the time is over, the timer will turn off the cooking zone assigned to it. "0" or "00" will appear on related display. When the time is over, an audible alarm will sound. Touch any key on the control panel to silence the audible alarm.


High Power (Booster) It varies depending on the product model. It may not be available on your product.

For rapid heating, you can use booster function "P". However, this function is not recommended for cooking a long time. Booster function may not be available in all cooking zones.


 
Turning on High Power (Booster):

1. Touch  key to turn on the hob.
2. Select the desired cooking zone by touching the cooking zone selection keys.
3. Touch  or  key firstly to reach the level "9".

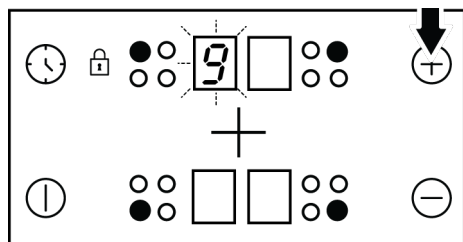

4. When the cooking zone is at level "9", touch  key once to set cooking zone temperature to "P".




Turning off High Power (Booster):


- To disable the Booster function, touch  and set the temperature to level "9". Cooking zone goes out of booster and continues to operate at level "9".
- You can decrease the temperature level by touching  or you can switch off the cooking zone completely by decreasing the temperature level to "0".


Keylock


You can activate the keylock to avoid changing the functions by mistake when the hob is operating.

Activating the keylock


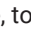

1. Touch  key to turn on the hob.
2. Touch  and  keys simultaneously to activate the keylock.

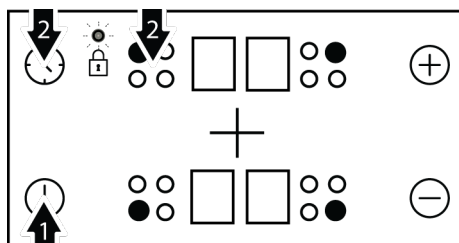

⇒ Keylock will be activated and the dot on the symbol  will light up.

 If you turn the hob off when the keys are locked, the keylock will be activated next time you turn the hob on again. Key lock must be deactivated in order to be able to operate the hob.


Deactivating the keylock

1. When the keylock is active, touch  and  keys simultaneously.
- ⇒ Keylock will be deactivated and the dot on the symbol  will disappear.





Childlock It varies depending on the product model. It may not be available on your product.


You can protect the hob against being operated unintentionally in order to prevent children from turning on the cooking zone.

Child Lock can only be activated and deactivated in Standby mode.

 Child lock will be cancelled in case of power failure.



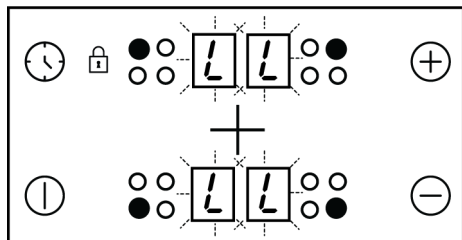

Activating the childlock

1. Touch  key to turn on the hob.
2. Touch  and  keys simultaneously
After "beep" signal touch  to activate the childlock.



⇒ Childlock will be activated and "L" symbol appears on all cooking zone display.

Deactivating the childlock


1. When the keylock is active, touch  key to turn on the hob.
2. Touch  and  keys simultaneously
After "beep" signal touch  to deactivate the childlock.


⇒ Childlock will be deactivated and "L" symbol disappears on all cooking zone display.




Timer function

This function facilitates cooking for you. It will not be necessary to attend the oven for the whole cooking period. Cooking zone will be turned off automatically at the end of the time you have selected.


Activating the timer

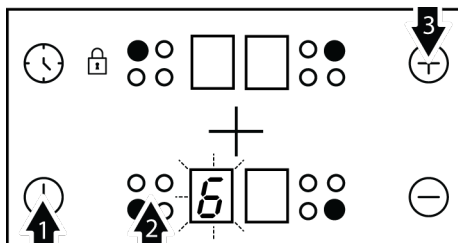
1. Touch  key to turn on the hob.
2. Select the desired cooking zone by touching the cooking zone selection keys.






3. Touch  or  keys to set the desired temperature level.
4. Touch  key to turn the timer on.

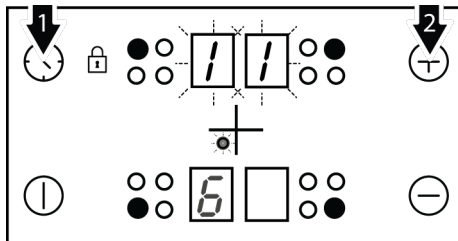
⇒ "00" symbol will illuminate on timer display and decimal point will appear on the selected cooking zone display.






 Right rear and left rear cooking zone displays serve as timer display when the timer is active.

5. Touch  or  keys to set the desired time.

 The timer can only be set for the cooking zones already in use.

 Repeat the above procedures for the other cooking zones for which you wish to set the timer.


 
 Timer cannot be adjusted unless the cooking zone and the temperature value for the cooking zone are selected.

 When the cooking zone for which a timer was set is selected, you can see the remaining time by touching the  key again.

Deactivating the timer


Once the set time is over, the hob will automatically turn off and give an audible warning. Press any key to silence the audio warning.

Turning off the timers earlier

- ✓ If you turn off the timer earlier, the hob will carry on operating at the set temperature until it is turned off.
- 1. Select the cooking zone you want to turn off.
- 2. Touch  key to turn the timer on.
- 3. Until "00" appears on the timer screen, touch  to set the value to "00".
 - ⇒ Dot shaped light on the relevant cooking zone display itself turns off **completely** after having flashed for a certain period of time and the timer is cancelled.

Power management function (It varies depending on the product model. It may not be available on your product.)

If your product has a power management function, you can change the total power setting that the hob will draw with the help of this function. There are 6 different levels for the power management function.


 Power management can only be done when the product is first installed and first energized. You can complete the setting by following the steps below within 30 seconds when the product is first energized.

Power management function - Adjustable total power levels








Power management display indicator Total power


25	2.5 kW
30	3 kW
36	3.6 kW


44	4.4 kW
54	5.4 kW
57	5.7 kW

 If the total power of your product is below the desired power, your product will operate at the total power level given in the technical table. (Technical Specifications [► 12])

To change the total power;

1. When the product is first energized, touch the keys //// within 30 seconds.
2. The power management level set is displayed on the timer display.
3. Touch the  key to switch between levels and set the total power value you want to set.
4. Confirm the setting by touching the  key and turn off the hob. Total power value you have set shall be activated

 The temperature levels you may assign to the hobs may vary as per the total power level set. The temperature level provided to the hob be reduced automatically as per the power setting to be performed by the hob. This is not an error.

 If a key other than the specified sequence is touched while changing the power level, the setting cannot be made. You have to repeat the steps from the beginning to make the setting.

Using induction cooking zones safely and efficiently

Operating principles: Induction hob heats directly the cooking vessel as a feature of its operating principles. Therefore, it has various advantages when compared to other hob types. It operates more efficiently and the hob surface does not heat up. Induction hob is equipped with superior safety systems that will provide you maximum usage safety.



Your hob can be equipped with induction cooking zones with a diameter of 145, 180, 210-280 mm depending on the model. With induction feature, each cooking zone detects each vessel placed on them. Energy builds up only where the vessel contacts with the cooking zone and thus, minimum energy consumption is achieved.

Automatic turning off system

The hob control has an automatic turn off system. If one or more hob zone(s) are left on, the hob zone turns off automatically after a while (See Table-1). In case of a timer assigned to the hob, the timer screen is turned off then, too. The time limit for automatic turn off depends on the selected temperature level. Maximum operating period is applied for this temperature level. The hob zone may be operated by the user again after it is turned off automatically as described above.

Temperature level	Automatic turning off periods - hours
0	0
1	6
2	6
3	5
4	5
5	4
6	1,5
7	1,5
8	1,5
9	20-30 minute
P (Booster)	5-10 minute*
(*) The hob will drop to level 9 after 5 minutes	

Table 1: Table-1: Automatic turning off periods

Overheating protection

Your hob is equipped with some sensors ensuring protection against overheating. Following may be observed in case of overheating:

- Active cooking zone may be turned off.
- Selected level may drop. However, this condition cannot be seen on the indicator.

Overflow safety system

Your hob is equipped with overflow safety system. If there is any overflow that spills onto the control panel, system will cut the power connection immediately and turn off your hob. "F" warning appears on display during this period.

Precise power setting

Induction hob reacts the commands immediately as a feature of its operating principles. It changes the power settings very fast. Thus, you can prevent a cooking pot (containing water, milk and etc.) from overflowing even if it was just about to overflow.



If the surface of the touch control panel is exposed to intense vapor, entire control system may become deactivated and give error signal.



Keep the surface of the touch control panel clean. Erroneous operation may be observed.

6 General Information About Cooking

You can find tips on preparing and cooking your food in this section.

6.1 General information about cooking with hob

- Never fill the pan with oil more than one third of it. Do not leave the hob unattended when heating oil. Overheated oils bring risk of fire. Never attempt to extinguish a possible fire with water! When oil catches fire, cover it with a fire blanket or damp cloth. Turn off the hob if it is safe to do so and call the fire department.
- Before frying foods, always remove their excess water and put them inside the heated oil slowly. Make sure that frozen foods are defrosted before frying.
- When heating oil, make sure that the pot you use is dry and keep its lid open.
- For recommendations on cooking with power saving, refer to the "Environmental Instructions" section.
- The cooking temperature and time values given for foods may vary depending on the recipe and amount. For this reason, these values are given as ranges.

Cooking table

Food	Temperature level	Baking time (min) (approx.)
Melting		
Chocolate melting (e.g..Dr.Oetker brand, bitter chocolate 55-60% cocoa,150 g)	1	20 ... 35
Butter (200 g)	6	5 ... 6
Boiling, Heating, Keeping Warm		
Water 1 L (Boiling)	9	2 ... 8
Water 3 L (Boiling)	9	8 ... 10
Milk 1 L (Boiling)	6	4 ... 6
Milk 1 L (Keeping warm)	1-2	18 ... 22
Vegetable oil (Heating) (Sunflower seed oil 0,5 L)	8	3 ... 5
Boiling		
Unshelled potato coarsely minced (2 Piece big size)	9	12 ... 14
Salmon fillet	8	10 ... 15
Sausage	9	2 ... 4
Pasta (150 g)	8	8 ... 12
Whole chicken (1,5 kg)	7-9	55 ... 70
Mixed vegetable stew	6-8	10 ... 20
Noodle	9	3 ... 6
Cooking, Sauteing		
Rice dish (200 g rice)	6-8	10 ... 30
Paella *	9	15 ... 20
Noah's pudding **		
Bean-Chickpea boiling Boiling - for noah's pudding	9	5 ... 6
Bean-Chickpea boiling cooking - for noah's pudding	3	10 ... 30
Wheat Boiling - for noah's pudding	9	2 ... 5
Wheat cooking - for noah's pudding	3	10 ... 30
Noah's pudding -All ingredients	8	20 ... 25

Food		Temperature level	Baking time (min) (approx.)
Shanks with vegetable **			
	Vegetable sauteing	9	3 ... 8
	Baking	4-5	120 ... 150
Soups (E.g. Lentil soup)		6-7	17 ... 20
Risotto		7-8	15 ... 25
Chicken Fajitas		9	10 ... 20
Chicken, vegetable, squid noodles		8-9	10 ... 18
Creamy mushroom chicken		8-9	10 ... 18
Stir Fry Chili Chicken *		8-9	5 ... 10
Spinach and minced meat dish		6-7	10 ... 15
Beef stew		7-8	60 ... 70
Bulgur pilaf (200 g)		6-8	15 ... 35
Beef Stragonoff		8-9	10 ... 15
Shallow fry			
Sea bass fillet		8	3 ... 7
Sirloin Steak ** (3-5 cm)		8	5 ... 9
Sausage		8	2 ... 5
Fried egg		7	4 ... 8
Omelet		7-8	3 ... 6
Burger Patty		6-8	6 ... 10
Chicken Ballantine (200 g)		8-9	6 ... 10
Crepe		8-9	2 ... 5
Flatbread		6-7	2 ... 5
Open bread		7-9	2 ... 5
Pan Pastry		8-9	6 ... 12
French fruit tost		8-9	2 ... 5
Mixed Vegetable Stir Fry *		7-8	9 ... 13
French fry			
Boortsog		8	13 ... 16
Schnitzel		8	5 ... 7
Nugget		8-9	4 ... 8
Frozen Potatoes (500 g)		8-9	8 ... 15
Fresh potatoes (500 g)		8-9	8 ... 15
Fresh apple sliced potatoes (200 g)		8-9	5 ... 10
Chicken Katsu		8-9	3 ... 6
Mixed Fry		8-9	10 ... 15
Shrimp Tempura		8-9	5 ... 7
Rice cakes		9	3 ... 7
* Wok pan is recommended.			
** Cast pan/pot is recommended.			

7 Maintenance and Cleaning

7.1 General Cleaning Information

General warnings

- Wait for the product to cool before cleaning the product. Hot surfaces may cause burns!
- Do not apply the detergents directly on the hot surfaces. This may cause permanent stains.
- The product should be thoroughly cleaned and dried after each operation. Thus, food residues shall be easily cleaned and these residues shall be prevented from burning when the product is used again later. Thus, the service life of the appliance extends and frequently faced problems are decreased.
- Do not use steam cleaning products for cleaning.
- Some detergents or cleaning agents cause damage to the surface. Unsuitable cleaning agents are: bleach, cleaning products containing ammonia, acid or chloride, steam cleaning products, descaling agents, stain and rust removers, abrasive cleaning products (cream cleaners, scouring powder, scouring cream, abrasive and scratching scrubber, wire, sponges, cleaning cloths containing dirt and detergent residues).
- No special cleaning material is needed in the cleaning made after each use. Clean the appliance using dishwashing detergent, warm water and a soft cloth or sponge and dry it with a dry cloth.
- Be sure to completely wipe off any remaining liquid after cleaning and immediately clean any food splashing around during cooking.
- Do not wash any component of your appliance in a dishwasher unless otherwise stated in the user's manual.

For the hobs:

- Acidic dirt such as milk, tomato paste and oil may cause permanent stains on the hobs and components of the hob

zones, clean any overflowed fluids immediately after cooling down the hob by turning it off.

Inox - stainless surfaces

- Do not use acid or chlorine-containing cleaning agents to clean stainless-inox surfaces and handles.
- Stainless-inox surface may change colour in time. This is normal. After each operation, clean with a detergent suitable for the stainless or inox surface.
- Clean with a soft soapy cloth and liquid (non-scratching) detergent suitable for inox surfaces, taking care to wipe in one direction.
- Remove lime, oil, starch, milk and protein stains on the glass and inox surfaces immediately without waiting. Stains may rust under long periods of time.
- Cleaners sprayed/applied to the surface should be cleaned immediately. Abrasive cleaners left on the surface cause the surface to turn white.

Glass surfaces

- When cleaning glass surfaces, do not use hard metal scrapers and abrasive cleaning materials. They can damage the glass surface.
- Clean the appliance using dishwashing detergent, warm water and a microfiber cloth specific for glass surfaces and dry it with a dry microfiber cloth.
- If there is residual detergent after cleaning, wipe it with cold water and dry with a clean and dry microfiber cloth. Residual detergent may damage the glass surface next time.
- Under no circumstances should the dried-up residue on the glass surface be cleaned off with serrated knives, wire wool or similar scratching tools.
- You can remove the calcium stains (yellow stains) on the glass surface with the commercially available descaling agent, with a descaling agent such as vinegar or lemon juice.

- If the surface is heavily soiled, apply the cleaning agent on the stain with a sponge and wait a long time for it to work properly. Then clean the glass surface with a wet cloth.
- Discolorations and stains on the glass surface are normal and not defects.

Plastic parts and painted surfaces

- Clean plastic parts and painted surfaces using dishwashing detergent, warm water and a soft cloth or sponge and dry them with a dry cloth.
- Do not use hard metal scrapers and abrasive cleaners. They may damage the surfaces.
- Ensure that the joints of the components of the product are not left damp and with detergent. Otherwise, corrosion may occur on these joints.

7.2 Cleaning the hob

Glass cooking surface

Follow the cleaning steps described for the glass surfaces in the "General cleaning information" section for the cleaning of glass cooking surface. You may complete your cleaning as per the information below for special cases.

8 Troubleshooting

If the problem persists after following the instructions in this section, contact your vendor or an Authorized Service. Never try to repair your product yourself.

The product does not work.

- Fuse may be faulty or blown. >>> Check the fuses in the fuse box. Change them if necessary or reactivate them.
- The appliance may not be plugged to the (grounded) outlet. >>> Check if the appliance is plugged in to the outlet.
- (If there is timer on your appliance) Keys on the control panel do not work. >>> If your product has a key lock, the key lock may be enabled, disable the key lock.
- If the hob does not turn on when the on/off key is pushed >>> Unplug it and wait at least 20 seconds before plugging it in.

- Sugar-based foods such as dark cream, starch and syrup should be cleaned immediately, without waiting for the surface to cool. Otherwise, the glass cooking surface may be permanently damaged.
- Do not use cleaning agents for cleaning operations you perform while the hob is hot, otherwise permanent stains may occur.

7.3 Cleaning the Control Panel

- When cleaning the panels with knob-control, wipe the panel and knobs with a damp soft cloth and dry with a dry cloth. Do not remove the knobs and gaskets underneath to clean the panel. The control panel and knobs may be damaged.
- While cleaning the inox panels with knob control, do not use inox cleaning agents around the knob. The indicators around the knob can be erased.
- Clean the touch control panels with a damp soft cloth and dry with a dry cloth. If your product has a key lock feature, set the key lock before performing control panel cleaning. Otherwise, incorrect detection may occur on the keys.

- It has overheat protection. >>> Wait for your hob to cool down.
- Appropriate pots may not be used. >>> Check your pots.

The symbol on the hob zone display is constantly lit.

- There may not be a pot on the that hob zone is operating. >>> Check if there is a pot on the hob zone.
- Your pot may not be induction compatible. >>> Check if your pot is suitable for induction hobs.
- The pot may not be centered correctly on the hob zone or the bottom surface of the pot may not be wide enough for the selected hob zone. >>> Center the hob zone by selecting a pot that is wide enough for the hob zone.

- The pot or the hob zone may be very hot.
>>> Wait for them to cool down.

The selected hob zone suddenly turns off while it is working.

- The cooking time of the selected zone may have expired. >>> You can set a new cooking time or finish cooking.
- There is overheat protection. >>> Wait for your hob to cool down.
- An object may be covering the touch control panel. >>> Remove the object from the panel.

Even though the hob zone is turned on, the pot does not heat up.

- The pot may not be compatible with the induction hob. >>> Check if your pot is suitable for the induction hob.
- The pot may not be centered correctly on the hob zone or the bottom surface of the pot may not be wide enough for the selected hob zone. >>> Center the hob zone by choosing a pot that is wide enough for the hob zone.

The cooling fan continues to run even though the hob is turned off.

- This is not an error. The cooling fan continues to operate until the electronic equipment inside the hob cools to the appropriate temperature.

There is a noise coming from the hob while cooking

- There may be some noises coming from the hob during cooking. These noises depend on the composition of the cookware. These noises are normal, not a malfunction and are part of induction technology.

Possible sounds and causes:

- **Fan noise:** The hob has a fan that automatically operates according to the temperature of the product. The fan has different operating levels and operates at different levels according to the temperature. After the hob is turned off, if the temperature is high according to the product temperature, the fan may continue to operate for a while.
- **Low hum like transformer operation:** This is the nature of induction technology. Since the heat is transferred directly to the bottom of the cookware, this kind of hum may occur depending on the material of the cookware. Therefore, different sounds may be heard with different cookware.
- **Crackling sound:** This is due to the material and structure of the bottom of the cookware. If the cookware is made of different materials and layers, crackling noise may occur.
- **Whistling sound:** A whistling sound may be heard when cooking on two hob zones on the same side of the hob at different cooking levels.

Error codes/reasons and possible solutions

Error codes	Error reasons	Possible solutions
E 22 E 26	Induction hob is overheated.	Turn the induction hob off and wait until it is cooled down. The error shall be resolved when temperature of the hob comes down below the limits.
E 27	A pot suitable for induction heating is not used.	The error shall be resolved when a pot suitable for induction heating is used.
E 42	Incorrect electrical wiring connection has been made.	It should be checked whether the electrical cable connection is made correctly according to the values given in the technical table and the correct connection should be made. When the correct connection is made, the error will disappear.
E 46	One or more keys are kept pressed for more than 10 seconds. An object is left on the control panel or the control is exposed to vapour.	The problem shall be resolved when you remove your hand from the hob. The problem shall be resolved when the control panel is cleaned.
E 47	A pot suitable for induction heating is not used.	The error shall be resolved when a pot suitable for induction heating is used.
E 1 – E 15	Communication error on induction hob.	Turn the induction hob off and operate again after 30 seconds. Contact the authorized dealership if the issue is resumed.
E 16 – E 21	Temperature sensor error on induction hob.	Turn the induction hob off and operate again after 30 seconds. Contact the authorized dealership if the issue is resumed.
E 23 E 24	Software error on induction hob.	Turn the induction hob off and operate again after 30 seconds. Contact the authorized dealership if the issue is resumed.
E 25	Fan operation error on induction hob.	Turn the induction hob off and operate again after 30 seconds. Contact the authorized dealership if the issue is resumed.
E 31 – E 45	Electronic board hardware error on induction hob.	Turn the induction hob off and operate again after 30 seconds. Contact the authorized dealership if the issue is resumed.
E 48 E 49 E 51	Sensor error on induction hob.	Sensor equipment shall be rendered compatible for the operating conditions. Contact the authorized dealership if the issue is resumed.
E 52 – E 57	High temperature error on induction hob.	Turn the induction hob off and wait until it is cooled down. The error shall be resolved when temperature of the sensor comes down below the limits. Contact the authorized dealership if the issue is resumed.

Additional Information for User Manual:	Technical information on the operating Low Power Modes pursuant to EU Regulation 2023/826	
Mode	POWER CONSUMPTION(WATT)	PERIOD(MINUTES)*
Off	0,5	-
Standby	-	-
Standby Mode with information or status display	-	-
Networked Standby	-	-

*:The period after which the equipment reaches automatically standby mode, off mode or networked standby in minutes and rounded to the nearest minute.

