

Hand Blender

User Manual



HBA7606W

EN

01M-8815113200-3918-01

beko

Please read this user manual first!

Dear Customer,

Thank you for preferring a Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

Meanings of the symbols

Following symbols are used in the various section of this manual:



Important information and useful hints about usage.



WARNING: Warnings for dangerous situations concerning the safety of life and property.



Suitable for contact with food.



Do not immerse the appliance in water.



Protection class for electric shock.



This product has been produced in environmentally-friendly, state-of-the-art facilities.

This appliance conforms to the WEEE regulation.



It does not contain PCB.

CONTENTS

1 Important safety and environmental instructions 4

- 1.1 General safety4
- 1.2 Compliance with the WEEE Directive and
Disposing of the Waste Product:7
- 1.3 Compliance with RoHS Directive8
- 1.4 Package information8
- 1.5 Things to do for energy saving8
- 1.6 Plug Wiring9

2 Your Hand Blender 10

- 2.1 Overview10
- 2.2 Technical data10

3 Operation 11

- 3.1 Intended use11
- 3.2 Initial use11
- 3.3 Blending and chopping with the
blending shaft11

4 Cleaning and care 13

- 4.1 Cleaning13
- 4.2 Storage13
- 4.3 Handling and transportation13

1 Important safety and environmental instructions

This section contains safety instructions that will help protect from risk of personal injury or property damage.

Failure to follow these instructions invalidates the granted warranty.

1.1 General safety

- This appliance complies with the international safety standards.
- This appliance may be used by children and the people whose physical, perceptive or mental skills are impaired or who are inexperienced or not knowledgeable about the appliance as long as they are supervised or informed and made understood the safe use of the appliance and the encountered dangers. Children should not play with the appliance.
- This appliance shall not be used by children.
- Keep the appliance and its cord out of the reach of children.

1

Important safety and environmental instructions

- Do not use it if the power cable, blades or the appliance itself is damaged. Contact an authorised service.
- Only use the original parts or parts recommended by the manufacturer.
- Do not attempt to dismantle the appliance.
- Your mains power supply should comply with the information supplied on the rating plate of the appliance.
- Do not use the appliance with an extension cord.
- Do not pull the power cable when unplugging the appliance.
- Wait for moving accessories to stop and unplug the appliance when left attended, while installing/removing accessories or before cleaning.
- Do not touch the plug of the appliance with damp or wet hands.
- Do not use the device for hot food.

1

Important safety and environmental instructions

- To prevent overheating, do not use the appliance continuously for more than 10 seconds. Leave to cool for 1 minute in between each 10 seconds of operation.
- Use the appliance only with the supplied rubber base and glass container.
- Do not operate the appliance without the ingredients in the bowl.
- Remove bones and stones from food to prevent the blades and the appliance from getting damaged.
- This appliance is not suitable for dry or hard foods as this will quickly cause the blades to become dull.
- Follow all warnings to prevent injuries due to incorrect use.
- When emptying the container, during cleaning and grabbing chopping blades with bare hands serious injuries could result due to incorrect use. Use the plastic section trying to hold the chopping blade.

1

Important safety and environmental instructions

- After cleaning, dry the appliance and all parts before connecting it to mains supply and before attaching the parts.
- Do not immerse the appliance, power cable, or power plug in water or any other liquids.
- Do not operate or place any part of this appliance or its parts on or near hot surfaces.
- If you keep the packaging materials, store them out of the reach of children.

1.2 Compliance with the WEEE Directive and Disposing of the Waste Product:

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).



This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

1

Important safety and environmental instructions

1.3 Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

1.4 Package information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

1.5 Things to do for energy saving

Follow the times recommended in the manual during use. Unplug the appliance after use.

1

Important safety and environmental instructions

1.6 Plug Wiring


The moulded plug on this appliance incorporates a 13 A fuse. Should the fuse need to be replaced an ASTA approved BS1362 fuse of the same rating must be used. Do not forget to refit the fuse cover. In the event of losing the fuse cover, the plug must not to be used until a replacement fuse cover has been fitted. Colour of the replacement fuse cover must be the same colour as that visible on the pin face of the plug. Fuse covers are available from any good electrical store.

• Fiting a different plug

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals on your plug, proceed as follows:

- Brown cable = L (Live)
- Blue cable = N (Neutral)
- Green/yellow cable must be connected to ground (E) \equiv line

With the alternative plugs a 13 A fuse must be fitted either in the plug or adaptor or in the main fuse box. If in doubt contact a qualified electrician.

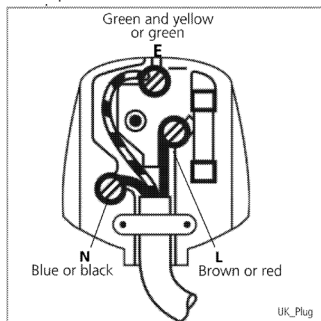

2 Your Hand Blender

2.1 Overview



1. Blending shaft
2. Speed adjustment button
3. Operating switch
4. Turbo button
5. Motor unit
6. Non-slip rubber base (cover)
7. Measuring beaker

2.2 Technical data

Voltage:

220-240 V~, 50-60 Hz

Power: 700 W

Technical and design modifications reserved.

The values which are declared in the markings affixed on your product or the other printed documents supplied with it represent the values which were obtained in the laboratories pursuant to the pertinent standards. These values may vary according to the usage of the appliance and ambient conditions.

3 Operation

3.1 Intended use

This appliance is intended only for household use; it is not suitable for professional use.

It is designed for chopping and whisking small amounts of solid food only.

3.2 Initial use

1. Clean the appliance parts before initial use (see 4.1).
2. Use the appliance upright on a balanced, flat, clean, dry and non-skid surface.
3. Do not use the appliance continuously for more than 10 seconds. Turn off the device when used for more than 10 seconds and wait for 1 min. before operating again.



When you do not exceed 10 seconds in intermittent uses, you can operate the appliance until the end of the process by waiting for a couple of seconds.

3.3 Blending and chopping with the blending shaft

1. Attach the blending shaft (1) to the end of the motor unit (5) by turning it anti-clockwise "6".
 - Fit it into its place, do not apply too much force.
2. Put processed ingredients (in small pieces) in measuring container or a container that you will use.
3. Immerse blending shaft (1) into the container.
4. Plug in the appliance.
5. Run the appliance by pressing operation button (3).



Turn speed adjustment button (2) to gradually increase speed.



Start mixing in low speed while mixing ingredients. Ingredients may be spattered when you start with high speed.

3 Operation



You can get better results if you make circular movements with the appliance during processing.

6. Release the operation switch when the operation is finished. Unplug the appliance and wait for it to stop completely.
7. Remove the blending shaft (1) from the motor unit (5) by turning it clockwise "⌚".



WARNING: Do not touch the blades with your bare hands.

4 Cleaning and care

4.1 Cleaning



WARNING: Never use gasoline, solvent, abrasive cleaning agents, metal objects or hard brushes to clean the appliance.

1. Unplug the appliance before cleaning.
2. Make sure the appliance is at complete stop and remove blending shaft.
3. Wipe appliance motor unit (5) with a damp cloth.
4. Chopper blade can be washed using a sponge and dishwashing detergent.
5. Dry all parts of the appliance after cleaning.



WARNING: Do not wash the blending shaft in dishwasher.



WARNING: Never immerse inner part of blending shaft, the motor unit or power cable in water or in any other liquid.

4.2 Storage

- If you do not intend to use the appliance for a long time, store it carefully.
- Unplug the appliance before lifting it.
- Store the appliance in a cool and dry place.
- Keep the appliance and cable out of the reach of children.

4.3 Handling and transportation

- During handling and transportation, carry the appliance in its original packaging. The packaging of the appliance protects it against physical damages.
- Do not place heavy loads on the appliance or the packaging. The appliance may be damaged.
- Dropping the appliance may render it non-operational or cause permanent damage.

Product Guarantee

12 months breakdown and repair guarantee

Guarantor: **Beko plc, 1 Greenhill Crescent, Watford, Hertfordshire. WD18 8UF**

The guarantee does not in any way diminish your statutory or legal rights.

Your **appliance** has the benefit of our manufacturer's guarantee which covers the product for 12 months from the date of original purchase.

This gives you reassurance that if within that time, your **appliance** is proven to be defective because of either workmanship or materials, we will at our discretion either repair or replace your **appliance**.

The **appliance** must be correctly installed, located and operated in accordance with the instructions contained in the user manual. The guarantor disclaims any liability for accidental or consequential damage.

The Guarantee is subject to the following conditions:

- Documentary proof of the original purchase date is provided.
- The appliance has been installed and operated correctly and in accordance with our operating and maintenance instructions.
- The appliance is used only on the electricity supply on the rating plate.
- The appliance has only been used for normal domestic purposes.
- The appliance has not been altered, serviced, dismantled or otherwise interfered with by any person.
- The appliance is used in the United Kingdom or Republic of Ireland.
- Any parts removed during repair work or any product that has been replaced becomes our property.
- The guarantee is not transferrable if the product is resold.

The Guarantee does not cover:

- Transit, installation or delivery damage.
- Accidental damage.
- Misuse or abuse.
- Replacement of any consumable item or accessories. These include but are not limited to: plugs, cables, light bulbs, knobs, filters and flaps.
- Repairs or replacements required as a result of unauthorised repairs or inexpert installation that fails to meet the requirements contained in the user guide or instruction book.
- Repairs to products used in commercial or non-residential household premises.

How to obtain after sales service, help or general advice

Please keep your purchase receipt or other proof of purchase in a safe place as you will need to show us this document if your product requires attention within the guarantee period.

Please also record your product details below, which will allow you to access our services more quickly and help us identify your product. The model number is printed on the front of the user guide and the serial and model number is shown on your products rating plate.


Model number	Serial number	Purchased from	Date of purchase

Please call our UK based Customer Service department if you need help or advice from us:

United Kingdom and Northern Ireland: **0845 600 4911 / 0345 600 4911**

Republic of Ireland: **01 862 3411**

You can also contact us through our website: **www.beko.co.uk**



Arçelik A.Ş. Karaağaç Cad.
No:2-6 Sütlüce, 34445,
İstanbul, Türkiye

www.beko.co.uk