

# Table Blender

## User Manual



TBN7400W

**EN**

01M-8815093200-3918-01

**beko**

# Please read this user manual first!

Dear Customers,

Thank you for selecting an Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

## Meanings of the symbols

Following symbols are used in the various section of this manual:

	Important information and useful hints about usage.
	<b>WARNING:</b> Warnings for dangerous situations concerning the safety of life and property.
	Materials are intended to be in contact with food.
	Do not immerse the appliance, power cord or power plug in water or in other liquids.
	Protection class against electric shock.



This product has been produced in environmentally-friendly, state-of-the-art facilities.

Complies with the WEEE Directive.



It does not contain PCB.

## CONTENTS

---

**ENGLISH** **4-12**

---

# 1

## Important instructions for safety and environment

This section contains safety instructions that will help protect from risk of personal injury or property damage.

Failure to follow these instructions invalidates the granted warranty.

### 1.1 General safety

- This appliance complies with the international safety standards.
- This appliance can be used by people who have limited physical, sensory or mental capacity or who do not have knowledge and experience, provided that they are supervised or they understand the instructions with regard to safe use of the product and potential dangers.
- Do not use it if the power cable, blades or the appliance itself is damaged. Contact an authorised service.
- Only use the original parts or parts recommended by the manufacturer.
- Do not attempt to dismantle the appliance.
- Do not operate or place any part of this appliance or its parts on or near hot surfaces.
- Do not use the device for hot food.
- Your mains power supply should comply with the information supplied on the rating plate of the appliance.
- Do not use the appliance with an extension cord.
- Do not touch the plug of the appliance with damp or wet hands.
- Do not pull the power cable when unplugging the appliance.
- Unplug the appliance before cleaning, disassembly, accessory replacement and wait for it to stop completely.
- When emptying the container, during cleaning and grabbing chopping blades with bare hands serious injuries could result due to incorrect use. Use the plastic section trying to hold the chopping blade.
- Never touch blades while using the appliance. There is the possibility of injury due to incorrect usage.
- After cleaning, dry the appliance and all parts before connecting it to mains supply and before attaching the parts.

# 1

## Important instructions for safety and environment

- Do not immerse the appliance, power cable, or power plug in water or any other liquids.
- If you keep the packaging materials, store them out of the reach of children.
- Children shall not use the appliance. Keep the appliance out of the reach of children.

### 1.2 Compliance with the WEEE Directive and Disposing of the Waste Product:

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).



This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic

and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

### 1.3 Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

### 1.4 Package information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

### 1.5 Things to do for energy saving

Cut the solid food into small pieces before placing them in the appliance as stated in the user manual. Follow the other instructions and times specified in the manual. Select low speed levels if suitable for the food to be prepared. Switch off and unplug the appliance after using it.

### 1.6 Plug Wiring


The moulded plug on this appliance incorporates a 13 A fuse. Should the fuse need to be replaced an ASTA approved BS1362 fuse of the same rating must be used. Do not forget to refit the fuse cover. In the event of losing the fuse cover, the plug must not to be used until a replacement fuse cover has been fitted. Colour of the replacement fuse cover must be the same colour as that visible on the pin face of the plug Fuse covers are available from any good electrical store.

# 1

## Important instructions for safety and environment

### • Fiting a different plug

- As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals on your plug, proceed as follows:
- Brown cable = L (Live)
- Blue cable = N (Neutral)
- Green/yellow cable must be connected to ground (E)  $\equiv$  line
- With the alternative plugs a 13 A fuse must be fitted either in the plug or adaptore or in the main fuse box. If in doubt contact a qualified electrician.

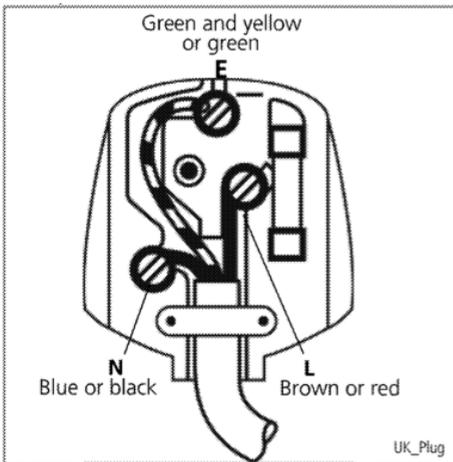

## 2 Table blender

### 2.1 Overview



1. Cap/Measuring cup
2. Lid opening
3. Lid
4. Jug
5. Jug handle
6. Blade unit
7. Sealing ring
8. Motor housing
9. Control dial
10. Non-slip feet
11. Cable storage coil

### 2.2 Technical data

**Power supply:** 220-240 V~, 50-60 Hz

**Power:** 400 W

Technical and design modifications reserved.

The values which are declared in the markings affixed on your appliance or the other printed documents supplied with it represent the values which were obtained in the laboratories pursuant to the pertinent standards. These values may vary according to the usage of the appliance and ambient conditions.

## 3 Operation



Your blender has been designed to process small amount of foods; it must not be used for any other purpose.



Do not use the it to chop extremely hard ingredients such as coconut, grains or bones. Remove the stalks of plants, shells of walnuts, and bones, sinews and gristles of meats.



Unplug the appliance when not in use.

### 3.1 Preparation



**WARNING:** Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

1. Remove all packaging and stickers materials and dispose of them according to the applicable legal regulations.
2. Take the entire unit of the motor housing (8) and place it on a level surface, e.g. on the kitchen counter.
3. Now set the jug (4) with the opening facing down on a level surface.
4. Rotate the blade unit (6) clockwise and raise it from the edges to remove it.



**WARNING:** Do not remove the blade unit by lifting it from the blades.



**WARNING:** The blade unit is very sharp! Handle the blade unit with utmost care, especially during cleaning, in order to avoid injuries.

5. Clean all parts, with the exception of the motor housing as described in "Cleaning and Care".

6. Then re-assemble the jug blender in the reverse order.

7. Put the jug D on the motor housing (8).



Make sure that the notches on the bottom of the jug fit those in the motor housing.

8. Cut the food into small pieces before using the appliance.

### 3.2 Blending

1. Place the device on an even and dry surface. The non-slip feet (10) ensure the stability of the appliance.
2. Make sure that the power cord is disconnected from the power supply and the control dial I is on "0" before putting food into the jug.
3. To remove the reservoir (4) from the motor unit (8), rotate it anti-clockwise and lift it. Put the reservoir on a flat surface.
4. Rotate the measuring beaker (1) anti-clockwise and lift to remove. Rotate the lid anticlockwise and lift to open.
5. Now put the ingredients to be blended in the jug (4). The ingredients should only be about 2-5 cm long.



Add water to ensure the jug blender functions smoothly.



Mix 3 units of hard food and 2 units of water in order to have a smooth jug blender experience (i.e: 60 gr hard food 40 ml water).



**WARNING:** Do not put or blend hot food or liquids in the jug. If you process soup, make sure that the liquid temperature does not exceed 40°C.

### 3 Operation



**WARNING:** To process crushed ice, we suggest you to start with three quarters of ice in the jug and add 15 ml of cold potable water.



**WARNING:** Don't try to crush ice without adding water to the jug.



**WARNING:** Never let the jug blender operate while empty (without food).



**WARNING:** Never let the jug blender operate without the jug on the motor housing.

6. Close the lid (3). Make sure that the cap/measuring cup (1) is inside the lid opening and is secured.
7. Place the jug (4) upright onto the motor housing (8).



**WARNING:** Never move or turn the jug after it is properly seated in the place.

8. Connect the power plug to a suitable power outlet.
9. The cutting speed can be variably adjusted with the control dial (9).



To operate the blender at the low speed, turn the control dial (9) to "1".



If you want to blend with a higher speed, turn the control dial (9) to the desired speed level (2-3).



For short pulses of blending with a high speed, turn the control dial (9) to "P". When you release the control dial (9), the blender will stop and return to "0" automatically.



If ingredients are to be added during the blending process, then add them through the opening in the lid (2). To do this, take out the cap/measuring cup (1).

10. After the desired consistency of the blended food has been reached, turn the control dial (9) to 0 to switch off the blender



**WARNING:** Never run the blender for longer than 1 minute, otherwise it would overheat.



**WARNING:** After running the appliance for 1 minute, let it cool down before using it again.



**WARNING:** Be sure the motor is switched off and has completely stopped before removing the jug (4) from the motor housing (8).



**WARNING:** Do not place any utensil (scraper, fork, etc.) in the jug while blender is operating.

11. Pull the power plug out of the power outlet.
12. To remove the reservoir (4) from the motor unit (8), rotate it anti-clockwise and lift it, and then remove the measuring beaker (1).
13. Take off the lid and pour the mixture into glasses or other containers.

## 4 Information

### 4.1 Tips for blending

- To add ice cubes to mixtures while the blender is operating, add one cube at a time through the cap (1). Wait a few seconds before adding the next ice cube so that the blender can properly blend the ice.
- To add food while the blender is operating, remove the cap (1) and drop the ingredients through the opening. Be sure to cut the food into about 2-5 cm pieces to fit through the opening. Replace the cap (1) when you have finished adding ingredients.
- When blending solid food, such as raw vegetables, cooked or uncooked meat and fruits always cut them into no larger than 2-5 cm pieces before placing them into the jug. Blend no more than 2 cups of these food at a time. This will speed the blending process and reduce wear on the blending blades.
- Always place liquid ingredients in the jug first, unless a recipe specifically states otherwise.
- To blend beverages, place all ingredients in the jug at the same time.
- Avoid overblending. Usually, you will need to blend for a few seconds.
- Overblending may cause food to become mushy.

### 4.2 Cleaning and care



**WARNING:** Never use petrol solvents, abrasive cleaners, metal objects or hard brushes to clean the appliance.



**WARNING:** The blades of the cutter unit are very sharp! Handle the blades with utmost care in order to avoid injuries.



**WARNING:** Never clean the appliance with your bare hands.



**WARNING:** Clean the jug blender after each use. Do not let any food remnants harden on and inside the jug blender. This will make it more difficult to clean it later.



**WARNING:** Do not use boiling water. The blade assembly bearings have been designed with a lifetime lubricant; exposure to boiling water may damage these bearings and shorten the life of the blender.

1. Turn the appliance off and disconnect it from wall socket.
2. Allow the appliance to cool down.
3. Remove the jug D from the motor housing (8). Rinse with water to remove any large food particles that may have accumulated in the jug.



You can use the measuring cup (1) to remove the blender blade.

4. Turn the glass container over and place it on a level, non-slip surface. Attach the measuring cup (1) by placing it over the cutting blade unit (6). Remove the cutting blade unit (6) by turning it with the measuring cup in the direction of the "open lock symbol" (counterclockwise). Glass container, lid and measuring cup can now be washed in the dishwasher. Carefully rinse the cutting blade unit under running water.
5. To place the blade unit (6) back to the glass container (4), turn the blade unit (6) to the locking "⊗" direction (clockwise) using the measuring cup (1).
6. Replace the jug (4) on the motor housing (8).
7. Place 1 to 1 ½ cups warm water with some drops of mild cleanser into the jug (4) and switch to speed "4" for a few seconds. Remove the jug from the motor housing and rinse with water. Repeat as necessary.

## 4 Information



Do not immerse the motorized base or blade unit in liquid, or place them in the dishwasher. Only the lid and the jug may be immersed and placed in the dishwasher.

8. Use a damp soft cloth and some mild cleanser to clean the exterior of the appliance.
9. Wipe the blender base, cutter unit (6) and lid with a lint free cloth before the next usage.

### 4.3 Storage

If you do not plan to use the appliance for a long period of time, please store it carefully. Make sure the appliance is unplugged and completely dry.

Store the appliance in a cool, dry place. Make sure the appliance is kept out of the reach of children.

### 4.4 Handling and transportation

- During handling and transportation, carry the appliance in its original packaging. The packaging of the appliance protects it against physical damages.
- Do not place heavy loads on the appliance or the packaging. The appliance may be damaged.
- Dropping the appliance will render it non-operational or cause permanent damage.

## Product Guarantee

### **12 months breakdown and repair guarantee**

Guarantor: **Beko plc, 1 Greenhill Crescent, Watford, Hertfordshire. WD18 8UF**

The guarantee does not in any way diminish your statutory or legal rights.

Your **appliance** has the benefit of our manufacturer's guarantee which covers the product for 12 months from the date of original purchase.

This gives you reassurance that if within that time, your **appliance** is proven to be defective because of either workmanship or materials, we will at our discretion either repair or replace your **appliance**.

The **appliance** must be correctly installed, located and operated in accordance with the instructions contained in the user manual. The guarantor disclaims any liability for accidental or consequential damage.

#### The Guarantee is subject to the following conditions:

- Documentary proof of the original purchase date is provided.
- The appliance has been installed and operated correctly and in accordance with our operating and maintenance instructions.
- The appliance is used only on the electricity supply on the rating plate.
- The appliance has only been used for normal domestic purposes.
- The appliance has not been altered, serviced, dismantled or otherwise interfered with by any person.
- The appliance is used in the United Kingdom or Republic of Ireland.
- Any parts removed during repair work or any product that has been replaced becomes our property.
- The guarantee is not transferrable if the product is resold.

#### The Guarantee does not cover:

- Transit, installation or delivery damage.
- Accidental damage.
- Misuse or abuse.
- Replacement of any consumable item or accessories. These include but are not limited to: plugs, cables, light bulbs, knobs, filters and flaps.
- Repairs or replacements required as a result of unauthorised repairs or inexperienced installation that fails to meet the requirements contained in the user guide or instruction book.
- Repairs to products used in commercial or non-residential household premises.

### **How to obtain after sales service, help or general advice**

**Please keep your purchase receipt or other proof of purchase in a safe place as you will need to show us this document if your product requires attention within the guarantee period.**

Please also record your product details below, which will allow you to access our services more quickly and help us identify your product. The model number is printed on the front of the user guide and the serial and model number is shown on your products rating plate.

<b>Model number</b>	<b>Serial number</b>	<b>Purchased from</b>	<b>Date of purchase</b>

Please call our UK based Customer Service department if you need help or advice from us:

United Kingdom and Northern Ireland: **0333 207 9710**  
Republic of Ireland: **01 862 3411**  
You can also contact us through our website: **www.beko.co.uk**









Arçelik A.Ş.  
Karaağaç Cad. No: 2-6, Söğütözü, 34445  
İstanbul, Türkiye

[www.beko.co.uk](http://www.beko.co.uk)